

- Manuals.plus /
- › ECONTROLLY /
- › ECONTROLLY RM-D657 Replacement Remote Control User Manual

ECONTROLLY RM-D657

ECONTROLLY RM-D657 Replacement Remote Control User Manual

Model: RM-D657

- Introduction
- Setup
- Operating Instructions
- Maintenance
- Troubleshooting
- Specifications

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY RM-D657 replacement remote control. This remote is designed to be compatible with various LG TV models, including 37LC5DC, 37LG3500, MKJ32022830, and MKJ32022833. It offers a direct replacement solution without requiring any programming.



Image 1.1: Front view of the ECONTROLLY RM-D657 replacement remote control, showing all buttons and its ergonomic design.

2. SETUP

The ECONTROLLY RM-D657 remote control is designed for immediate use upon battery installation. No programming or pairing is required.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is now ready for use with your compatible LG TV.





Image 2.1: Rear view of the remote control with the battery compartment open, showing the slots for two AAA batteries.

3. OPERATING INSTRUCTIONS

This remote control functions identically to the original LG remote it replaces. Point the remote directly at your LG TV and press the desired buttons.

3.1 Basic Functions

- **POWER:** Turns the TV on or off.
- **INPUT/SOURCE:** Selects the input source (e.g., HDMI, AV).
- **VOL +/-:** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV sound.
- **CH/PR +/-:** Changes channels or programs.
- **Number Buttons (0-9):** Directly selects channels.
- **MENU:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **EXIT:** Exits the current menu or function.
- **Q.VIEW:** Quickly switches between the current and previous channel.
- **PIP/SWAP:** Picture-in-Picture functions (if supported by your TV).
- **TEXT:** Accesses Teletext (if supported by your TV).

Refer to your LG TV's original user manual for specific functions and advanced features that may be controlled by this remote.

4. MAINTENANCE

Proper care will ensure the longevity of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

5. TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

Problem	Solution
Remote is not responding.	• Ensure batteries are inserted correctly with the correct polarity (+/-). • Replace old batteries with new AAA alkaline batteries. • Check for any obstructions between the remote and the TV's infrared sensor. • Ensure you are within the effective range of the TV's IR sensor.
Some buttons are not working.	• Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris. • Ensure the batteries have sufficient power. Replace if necessary. • Verify that the function is supported by your specific LG TV model.
Remote works intermittently.	• Replace batteries with new ones. • Ensure there is no strong light source (like direct sunlight or bright fluorescent lights) interfering with the IR signal. • Maintain a clear line of sight to the TV's IR sensor.

6. SPECIFICATIONS

Feature	Detail
Model Number	RM-D657
Brand	ECONTROLLY
Compatibility	LG TV models including 37LC5DC, 37LG3500, MKJ32022830, MKJ32022833
Power Source	2 x AAA Alkaline Batteries (not included)
Dimensions (L x W x H)	7 x 2 x 0.65 inches (approximately)
Weight	2.3 ounces (without batteries)
Color	Black
Special Feature	Ergonomic design

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CLV7699R>

More documents and user manuals: <https://manuals.plus/>