

## EUHOMY DW001-5

# EUHOMY DW001-5 Countertop Dishwasher User Manual

MODEL: DW001-5

[Safety Information](#)   [Product Overview](#)   [Setup](#)   [Operation](#)   [Loading](#)  
[Dishes](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. Safety Information

Please read all instructions carefully before using the EUHOMY DW001-5 Countertop Dishwasher to ensure safe and efficient operation. Keep this manual for future reference.

- **Detergent Use:** This dishwasher is designed for dishwashing powder or tablets ONLY. Liquid detergent is NOT compatible.
- **Water Inlet:** The dishwasher includes a G3/4 inch water inlet hose. If your faucet size does not match, a separate adapter must be purchased.
- **BPA Plastics:** Do not wash BPA plastic products in this dishwasher.
- **Water Droplets:** It is normal to find water droplets inside the dishwasher upon receipt. This is due to factory waterproof testing to ensure quality and prevent leakage.
- **High Temperatures:** Be aware that the dishwasher operates at high temperatures, especially during the Baby Care/Heavy Duty cycle. Exercise caution when opening the door during or immediately after a cycle.
- **Leak Protection:** The dishwasher features leak protection. Ensure proper hose connections to prevent water damage.



*Image: Leak Protection feature ensures safe operation.*

## 2. Product Overview

The EUHOMY DW001-5 is a compact and portable countertop dishwasher designed for convenience and efficiency in smaller living spaces such as apartments, RVs, and dorms.

### Key Features:

- **Compact Design:** Measuring 16.85 x 16.73 x 18.03 inches, it fits easily on most countertops.
- **Generous Capacity:** Can accommodate over 30 dishes, including plates up to 10.25 inches in diameter.
- **Dual Water Supply:** Offers both a 5-liter built-in water tank for manual filling and an inlet hose for direct faucet connection.
- **6 Washing Programs:** Includes Normal, Fast, Glass, Baby Care/Heavy Duty, Fruit, and ECO modes to suit various cleaning needs.
- **Enhanced Drying Function:** Features 60 minutes of hot air drying followed by 73 hours of automatic ventilation to keep dishes dry and odor-free.
- **Dual Spray Arms:** Ensures thorough 360° rinsing for superior cleaning performance.
- **LED Display Control Panel:** Easy-to-use touch controls for program selection and monitoring.

### Included Components:

- Dishwasher (x1)
- Inlet Hose (x1)
- Drain Hose (x1)
- User Manual (x1)
- Storage Rack (x1)
- Cutlery Basket (x1)
- Fruit Basket (x1)
- Water Cup (x1)



*Image: The EUHOMY DW001-5 Countertop Dishwasher, showcasing its sleek design.*

## Compact Size But Massive Storage



x4

Dinner Plates



x4

Small Plates



x3

Cups



x4

Serving Bowls



x2

Glass



x8

Forks



x4

Knives



x6

Spoons



Image: Compact dimensions and internal storage capacity for various dishware.

### 3. Setup

#### 3.1 Placement

Place the dishwasher on a stable, level surface. Ensure there is adequate space around the unit for ventilation and hose connections.

#### 3.2 Water Supply Options

The dishwasher offers two convenient ways to supply water:

- **Tank Mode (Manual Fill):** Open the water inlet on the top of the dishwasher and pour water directly into the 5-liter built-in reservoir using the provided water cup. The automatic water level indicator will signal when the tank is full.
- **Faucet Mode (Direct Connection):** Connect the provided inlet hose to a G3/4 inch faucet connection. Ensure the connection is secure to prevent leaks.

# Two Choices For Adding Water

## 5L Built-in Water Tank

Supply water through a water *tank*



Supply water through a water *pipe*



Image: Two methods for water supply: manual tank filling or direct faucet connection.

Supply water through a water *tank*



Image: Manual water filling into the built-in tank.

## Supply water through a water pipe

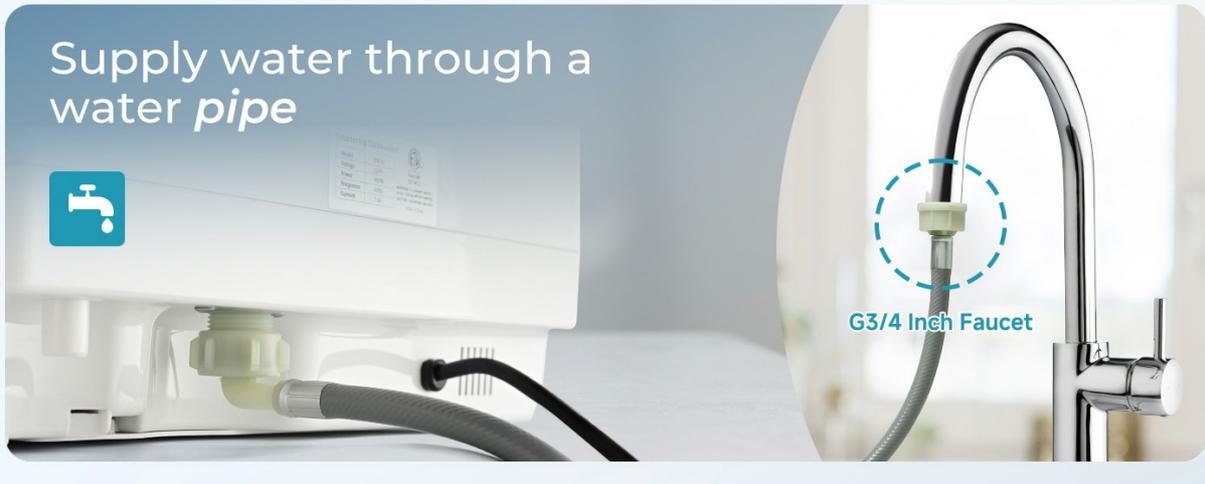


Image: Dishwasher connected to a faucet for automatic water intake.

### 3.3 Drainage

Connect the drain hose to the designated outlet on the dishwasher. Position the other end of the drain hose into a sink or a suitable bucket to collect wastewater. Ensure the hose is not kinked or blocked.

## 4. Operating Instructions

### 4.1 Control Panel

The dishwasher features an intuitive LED display and touch control panel for easy operation.



Image: LED Display Control Panel showing various wash programs and drying options.

### 4.2 Loading Detergent

Open the dishwasher door and locate the detergent dispenser. Add the recommended amount of dishwashing powder or tablet. Close the dispenser lid securely.

### 4.3 Selecting a Program

Press the 'Mode' button on the control panel to cycle through the available washing programs:

- **Normal:** Standard cycle for everyday dishes (69 min wash & 60 min drying).

- **Fast:** Quick wash for lightly soiled items (29 min wash & 60 min drying).
- **Glass:** Gentle cycle for delicate glassware (69 min wash & 60 min drying).
- **Baby Care/Heavy Duty (Strong):** High-temperature wash (167°F) for sanitizing baby bottles, greasy cookware, or pet accessories (89 min wash & 60 min drying).
- **Fruit:** Dedicated cycle for washing fruits and vegetables (19 min washing).
- **ECO:** Energy-efficient wash cycle (59 min wash & 60 min drying).

# Multi-Functions Dishwasher

Different Modes Meet Your Family's Needs



**Normal**

69 Min Washing  
& 60 Min Drying



**Quick**

29 Min Washing  
& 60 Min Drying



**Baby Care**

89 Min Washing  
& 60 Min Drying



**Fruit**

19 Min  
Washing



**Eco**

59 Min Washing  
& 60 Min Drying



**Dry**

60 Min  
Drying



*Image: Overview of the dishwasher's multi-function programs and drying times.*

# Strong Mode For Your *Child's Healthy*

**89** Min Washing & **60** Min Drying

Washing in 131°F+Rinsing in 131°F+Rinsing in 167°F



*Image: Baby Care/Heavy Duty mode for thorough sanitization of child's items.*

# Strong Mode For Your *Pets' Health*

89 Min Washing & 60 Min Drying

Washing in 131°F+Rinsing in 131°F+Rinsing in 167°F



*Image: Strong mode for cleaning pet accessories.*

## **4.4 Drying Function**

The drying function can be activated alongside any washing cycle (except Fruit mode) or used independently. It provides 60 minutes of hot air drying, followed by 73 hours of automatic ventilation to prevent odors and keep dishes dry.

## PTC Hot Air Drying System



60  Minutes  
Drying

&

73  Hours  
Circulating Fresh Air

*Image: PTC Hot Air Drying System with 60 minutes drying and 73 hours circulating fresh air.*

### 4.5 Start/Pause

Press the 'S/P' (Start/Pause) button to begin or temporarily stop a cycle. The dishwasher will automatically pause if the door is opened during operation and resume when closed.

### 4.6 Fruit Washing

To wash fruits, place them in the fruit basket and select the 'Fruit' program. This mode is for washing only and does not include a drying cycle.

Your browser does not support the video tag.

*Video: Demonstrates the various features and programs of the EUHOMY Portable Dishwasher, including water filling and dish loading.*

## 5. Loading Dishes

Proper loading ensures optimal cleaning performance. The dishwasher is designed to clean over 30 pieces of dishware, including plates up to 10.25 inches.

- **Upper Shelf:** Ideal for cutlery such as spoons, knives, and forks.
- **Lower Basket:** Suitable for plates, bowls, mugs, and glasses.
- **Fruit Basket:** Use for washing fruits and vegetables.
- Ensure dishes are placed neatly and do not obstruct the rotation of the spray arms.



*Image: Sliding wheels on the dish rack for convenient pulling and loading.*



*Image: Dual 360° spray arms ensure comprehensive cleaning.*

## 6. Maintenance

### 6.1 Cleaning the Filter System

Regularly clean the filter screen to maintain optimal performance. Remove large food scraps from dishes before loading to prevent filter clogging.

### 6.2 General Cleaning

Wipe the interior and exterior of the dishwasher with a damp cloth. For a deeper clean, run a 'Strong' cycle with 100ml of white food-grade citric acid.

### 6.3 Detergent Reminder

Always use dishwashing powder or tablets. Liquid detergent is not suitable for this appliance.

### 6.4 Long-Term Storage

If the dishwasher will not be used for an extended period, ensure the water tank is completely drained.

## 7. Troubleshooting

If you encounter any issues with your dishwasher, please refer to the following common solutions:

- **Dishwasher Not Starting:** Ensure the power cord is securely plugged in and the power button is pressed. Check if there is sufficient water in the tank or if the faucet is properly connected and turned on.
- **Water Shortage Indication:** If the water shortage indicator appears, refill the water tank or ensure the faucet is supplying water.
- **Water Leakage:** Verify all hose connections are tight and secure. Check the drain hose for any kinks or blockages.
- **Dishes Not Clean:** Ensure dishes are loaded correctly and do not obstruct the spray arms. Use the appropriate amount of dishwashing powder or tablet. Clean the filter system.
- **Unpleasant Odors:** Regularly clean the dishwasher and utilize the extended ventilation feature of the drying mode.

For persistent issues, please contact EUHOMY customer support.

## 8. Specifications

Feature	Detail
Brand	EUHOMY
Model Name	DW001-5
Form Factor	Countertop
Product Dimensions	16.85 x 16.73 x 18.03 inches
Item Weight	28.6 Pounds
Capacity (Water Tank)	5 Liters
Voltage	120 Volts
Annual Energy Consumption	1000 Watts
Noise Level	40 Decibels

Number of Programs	6
Cycle Options	Fruit, Dry, Normal, Fast, ECO, Baby care/Heavy duty
Display Type	LED
Inner Material	Stainless Steel
Material Type	Acrylonitrile Butadiene Styrene (ABS), Polypropylene (PP)
Inlet Hose Length	4.92 Feet
Special Features	6 Programs, Baby Care/Strong Mode, 29 Minutes Quick Wash, Digital Display, LED Interior Light, Sound Reduction System

## 9. Warranty & Support

The EUHOMY DW001-5 Countertop Dishwasher comes with a **1-year warranty** for added peace of mind.

If you have any questions, require technical assistance, or need to claim warranty service, please contact EUHOMY customer support. Our team is always here to help.

Contact information can typically be found on the EUHOMY official website or through your purchase platform.