

Accutime BDT4152

Accutime Barbie Printed Strap LED Kids Watch User Manual

PRODUCT OVERVIEW

The Accutime Barbie LED Kids Watch features a digital time design with a vibrant red LED display, encased in a durable silver plastic casing. It comes with a fun printed strap and a traditional buckle fastening, making it comfortable and secure for children. This watch is packaged in official branded packaging and includes a one-year guarantee.

Key Features

- Barbie Printed Strap
- LED Design
- Digital Time Display



Front view of the Accutime Barbie LED Kids Watch, showcasing the digital time display and the colorful Barbie-themed strap.

SETUP

The Accutime Barbie LED Kids Watch comes with a pre-installed battery. To activate the watch, remove any plastic tab from the battery compartment if present. The watch features a digital LED display. To set the time, locate the button on the side of the watch casing. Press and hold this button to enter time setting mode. Short presses will advance the digits, and another long press will switch between hours and minutes.



Full view of the watch, illustrating the strap design and the location of the side button for setup and operation.

OPERATING INSTRUCTIONS

To view the time, simply press the button on the side of the watch. The LED display will illuminate, showing the current time in digital format. The display will automatically turn off after a few seconds to conserve battery life.



The watch worn on a child's wrist, demonstrating its size and fit during use.

MAINTENANCE

To clean the watch, gently wipe the casing and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials. The watch is not waterproof; avoid submersion in water. Store the watch in a dry place away from direct sunlight and extreme temperatures. Battery replacement should be performed by a qualified technician to ensure proper sealing and function.

TROUBLESHOOTING

Display Not Lighting Up

Ensure the battery is properly installed and not depleted. Press the side button firmly. If the issue persists, the battery may need replacement.

Incorrect Time Display

Follow the time setting instructions in the 'Setup' section to re-adjust the time.

Strap Discomfort

Ensure the strap is not too tight. Adjust the buckle for a comfortable fit. Clean the strap regularly to prevent skin irritation.

SPECIFICATIONS

Package Dimensions:

6.97 x 3.82 x 1.42 inches; 0.69 ounces

Item Model Number:

BDT4152

Department:

girls

Batteries:

1 Lithium Ion batteries required (included)

Date First Available:

September 25, 2023

Manufacturer:

Accutime Watch Corp.

ASIN:

B0CLVBWSRL

Clasp Type:

Buckle

Item Type Name:

Watch

WARRANTY AND SUPPORT

This Accutime Barbie LED Kids Watch comes with a one-year guarantee from the date of purchase. For warranty claims or technical support, please contact Accutime customer service. Keep your proof of purchase for warranty validation. For general inquiries, refer to the Accutime official website or contact their support channels.



The watch displayed in its original retail packaging, as it would appear when purchased.

© 2025 Accutime Watch Corp. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question