

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Flamaker](#) /

› [Flamaker Fireplace TV Stand with 26" Electric Fireplace for 65 Inch TV, Modern Farmhouse Entertainment Stand with Storage Cabinet, Media Entertainment Center Console for Living Room \(Rustic Oak\) Instruction Manual](#)

Flamaker TS23

Flamaker Fireplace TV Stand Instruction Manual

Model: TS23 | Brand: Flamaker

INTRODUCTION

Thank you for purchasing the Flamaker Fireplace TV Stand. This versatile unit combines a stylish entertainment console with a functional electric fireplace, designed to enhance your living space. It accommodates TVs up to 65 inches and provides ample storage. This manual provides essential information for safe assembly, operation, and maintenance of your new TV stand.

SAFETY INFORMATION

Please read all instructions carefully before assembly and operation to ensure safe use and prevent damage.

- Always connect the fireplace to a properly grounded 110-120V/15A outlet.
- Do not block the air vents of the electric fireplace. Ensure adequate clearance around the unit for proper ventilation.
- Keep flammable materials at least 3 feet (0.9 meters) away from the front of the fireplace.
- Do not immerse the electric fireplace in water or expose it to excessive moisture.
- Unplug the fireplace from the power outlet before cleaning or performing any maintenance.
- Ensure the TV stand is placed on a flat, stable surface to prevent tipping.
- Do not exceed the maximum weight capacity of 220 lbs for the tabletop and 20 lbs for adjustable shelves.

PACKAGE CONTENTS

Your Flamaker Fireplace TV Stand package typically includes the following components. Please verify all parts are present before beginning assembly.

- TV Stand wooden panels and hardware
- 26-inch Electric Fireplace insert

- Fireplace Remote Control
- Assembly Instructions Manual
- Assembly Tools (e.g., Allen wrench)

Note: The TV stand and fireplace are packed and shipped separately. You may receive them on different days. If one box arrives first, please be patient for the second or contact customer service if there is a significant delay.

SETUP AND ASSEMBLY

Assembly typically takes 1-2 hours. Detailed step-by-step instructions and all necessary tools are included in the separate assembly manual provided with the TV stand components. Follow these instructions carefully.

General Assembly Steps:

1. Unpack all components and verify against the parts list in the assembly manual.
2. Assemble the main frame of the TV stand according to the diagrams.
3. Install the adjustable shelves into the desired positions.
4. Carefully insert the electric fireplace into the designated opening in the TV stand.
5. Secure all connections and ensure the stand is stable.

Fits TVs Up To 65 Inches



Figure 1: Product Dimensions and TV Compatibility. The stand measures 57.8"W x 15.7"D x 28.7"H and supports TVs up to 65 inches.



Figure 2: Key Features including adjustable shelves for flexible storage, high-quality wood texture, and ample storage space.

OPERATING INSTRUCTIONS

Electric Fireplace Operation:

The electric fireplace can be controlled using the built-in display control panel on the unit or the included remote control.

- **Power On/Off:** Press the power button on the control panel or remote to turn the fireplace on or off.
- **Heater Function:** Activate the heater to provide warmth. The fireplace offers 750W/1400W power output and can heat up to 400 sq.ft.
- **Temperature Control:** Adjust the desired room temperature between 65°F and 100°F using the temperature buttons.
- **Dimmable Flame Effect:** Cycle through different flame brightness settings to create your preferred ambiance.

The 3D flame effect operates independently of the heater.

- **Timer Function:** Set a timer for automatic shut-off, ranging from 1 to 8 hours.

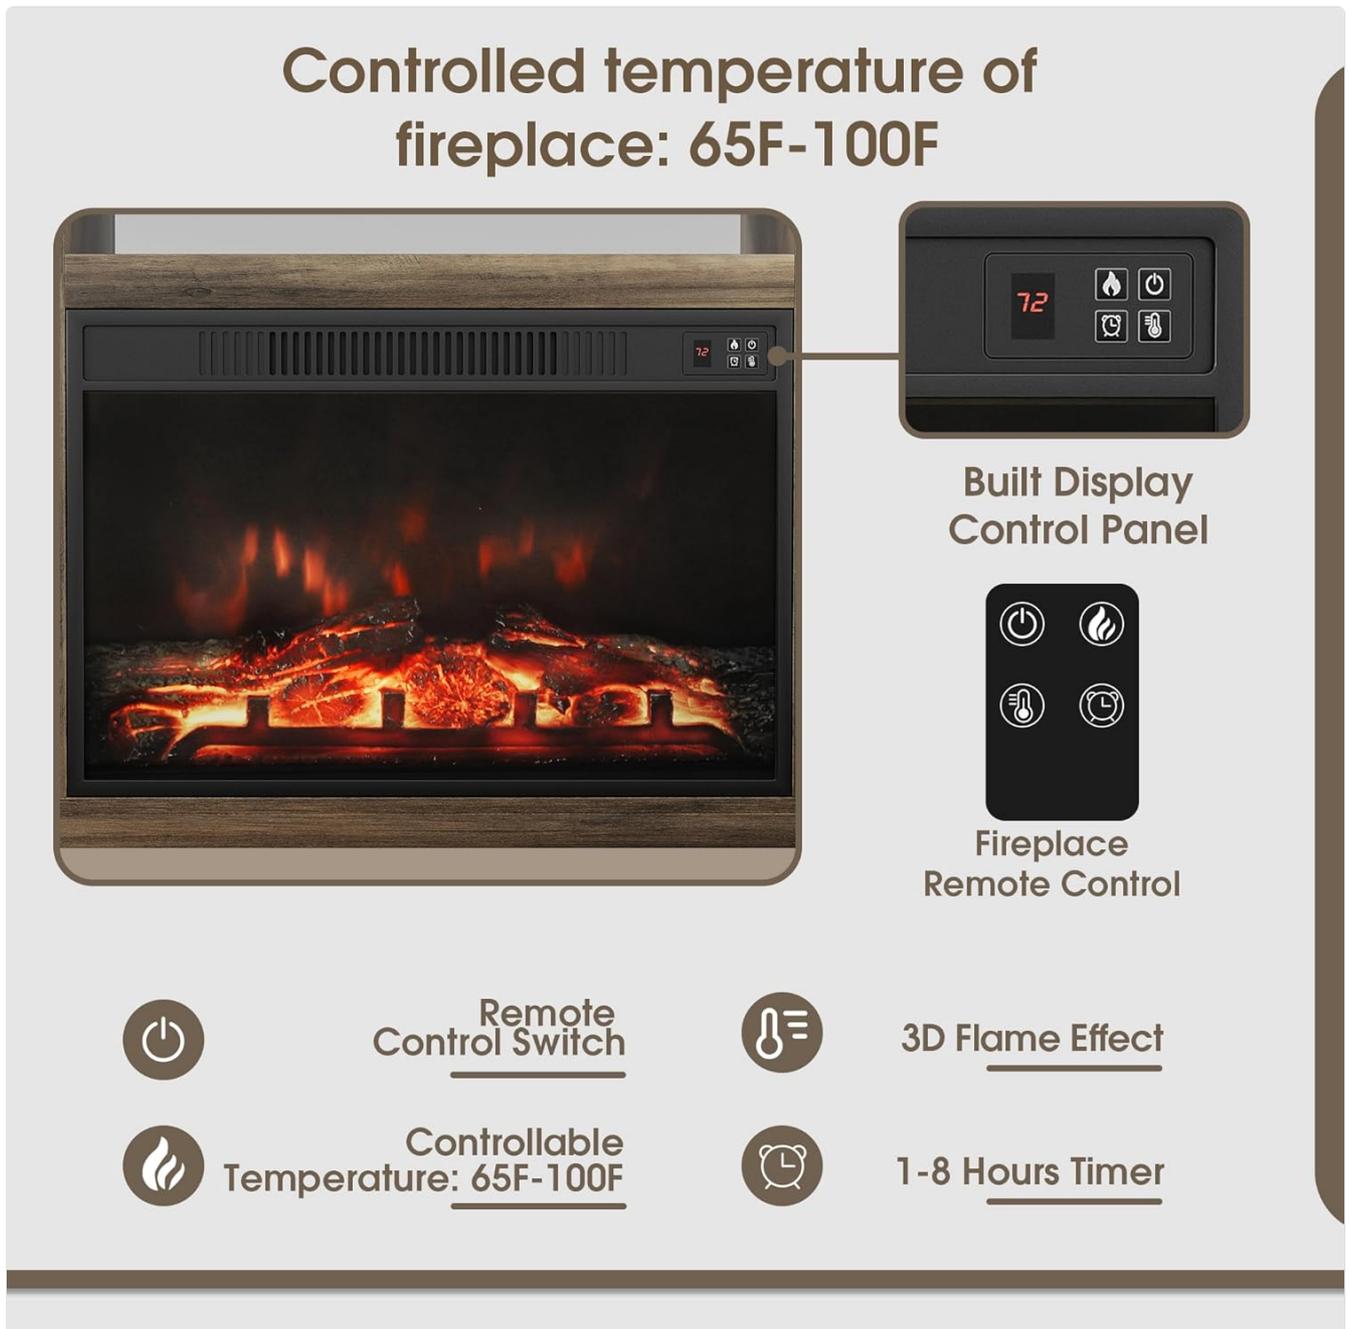


Figure 3: Fireplace Control Panel and Remote. Features include remote control switch, controllable temperature (65F-100F), 3D flame effect, and 1-8 hours timer.

TV Stand Usage:

Place your television securely on the top surface of the stand. Utilize the open storage cabinet and four flexible, adjustable shelves to organize your DVD collection, electronic devices, audio equipment, and display decorative items.



Figure 4: Flamaker Fireplace TV Stand in a living room setting, showcasing its design and functionality with a television and media devices.

MAINTENANCE

Regular maintenance will help prolong the life and appearance of your TV stand and fireplace.

- **Cleaning the TV Stand:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the wood finish.
- **Cleaning the Fireplace:** Ensure the fireplace is unplugged and cool before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use water or cleaning sprays directly on the electrical components.
- **Dusting:** Regularly dust the unit to prevent buildup, especially around the fireplace vents.

TROUBLESHOOTING

If you encounter any issues with your Flamaker Fireplace TV Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace not turning on or heating.	Not plugged in, power switch off, circuit breaker tripped, internal malfunction.	Ensure unit is securely plugged into a working outlet. Check the main power switch on the fireplace. Reset the circuit breaker if necessary. If problem persists, contact customer support.
Remote control not working.	Dead batteries, remote out of range, obstruction.	Replace batteries in the remote control. Ensure you are within range and there are no obstructions between the remote and the fireplace sensor.
Missing parts or components.	Separate shipping of TV stand and fireplace, packaging error.	Confirm if both boxes (TV stand and fireplace) have arrived. Refer to the package contents list. Contact customer service with details of missing parts.
Unstable TV stand.	Improper assembly, uneven floor.	Review assembly instructions to ensure all connections are secure. Adjust leveling feet if available, or place shims under the stand on uneven floors.

SPECIFICATIONS

Feature	Detail
Brand	Flamaker
Model Name	Fireplace TV Stand (Model TS23)
Color	Rustic Oak
Material	Wood
Product Dimensions	15.7"D x 57.8"W x 28.7"H
Item Weight	84.5 Pounds
Tabletop Weight Capacity	220 lbs
Adjustable Shelf Weight Capacity	20 lbs
Maximum Compatible TV Size	65 Inches
Fireplace Power Output	750W/1400W
Input Voltage	110-120V/15A
Heating Coverage	400 sq.ft

Feature	Detail
Special Features	Dimmer, Timer, TV Stand Functionality
Installation Type	Built-In (Fireplace)

WARRANTY AND SUPPORT

For any questions regarding assembly, operation, or if you require replacement parts, please contact Flamaker customer support. Refer to your purchase documentation for specific warranty details and contact information. Keep your proof of purchase for warranty claims.