



[Manuals.plus](#) /

> [MoKo](#) /

> MoKo 35-Key Bluetooth Numeric Keypad User Manual

MoKo 840401404430

MoKo 35-Key Bluetooth Numeric Keypad User Manual

Model: 840401404430

INTRODUCTION

This manual provides comprehensive instructions for the MoKo 35-Key Bluetooth Numeric Keypad. Please read this manual thoroughly before using the device to ensure proper operation and to maximize its lifespan. This numeric keypad is designed for enhanced productivity and compatibility across various operating systems.



Image: The MoKo 35-Key Bluetooth Numeric Keypad, showcasing its compact design and the included 2.4G USB receiver.

PACKAGE CONTENTS

- 1 x MoKo 35-Key Wireless Numeric Keypad
- 1 x 2.4G USB Receiver
- 1 x Type-C Charging Cable
- 1 x User Manual

SETUP

Charging the Keypad

Before first use, fully charge the keypad. Connect the provided Type-C charging cable to the keypad's USB-C port and the other end to a USB power source (e.g., computer USB port, wall adapter).

Battery Capacity: 300mAh

Full Charge Time: Approximately 2 hours

Working Time: Up to 120 hours

Standby Time: Up to 180 hours

Powerful Shortcut Keys Boost Your Productivity



Image: The keypad connected via its USB Type-C port for charging, highlighting its 300mAh battery and charging specifications.

Connection Modes

The MoKo numeric keypad supports two connection modes: 2.4G Wireless and Bluetooth 5.0. It can connect to up to three devices simultaneously (one via 2.4G, two via Bluetooth) and switch between them.

2.4G Wireless Connection

1. Insert the 2.4G USB receiver into an available USB port on your computer or device.

2. Turn on the keypad using the ON/OFF switch located on the side.
3. The keypad should automatically connect to the receiver. If not, press the **2.4G** key on the keypad to activate 2.4G mode.



Image: The keypad demonstrating its 2.4 GHz wireless connection with a laptop, showing the USB receiver plugged into the laptop's port.

Bluetooth 5.0 Connection (BT1 / BT2)

1. Turn on the keypad using the ON/OFF switch.

2. Press and hold either the **BT1** or **BT2** key for 3-5 seconds until the indicator light flashes, indicating pairing mode.
3. On your device (e.g., MacBook, iPad, PC), go to Bluetooth settings.
4. Search for "MoKo Numeric Keypad" or a similar name in the list of available devices and select it to pair.
5. Once paired, the indicator light will stop flashing.
6. To connect a second Bluetooth device, repeat steps 2-5 using the other Bluetooth key **BT2** if you used **BT1** first, or vice versa).



USB Type C Port

Charging cable is included

 300mAh Battery

 2 Hrs Full Charge

 120 Hrs Working Time

USB-C Rechargeable

Wireless Number Pad

Image: The keypad illustrating its Bluetooth 5.0 connection capability with both an iPad and a laptop, showing seamless multi-device

pairing.

OPERATING INSTRUCTIONS

Switching Between Devices

To switch between connected devices, simply press the corresponding connection key **2.4G**, **BT1**, or **BT2**. The keypad will connect to the selected device.

Key Functions

The keypad features 35 keys, including standard numeric keys, function keys, and navigation keys. Some keys have dual functions, accessible via the **fn** key.

Superior Numeric Keypad



Impact-resistant ABS

Anti-slip Silicone Pad

Durable Aluminum Alloy

Image: A close-up of the keypad highlighting various shortcut keys and their functions, designed to boost productivity.

Key Function Overview

Key	Primary Function	Secondary Function (with fn)
ESC	Escape	N/A
Tab	Tab	N/A

Key	Primary Function	Secondary Function (with fn)
PrtScn	Print Screen	N/A
Num	Numeric Lock	N/A
Home	Home	N/A
Page Up	Page Up	N/A
Page Down	Page Down	N/A
End	End	N/A
Delete	Delete	N/A
00 / Clear	Double Zero / Clear	N/A
\$ / Win	Dollar Sign	Windows Key (with fn)
% / MAC	Percentage Sign	Mac Key (with fn)
BS / delete	Backspace	Delete (with fn)
Enter / return	Enter	Return (with fn)

Compatibility

The keypad is widely compatible with various operating systems and devices:

- **Operating Systems:** Mac OS, iOS, Windows, Linux, Android
- **Compatible Devices:** iMac, MacBook Pro, MacBook Air, MacBook, iPad Pro, iPad Mini, iPhone, Galaxy Tab, Surface Pro, Pixel Tablet 2023, and other Bluetooth-enabled devices or devices with USB ports.

Pocket Size Design

0.43in / 1.13 cm



5.75in / 14.62cm



Image: The keypad displayed alongside various devices (MacBook, iPad, iPhone) to illustrate its broad compatibility across different operating systems.

MAINTENANCE

- Keep the keypad clean by wiping it with a soft, dry cloth.
- Avoid exposing the keypad to extreme temperatures, direct sunlight, or liquids.
- Store the keypad in a cool, dry place when not in use.

- Do not attempt to disassemble or repair the keypad yourself. Contact customer support for assistance.

TROUBLESHOOTING

Keypad Not Responding

- Ensure the keypad is turned ON.
- Check the battery level and charge the keypad if necessary.
- Verify that the correct connection mode (2.4G, BT1, or BT2) is selected on the keypad.
- For 2.4G connection, ensure the USB receiver is securely plugged into the device. Try a different USB port.
- For Bluetooth connection, ensure Bluetooth is enabled on your device and the keypad is paired. Try unpairing and re-pairing the keypad.
- Move the keypad closer to your device to ensure it's within the 32.8 feet (10 meters) working range.

Lag or Disconnection

- Ensure there are no strong electromagnetic interferences nearby (e.g., Wi-Fi routers, other wireless devices).
- Charge the keypad fully. Low battery can affect performance.
- If using 2.4G, try plugging the receiver into a different USB port or using a USB extension cable to position it closer to the keypad.
- If using Bluetooth, try restarting your device's Bluetooth function.

SPECIFICATIONS

Feature	Detail
Brand	MoKo
Model Number	840401404430
Color	Grey
Number of Keys	35
Material	Aluminum, ABS Plastic
Connectivity	2.4G Wireless, Bluetooth 5.0 (Dual Mode, 3 Channels)
Working Range	Up to 32.8 feet (10 meters)
Battery Type	Built-in 300mAh Lithium-ion Polymer
Charging Port	USB Type-C
Dimensions (L x W x H)	14.62 x 11.32 x 1.13 cm (5.75 x 4.45 x 0.43 inches)
Weight	Approx. 0.36 lbs
Special Features	Ergonomic Tilt, Scissor-structure Keys, Auto-sleep Function, Backlit
Recommended Uses	Financial Accounting, Data Entry, Education, Programming



Image: Detailed dimensions of the MoKo Numeric Keypad, illustrating its compact and portable "pocket size" design.



Universal Compatibility



Image: A view of the keypad's construction, highlighting its durable aluminum alloy top, impact-resistant ABS bottom, and anti-slip silicone pads for stability.

WARRANTY AND SUPPORT

MoKo strives for excellence in products and customer service. If you encounter any issues with your numeric keypad, please do not hesitate to contact MoKo customer support. They aim to respond within 24 hours and provide a satisfactory solution.

Please refer to the original packaging or product listing for specific warranty terms and contact information.

© 2024 MoKo. All rights reserved.