

[manuals.plus](#) /› [PowerLocus](#) /› [PowerLocus Kids Wireless Headphones Bobo \(Model P19\) Instruction Manual](#)

PowerLocus P19

PowerLocus Kids Wireless Headphones Bobo (Model P19) Instruction Manual

Model: P19 | Brand: PowerLocus

1. INTRODUCTION

Thank you for choosing PowerLocus Kids Wireless Headphones Bobo. These headphones are designed to provide a safe, comfortable, and enjoyable audio experience for children. Featuring multiple volume limiting modes, versatile connectivity, and a durable design, they are perfect for studying, travel, and everyday entertainment.

Please read this manual carefully before using your headphones to ensure proper operation and to maximize their lifespan.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- PowerLocus Bobo Bluetooth Headphones for Kids
- 3.5mm Audio Cable
- USB-C Charging Cable
- Y Sharing Plug for Shared Audio


OUR PACKAGE INCLUDES:




1X PowerLocus Bobo
Wireless Headphones



3,5 mm
Audio Cable

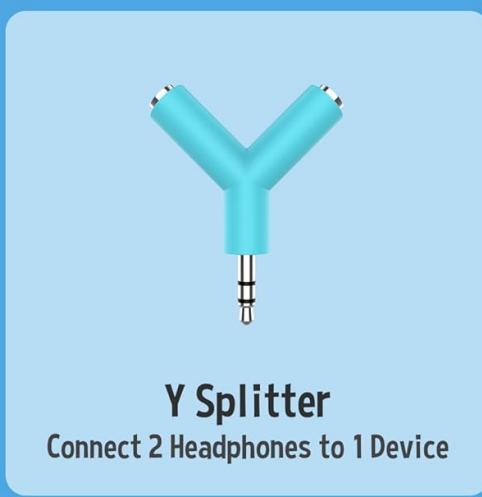

Y Splitter
Connect 2 Headphones to 1 Device

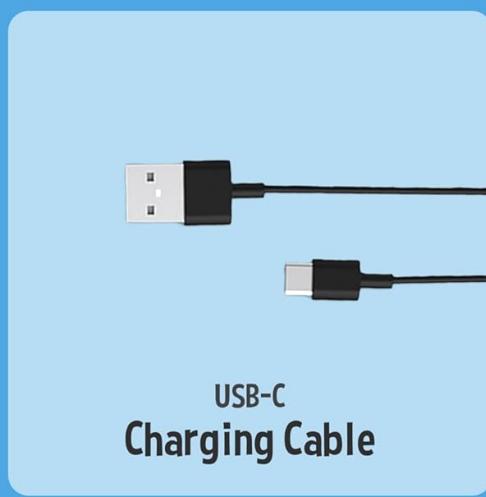

USB-C
Charging Cable

Image: Package contents of PowerLocus Bobo Kids Headphones, showing the headphones, 3.5mm audio cable, USB-C charging cable, and Y sharing plug.


3. PRODUCT OVERVIEW

3.1 Controls and Ports


The headphones feature intuitive controls for easy operation:

- **Multi-function Button:** Power ON/OFF, LED lights control, Play/Pause.
- **Volume Up / Next Track Button:** Increase volume, skip to next song.
- **Volume Down / Previous Track Button:** Decrease volume, go to previous song.
- **AUX Port:** For wired audio connection using the 3.5mm audio cable.
- **USB-C Charging Port:** For charging the headphones.
- **Built-in Microphone:** For hands-free calls and online communication.

**DESIGN THAT
LASTS FOR YEARS**

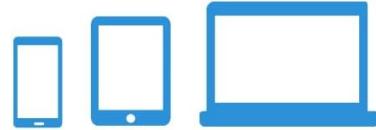

**UNIVERSALLY
COMPATIBLE**

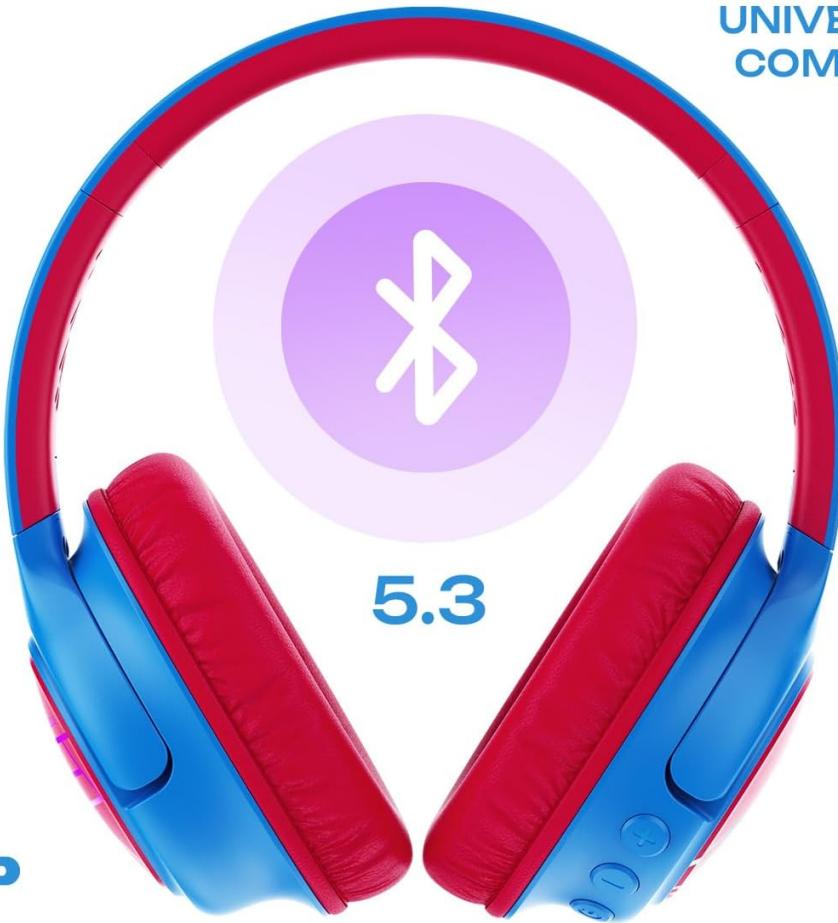

**3.5mm
AUDIO CABLE**

**BUILT-IN
MIC**

Image: Close-up of the PowerLocus Bobo Kids Headphones, highlighting the control buttons, 3.5mm audio port, and USB-C charging port.

3.2 Design Features

- **Soft Foam Earmuffs:** Designed for comfort during extended use.
- **Rotating Earpads:** Earpads rotate 90 degrees for a snug fit and easy storage.
- **Extendable Sides:** Adjustable headband to fit various head sizes.
- **Foldable Design:** Allows for compact storage and portability.
- **LED Lights:** Switchable LED lights on the earcups for added fun.



Image: PowerLocus Bobo Kids Headphones demonstrating features like soft foam earmuffs, rotating earpads, and extendable sides for a comfortable and adjustable fit.

ENJOY SWITCHABLE **LED** LIGHTS



colorful lights **RGB**
for unlimited **FUN**



ON/OFF



Image: PowerLocus Bobo Kids Headphones showcasing the switchable LED lights on the earcups.

4. SETUP

4.1 Charging the Headphones

1. Connect the USB-C charging cable to the charging port on the headphones.
2. Connect the other end of the USB-C cable to a compatible USB power source (e.g., computer, wall adapter).
3. The LED indicator will show charging status. A full charge takes approximately 2 hours.
4. Once fully charged, the headphones provide up to 45-50 hours of playtime.



Image: PowerLocus Bobo Kids Headphones emphasizing 45 hours of playtime, limitless cable mode, and 12-minute fast charging for 7 hours of playtime.

4.2 Bluetooth Pairing

1. Ensure the headphones are charged.
2. Press and hold the Multi-function Button until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
4. Select "PowerLocus Bobo" from the list to connect. The LED indicator will turn solid blue once connected.

4.3 Wired Connection (AUX Mode)

To use the headphones in wired mode:

1. Plug one end of the 3.5mm audio cable into the AUX port on the headphones.
2. Plug the other end into the audio jack of your device.
3. The headphones will automatically switch to wired mode.

4.4 Y-Sharing Plug

The included Y-sharing plug allows two headphones to connect to a single device:

1. Plug the Y-sharing plug into the audio jack of your device.

2. Connect two 3.5mm audio cables (one from each headphone) into the two ports on the Y-sharing plug.
3. Both users can now listen to audio from the same device.



Image: Two children enjoying shared audio from a single device using the Y-sharing plug with their PowerLocus Bobo Kids Headphones.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Press and hold the Multi-function Button for 3 seconds.
- **Power Off:** Press and hold the Multi-function Button for 3 seconds.

5.2 Volume Control and Limiting Modes

The headphones feature three volume limiting modes to protect children's hearing:

- **74dB Toddler Mode:** Lowest safe volume for very young children.
- **85dB Study Mode:** Recommended safe listening level for general use.
- **94dB Travel Mode:** Higher volume for noisy environments like airplanes, while still being limited.

To switch between volume modes, press the Volume Up (+) and Volume Down (-) buttons simultaneously.

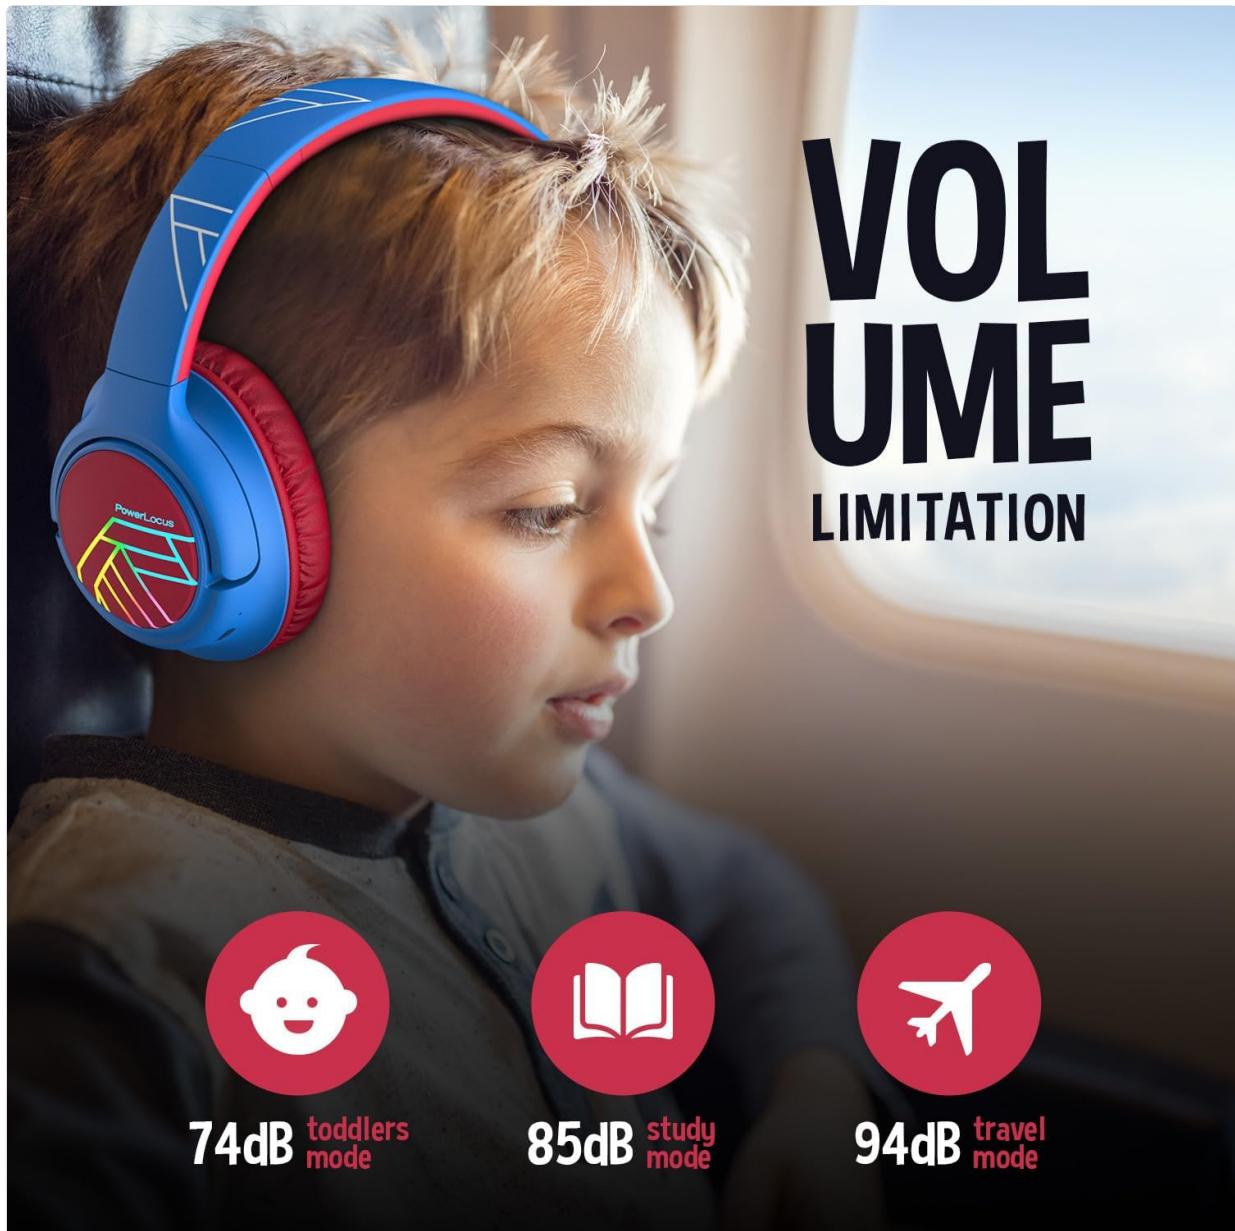


Image: A child wearing PowerLocus Bobo Kids Headphones, demonstrating the three volume limiting modes: 74dB Toddler Mode, 85dB Study Mode, and 94dB Travel Mode.

Video: A demonstration of the PowerLocus Kids Headphones, showcasing the different volume limiting modes (74dB, 85dB, 94dB) and how to switch between them for safe listening.

5.3 Music Playback

- **Play/Pause:** Short press the Multi-function Button.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.

5.4 Call Management

- **Answer/End Call:** Short press the Multi-function Button.
- **Reject Call:** Long press the Multi-function Button.

5.5 LED Lights Control

To turn the LED lights on or off, double-tap the Multi-function Button.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, fold the headphones and store them in the provided carrying case to protect them from dust and damage. Avoid storing in extreme temperatures.
- **Battery Care:** To prolong battery life, charge the headphones regularly, even if not used frequently. Avoid fully discharging the battery for extended periods.

7. TROUBLESHOOTING

- **Headphones not turning on:** Ensure the headphones are fully charged.
- **Cannot pair via Bluetooth:** Make sure the headphones are in pairing mode (flashing blue/red LED). Ensure Bluetooth is enabled on your device and it is within range. Try restarting both devices.
- **No sound in wired mode:** Check that the 3.5mm audio cable is securely plugged into both the headphones and the device. Ensure the device's volume is not muted.
- **Sound is too low/high:** Adjust the volume using the +/- buttons on the headphones or your connected device. Check the volume limiting mode setting.
- **LED lights not working:** Double-tap the Multi-function Button to toggle the LED lights on/off.

8. SPECIFICATIONS

Feature	Specification
Model Name	Bobo
Item Model Number	P19
Connectivity Technology	Wireless (Bluetooth 5.3)
Bluetooth Range	36 Feet
Headphones Jack	3.5 mm Jack
Volume Limiting Modes	74dB, 85dB, 94dB
Battery Life	Up to 50 Hours
Charging Time	2 Hours
Included Components	Bluetooth Headphones, 3.5mm Cable, USB-C Charging Cable, Y Sharing Plug
Material	Plastic
Item Weight	9.6 ounces

9. WARRANTY AND SUPPORT

PowerLocus provides a **2 Years Full Warranty** for these headphones. Your purchase is also risk-free with a 30-day money-back period.

For any support inquiries, troubleshooting assistance, or warranty claims, please contact PowerLocus customer service through the retailer where you purchased the product or visit the official PowerLocus website.

Online Support: www.powerlocus.com

Video: An overview of the PowerLocus Bobo Bluetooth Headphones for Kids, highlighting key features and design elements.

