

BER-35

Sokany Sk-392 Professional Hair Trimmer - User Manual

MODEL: BER-35

Brand: Generic

1. PRODUCT OVERVIEW

The Sokany Sk-392 Professional Hair Trimmer is a versatile grooming device designed for efficient hair removal and styling. It features durable stainless steel blades and comes with multiple attachments for various grooming needs, including hair trimming, shaving, and nose hair removal. Its cordless design and USB charging capability offer convenience for home and travel use.



Image 1.1: The Sokany Sk-392 Professional Hair Trimmer shown with its main body, shaver head, nose trimmer head, oil bottle, cleaning brush, and two rechargeable batteries.

Key Features:

- Professional Stainless Steel Blades for precise and durable performance.
- USB Charger Connector for convenient charging.
- Includes a cleaning brush for easy maintenance.
- Cordless operation for flexibility and ease of use.
- Multi-function design with interchangeable heads for various grooming tasks.

2. IMPORTANT SAFETY INFORMATION

WARNING: This product is intended for use on dry hair only. Avoid contact with eyes and sensitive areas. Keep out of reach of children. Always unplug or remove batteries before cleaning. Do not immerse in water or other liquids. Always follow the instructions for proper use, cleaning, and maintenance. Always supervise use by minors.

3. COMPONENTS

The Sokany Sk-392 Professional Hair Trimmer comes with the following components:

- Main Trimmer Body
- Hair Trimmer Head (pre-attached or separate)
- Multi-function Shaver Head
- Nose Trimmer Head
- Cleaning Brush
- Lubricating Oil Bottle
- Rechargeable AA Batteries (2x)
- USB Charging Cable



Image 3.1: The main trimmer unit with the hair trimmer head attached, alongside the shaver head, nose trimmer head, oil, and cleaning brush.

4. SETUP

4.1 Battery Installation

1. Ensure the trimmer is turned off.
2. Locate the battery compartment cover at the bottom of the main trimmer body.
3. Slide or unclip the cover to open the compartment.
4. Insert the two rechargeable AA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
5. Close the battery compartment cover securely.



Image 4.1: Bottom view of the trimmer showing the open battery compartment with two AA batteries inserted.

4.2 Attaching/Changing Heads

1. Ensure the trimmer is turned off.
2. To remove a head, gently twist or pull it upwards from the main body (refer to the specific head's locking mechanism).
3. To attach a head, align the head with the slot on the main body and push down or twist until it clicks securely into place.



Image 4.2: The main trimmer unit with the multi-function shaver head attached.



Image 4.3: The main trimmer unit with the hair trimmer head attached.

4.3 Charging the Device

Connect the USB charging cable to the charging port on the trimmer and plug the other end into a compatible USB power source (e.g., computer, wall adapter). Allow sufficient time for the batteries to fully charge before first use. The charging indicator (if present) will show charging status.

5. OPERATION

5.1 Powering On/Off

Locate the power switch on the front of the trimmer body. Slide the switch upwards to turn the device ON and downwards to turn it OFF.

5.2 Using the Hair Trimmer Head

Attach the hair trimmer head. For best results, use on clean, dry hair. Hold the trimmer at a slight angle against the skin and move it slowly against the direction of hair growth. Use short, controlled strokes.



Image 5.1: Side view of the trimmer with the hair trimmer head attached, ready for use.

5.3 Using the Multi-function Shaver Head

Attach the multi-function shaver head. For a close shave, hold the shaver flat against the skin and move it in circular or linear motions. Ensure the skin is taut for optimal results.



Image 5.2: Front view of the trimmer with the multi-function shaver head attached.

5.4 Using the Nose Trimmer Head

Attach the nose trimmer head. Gently insert the tip of the trimmer into the nostril or ear canal. Move the trimmer in a circular motion to trim unwanted hair. Do not insert too deeply.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your trimmer.

6.1 Cleaning the Blades and Heads

1. Ensure the trimmer is turned off and disconnected from any power source.
2. Remove the attached head.
3. Use the provided cleaning brush to brush away any trapped hair from the blades and inside the head.
4. For thorough cleaning, you may gently rinse the blades under running water, but ensure the main body does not get wet. Dry thoroughly before reattaching.

6.2 Lubrication

After every few uses, or if the blades feel sluggish, apply a small drop of the provided lubricating oil to the blades. Turn the trimmer on for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.

6.3 Storage

Store the trimmer and its accessories in a cool, dry place, away from direct sunlight and moisture. Keep all components together to prevent loss.

7. TROUBLESHOOTING

7.1 Trimmer Not Turning On

- Check if the batteries are correctly inserted with the right polarity.
- Ensure the batteries are charged. Connect the trimmer to the USB charger and allow it to charge for a few hours.
- If using old batteries, replace them with new rechargeable AA batteries.

7.2 Poor Trimming/Shaving Performance

- Clean the blades and heads thoroughly to remove any trapped hair or debris.
- Apply a drop of lubricating oil to the blades.
- Ensure the batteries are fully charged. Low power can affect performance.
- Check if the head is securely attached to the main body.

7.3 Excessive Noise or Vibration

- Clean and lubricate the blades.
- Ensure the attached head is properly seated and locked into place.
- If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Generic
Model Number	BER-35
Product Dimensions	18 x 8 x 5 cm
Item Weight	0.34 Kilograms (340 g)
Blade Material	Stainless Steel
Power Source	Plug-in Electric (via USB charging for rechargeable batteries)
Special Features	Cordless
Recommended Uses	Professional (Hair Trimming, Shaving, Nose Hair Removal)
Hair Type	All

9. WARRANTY AND SUPPORT

This product is typically covered by a manufacturer's warranty against defects in materials and workmanship. Please

refer to the packaging or contact the retailer for specific warranty terms and duration.

Extended warranty options may be available from third-party providers:

- 1-Year Extended Warranty by Salama Care (E-mail delivery)
- 2-Year Extended Warranty by Salama Care (E-mail delivery)

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact the manufacturer or your point of purchase. Keep your purchase receipt as proof of purchase for any warranty claims.