

## Trend Makers 23 FT

# HydroCleaner XL Telescoping Power Wash Brush User Manual

Brand: Trend Makers | Model: 23 FT

## INTRODUCTION

The HydroCleaner XL is a versatile 23-foot telescoping power wash brush designed for efficient cleaning of various surfaces. Its extendable handle allows for easy reach to different heights and areas, making it ideal for RVs, cars, decks, sidings, and more. This manual provides essential information for the safe and effective use of your HydroCleaner XL.

## Key Features:

- **Incredible 23 Foot Reach:** Telescopic handle extends up to 23 feet for versatile cleaning at various heights.
- **Built-in Soap Chamber:** Integrated dispenser for convenient and efficient soap application.
- **Durable Materials:** Constructed from weather-resistant materials for long-lasting performance.
- **High-Intensity Power Water Jets:** Powerful jets effectively remove dirt, grime, and debris.
- **Multi-Surface Compatibility:** Suitable for vehicles, windows, walls, floors, and outdoor spaces, with interchangeable brush heads.



*Figure 1: The HydroCleaner XL Telescoping Power Wash Brush, showcasing its extended reach and brush head.*

## SETUP INSTRUCTIONS

Follow these simple steps to set up your HydroCleaner XL for first use:

1. **Attach the Handle to your Garden Hose:** Connect the hose attachment of the HydroCleaner XL to a standard garden hose. Ensure a secure, leak-free connection.
2. **Fill and Twist on the Soap Chamber:** Unscrew the soap chamber, fill it with your desired cleaning solution (e.g., car wash soap, deck cleaner), and then securely twist it back onto the brush assembly. The soap chamber features an adjustable flow control.

3. **Extend to your Desired Length:** Unlock the telescopic handle and extend it to the required length for your cleaning task. Securely lock the handle in place before use.

## 3 Quick & Easy Steps

to start Cleaning with  
the **Hydrocleaner XL**

Step 1

**Attach the Handle  
to your Garden Hose**



Step 2

**Fill up and Twist on  
the Soap Chamber**



Step 3

**Extend to your Desired  
Length and that's it**

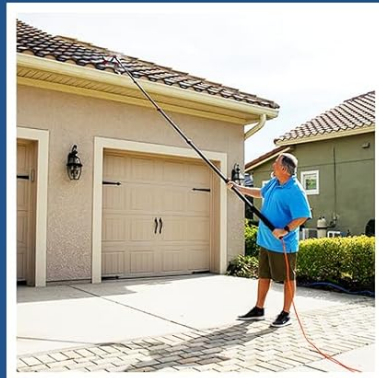


Figure 2: Visual guide for the three quick and easy setup steps: attaching the hose, filling the soap chamber, and extending the handle.

## OPERATING INSTRUCTIONS

Once set up, the HydroCleaner XL is ready for operation. Always ensure a stable footing and clear surroundings before beginning to clean.

- **Water Flow Activation:** Turn on the water supply to your garden hose. Water will flow through the brush head and activate the high-intensity power jets.
- **Soap Dispensing:** Adjust the flow control on the soap chamber to dispense the desired amount of cleaning solution. Turn it off when only water is needed for rinsing.
- **Cleaning Technique:** Apply the brush head to the surface you wish to clean. Use gentle, even strokes. The combination of bristles, water jets, and soap will effectively remove dirt and grime.
- **Interchangeable Brush Heads:** For different surfaces, select and attach the appropriate interchangeable brush

head. Ensure it is securely fastened before use.

- **Squeegee Function:** The brush head includes a squeegee designed for smooth surfaces like windows. Use it to remove excess water and achieve a streak-free finish.

## An **All-in-One**, Compact, & Portable Handheld Tool that Combines Soaking, Scrubbing, Cleaning, Rinsing, and Squeegeeing Functions



Figure 3: Detailed view of the HydroCleaner XL's versatile features, including the integrated foam scrubbing pad, angle adapter, squeegee, and high-strength brush bristles.





Figure 4: Close-up of the HydroCleaner XL demonstrating the potent high-pressure water jets and the soap chamber with its adjustable flow control.



# Not Restricted to just Cleaning High Places It can also be Used to Clean Any Other Things you want

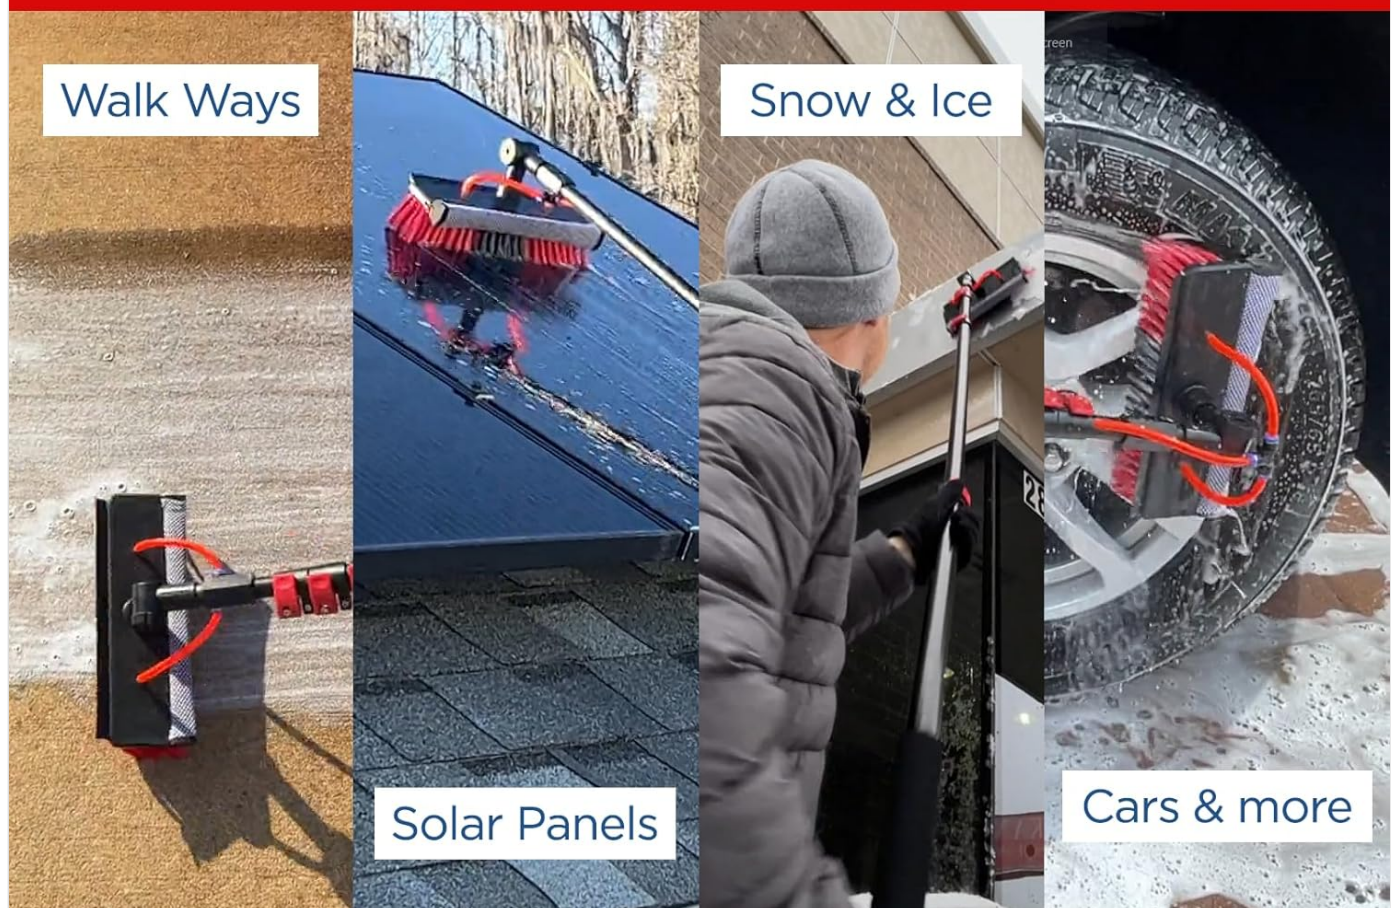


Figure 5: Examples of the HydroCleaner XL's multi-surface compatibility, including use on walkways, solar panels, snow and ice, and cars.

## CARE AND MAINTENANCE

Proper care and maintenance will extend the life of your HydroCleaner XL.

- **Rinse After Use:** After each use, thoroughly rinse the brush head and soap chamber with clean water to remove any soap residue or debris.
- **Empty Soap Chamber:** Always empty any remaining cleaning solution from the soap chamber before storing.
- **Inspect for Damage:** Periodically inspect the brush bristles, hose connections, and telescopic handle for any signs of wear or damage. Replace components as needed.
- **Storage:** Store the HydroCleaner XL in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the telescopic handle is fully retracted for compact storage.

## TROUBLESHOOTING

This section addresses common issues you might encounter with your HydroCleaner XL.

Problem	Possible Cause	Solution
No water flow or weak water pressure.	Hose kinked, water supply off, clogged nozzle/jets.	Check hose for kinks, ensure water supply is fully open, clean brush head nozzles.
Soap not dispensing.	Soap chamber empty, flow control closed, chamber clogged.	Refill soap chamber, open flow control valve, clean soap chamber and dispenser mechanism.
Telescopic handle not locking.	Locking mechanism obstructed or damaged.	Ensure no debris is in the locking mechanism. If damaged, contact support.

## PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Trend Makers
Model Number	23 FT
Color	Black
Handle Material	Metal
Product Dimensions (L x W x H)	6.75"L x 9"W x 68"H (retracted)
Included Components	Hose Attachment, Interchangeable Brush Heads
Surface Recommendation	Floor, Outdoor Spaces, Vehicles, Walls, Windows
Item Weight	6.98 pounds
UPC	850045533984

## WARRANTY AND SUPPORT

For warranty information or technical support regarding your HydroCleaner XL, please contact Trend Makers directly.

**Trend Makers Customer Service:**

*Please refer to the product packaging or the official Trend Makers website for the most current contact information.  
When contacting support, please have your product model number (23 FT) and purchase details ready.*

no relevant documents