

[Manuals.plus](#) /

> [Globo](#) /

> Globo Doro LED Wooden Ceiling Light 416080WD1 Instruction Manual

Globo 416080WD1

Globo Doro LED Wooden Ceiling Light 416080WD1 Instruction Manual

Model: 416080WD1

IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before installation and use. Keep this manual for future reference.

- Always disconnect the power supply before installation, maintenance, or cleaning.
- Installation must be performed by a qualified electrician in accordance with local wiring regulations.
- Ensure the mounting surface is suitable to support the weight of the fixture.
- Do not modify the product in any way.
- Avoid looking directly into the LED light source when it is illuminated.

PRODUCT OVERVIEW

The Globo Doro LED Ceiling Light, model 416080WD1, is a square-shaped ceiling fixture designed for indoor use. It features a wooden frame and an aluminum body, providing efficient LED illumination. Its dimensions are approximately 30 x 30 x 6 cm.



Image: The Globo Doro LED Ceiling Light (model 416080WD1) installed on a ceiling, showcasing its square design and warm light output.

PACKAGE CONTENTS

Please check that all components are present and undamaged before installation:

- 1 x Globo Doro LED Ceiling Light Fixture (Model 416080WD1)
- 1 x Mounting Hardware Kit (screws, wall plugs)
- 1 x Instruction Manual

SETUP AND INSTALLATION

Tools Required: Drill, screwdriver, wire strippers, voltage tester, pencil, measuring tape.

1. **Turn off Power:** Before starting, ensure the main power supply to the installation area is switched off at the circuit breaker. Use a voltage tester to confirm no power is present.

2. **Mark Mounting Holes:** Hold the mounting bracket (usually attached to the fixture or separate) against the ceiling at the desired installation location. Use a pencil to mark the positions for drilling.
3. **Drill Holes:** Drill holes at the marked positions. Insert appropriate wall plugs if necessary.
4. **Attach Mounting Bracket:** Secure the mounting bracket to the ceiling using the provided screws.
5. **Wire Connection:** Connect the electrical wires from the ceiling to the fixture's terminal block. Ensure correct polarity (Live to Live, Neutral to Neutral, Earth to Earth). If unsure, consult a qualified electrician.
6. **Secure Fixture:** Carefully align the light fixture with the mounting bracket and secure it using the provided screws or locking mechanism. Ensure it is firmly attached.
7. **Restore Power:** Once the fixture is securely installed and all connections are checked, restore power at the circuit breaker.



Image: A detailed side view of the Globo Doro LED Ceiling Light, highlighting the wooden frame and the aluminum structure, crucial for understanding mounting points.

OPERATING INSTRUCTIONS

The Globo Doro LED Ceiling Light operates via a standard wall switch. Once installed and power is restored:

- **To Turn On:** Flip the wall switch connected to the light fixture to the "ON" position.
- **To Turn Off:** Flip the wall switch to the "OFF" position.

This fixture is not designed for dimming unless explicitly stated on the packaging or product specifications. Using an incompatible dimmer may damage the LED driver.

MAINTENANCE

Regular cleaning will help maintain the appearance and performance of your LED ceiling light.

- **Cleaning:** Ensure the power is turned off before cleaning. Use a soft, dry, or slightly damp cloth to wipe the surface of the fixture. Do not use abrasive cleaners, solvents, or polishes as these can damage the finish or electrical components.
- **LEDs:** The integrated LED light source is designed for long-term use and is not user-replaceable.



Image: A close-up of the illuminated LED panel of the Globo Doro Ceiling Light, showing the light-emitting surface.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Loose wiring connection. Faulty wall switch.	Check circuit breaker. Ensure power is off, then check wire connections. Test or replace the wall switch.
Light flickers.	Loose wiring. Incompatible dimmer switch (if applicable).	Ensure power is off, then check wire connections. Remove dimmer or replace with a compatible LED dimmer.
Light is dim.	Dust accumulation. Incompatible dimmer switch.	Clean the light fixture. Remove dimmer or replace with a compatible LED dimmer.

If you experience issues not listed here or if the problem persists, please contact customer support.

SPECIFICATIONS

Model Number: 416080WD1

Brand: Globo

Product Dimensions: 30 x 30 x 6 cm

Product Weight: 1.18 kg

Wattage: 12 Watts

Number of Light Sources: 1 (Integrated LED)

Material: Wood, Aluminum

Assembly Required: No (fixture comes pre-assembled)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact Globo customer service. Keep your proof of purchase for warranty claims.

Contact information for Globo can typically be found on their official website or on the product packaging.