

Karlsson PTG-KA5964WD

Karlsson Cuckoo Modern Wall Clock Instruction Manual

Model: PTG-KA5964WD

INTRODUCTION

Thank you for choosing the Karlsson Cuckoo Modern Wall Clock. This timepiece combines contemporary design with the charm of a traditional cuckoo clock, offering both aesthetic appeal and reliable timekeeping. This manual provides essential information for the proper setup, operation, and maintenance of your new clock to ensure its longevity and optimal performance.

SAFETY INFORMATION

- Keep batteries out of reach of children and pets.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.
- Avoid placing the clock in direct sunlight or near extreme heat sources, as this may damage the mechanism or finish.
- Do not attempt to disassemble or repair the clock yourself. Refer to qualified personnel for service.

PACKAGE CONTENTS

- Karlsson Cuckoo Modern Wall Clock (Model: PTG-KA5964WD)

Note: Batteries are required but not included.

Product Overview



Front view of the Karlsson Cuckoo Modern Wall Clock, showcasing its light wood finish, minimalist clock face with black hands, and the cuckoo opening at the top.



Diagram illustrating the dimensions of the Karlsson Cuckoo Modern Wall Clock: approximately 23 cm in height and 9 cm in width.

SETUP

1. **Unpacking:** Carefully remove the clock from its packaging. Inspect for any damage.
2. **Battery Installation:** Locate the battery compartment on the back of the clock. Insert the required batteries (typically 3x AA, check compartment for exact type and quantity) ensuring correct polarity (+/-).
3. **Setting the Time:** Use the time-setting knob or wheel on the back of the clock to adjust the hands to the current time. Rotate the knob clockwise until the correct time is displayed.
4. **Mounting:** Choose a suitable location on a wall. The clock is designed to be hung using a nail or screw (not

included) through the hanging slot on the back. Ensure the mounting point is secure and can support the clock's weight.

OPERATING INSTRUCTIONS

- 1. **Timekeeping:** Once batteries are installed and the time is set, the clock will begin keeping time automatically.
- 2. **Cuckoo Function:** The cuckoo bird will emerge from its opening and chime on the hour. The cuckoo mechanism typically operates during daylight hours and is silent at night, often controlled by a light sensor.
- 3. **Volume Adjustment:** If available, locate the volume control for the cuckoo sound on the back or side of the clock. Adjust to your preferred sound intensity.

MAINTENANCE

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes, as these may damage the finish.
- **Battery Replacement:** Replace all batteries annually, or sooner if the clock begins to lose time or the cuckoo function becomes weak or stops.
- **General Care:** Avoid exposing the clock to excessive moisture or extreme temperature fluctuations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working / hands not moving.	Dead or incorrectly installed batteries.	Check battery polarity. Replace with fresh batteries.
Cuckoo not sounding.	Low batteries, dark room (night sensor active), volume too low.	Replace batteries. Ensure adequate light. Increase cuckoo volume.
Clock losing or gaining time.	Low batteries.	Replace with fresh batteries. Re-set the time accurately.

SPECIFICATIONS

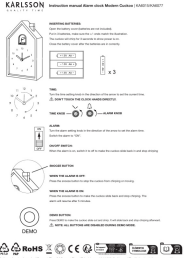 
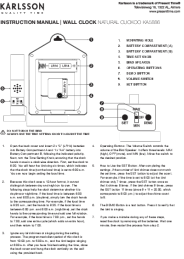 

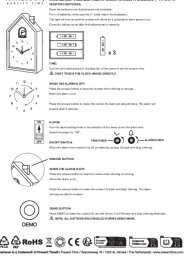 
Feature	Detail
Model Number	PTG-KA5964WD
Brand	Karlsson
Product Dimensions	9 x 3.81 x 23 cm
Item Weight	1.16 Kilograms
Batteries Required	Yes
Colour	Multicolored (Light Wood Finish)
Display Type	Analogue
Style	Modern

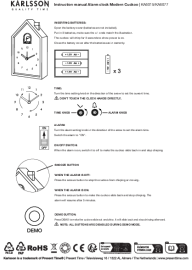 
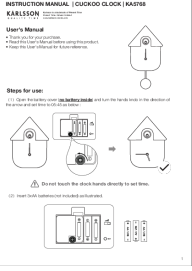 
Feature	Detail
Special Feature	Cuckoo Clock
Power Source	Battery Powered

WARRANTY AND SUPPORT

Karlsso products are manufactured to high-quality standards. For information regarding warranty coverage, product support, or service inquiries, please refer to the official Karlsson website or contact their customer service directly. Please retain your proof of purchase for any warranty claims.

Related Documents - PTG-KA5964WD

	<p>Karlsson Modern Cuckoo Alarm Clock KA6015/KA6077: Instruction Manual</p> <p>User guide for the Karlsson Modern Cuckoo Alarm Clock (Model KA6015/KA6077). Learn how to insert batteries, set the time and alarm, use snooze, and understand its features. Includes warranty and maintenance information.</p>
	<p>Karlsson Natural Cuckoo Wall Clock KA5886: Instruction Manual & Setup Guide</p> <p>Comprehensive guide for the Karlsson Natural Cuckoo Wall Clock, model KA5886. This manual provides detailed instructions on setup, time setting, operation of buttons, volume control, and maintenance. Learn how to correctly set the time, understand the day/night setting, and utilize the demo and set functions. Includes warranty information and disposal guidelines.</p>
	<p>Karlsson Grato Cuckoo Wall Clock KA6026 Instruction Manual</p> <p>Detailed instructions for setting up and operating the Karlsson Grato Cuckoo Wall Clock model KA6026, including battery installation, time setting, volume control, and bird voice activation. Includes warranty and maintenance information.</p>
	<p>Karlsson Modern Cuckoo Alarm Clock KA6015 Instruction Manual</p> <p>Learn how to set up and use the Karlsson Modern Cuckoo Alarm Clock KA6015, including battery installation, time and alarm setting, snooze function, and demo mode.</p>

 <p>The image shows the cover of the instruction manual for the Karlsson Modern Cuckoo Alarm Clock (KA6015/KA6077). The cover features a small illustration of the clock, which has a white face and a wooden-textured body. Below the illustration, there are several icons representing different features: a battery icon, a clock face, a snooze button, and a demo button. The text on the cover includes the Karlsson logo, the product name, and a list of features in Swedish. At the bottom, there are various certification logos including RoHS, CE, and others.</p>	<p>Karlsson Modern Cuckoo Alarm Clock KA6015/KA6077: Instruction Manual</p> <p>Comprehensive guide for the Karlsson Modern Cuckoo Alarm Clock (KA6015/KA6077). Learn how to insert batteries, set time and alarm, use snooze and demo features, and understand warranty and maintenance.</p>
 <p>The image shows the cover of the instruction manual and user guide for the Karlsson KA5768 Cuckoo Clock. The cover features a small illustration of the clock, which has a white face and a wooden-textured body. Below the illustration, there are several icons representing different features: a battery icon, a clock face, a snooze button, and a demo button. The text on the cover includes the Karlsson logo, the product name, and a list of features in Swedish. At the bottom, there are various certification logos including RoHS, CE, and others.</p>	<p>Karlsson KA5768 Cuckoo Clock Instruction Manual and User Guide</p> <p>Comprehensive user manual for the Karlsson KA5768 Cuckoo Clock, providing step-by-step instructions for setup, time setting, cuckoo function, battery replacement, and troubleshooting. Learn how to operate your Karlsson cuckoo clock efficiently.</p>