

VGR V-333

VGR V-333 Rechargeable Portable Rotary Electric Shaver

User Manual

1. INTRODUCTION

Thank you for choosing the VGR V-333 Rechargeable Portable Rotary Electric Shaver. This manual provides essential information for the safe and effective use, maintenance, and care of your new shaver. Please read these instructions thoroughly before first use and keep them for future reference.



Image 1: VGR V-333 Electric Shaver (Silver and Black models)

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage to the device, please observe the following precautions:

- Use the shaver with caution to avoid cuts or skin irritation.
- Keep the device away from water during charging to prevent electric shock.
- This product is not suitable for use by children. Keep out of reach of minors.
- Do not disassemble or attempt to repair the shaver yourself. Contact qualified personnel for service.
- Avoid dropping the shaver or subjecting it to strong impacts.
- Do not use the shaver if the blades or foil are damaged, as this may cause injury.

3. SETUP AND CHARGING

3.1 Initial Charge

Before using your VGR V-333 shaver for the first time, ensure the device is fully charged. This helps to

optimize battery life and performance.

3.2 Charging Procedure

1. Connect the USB charging cable to the shaver's charging port.
2. Plug the other end of the USB cable into any standard USB power source (e.g., computer, wall adapter, power bank).
3. The LCD screen on the shaver will display the battery percentage, indicating the charging status.
4. Once fully charged, disconnect the shaver from the power source.

The shaver has a battery life of approximately 60 minutes on a full charge.



Image 2: Shaver connected to USB for charging and head opened

4. OPERATING INSTRUCTIONS

4.1 Preparing for Shaving

The VGR V-333 is water-resistant (IPX6), allowing for both wet and dry shaving.

- **For Dry Shaving:** Ensure your face is clean and dry before shaving.
- **For Wet Shaving:** You may wet your face and apply shaving cream or gel for a smoother, more comfortable shave.

4.2 Shaving Your Beard

1. Press the power button to turn on the shaver.

2. Gently move the shaver along the contour of your face, using small circular motions or straight strokes against the direction of hair growth.
3. Apply light pressure. Do not press too hard, as this can cause irritation or damage to the blades.
4. Continue shaving until the desired result is achieved.
5. After shaving, press the power button again to turn off the shaver.

5. MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your VGR V-333 shaver.

5.1 Cleaning After Use

1. Turn off the shaver and disconnect it from any power source.
2. Open the shaver head by pressing the release button or sliding the cover as indicated (refer to Image 3).
3. Rinse the shaver head and blades under running water to remove hair clippings and shaving cream residue. The IPX6 water resistance allows for easy rinsing.
4. Use the included cleaning brush (if applicable) to remove any stubborn hair particles from the blades and inner chamber.
5. Allow the shaver head and blades to air dry completely before closing the head and storing the device.



Image 3: Opening the shaver head for cleaning

5.2 Blade Inspection

Periodically inspect the rotary blades for any signs of wear or damage. Replace them if necessary to maintain optimal shaving performance.



Image 4: Close-up of the rotary blades

5.3 Storage

Store the shaver in a safe, dry place, away from direct sunlight and extreme temperatures. Ensure it is clean and dry before storage.

6. TROUBLESHOOTING

If you encounter any issues with your VGR V-333 shaver, please refer to the following common troubleshooting tips:

- **Shaver not turning on:** Ensure the battery is fully charged. Check the LCD screen for battery level.
- **Poor shaving performance:** Clean the shaver head and blades thoroughly. The blades might be dull and require replacement.
- **Skin irritation:** Ensure proper shaving technique (light pressure, correct angle). Make sure your skin is prepared (wet or dry as preferred).
- **Charging issues:** Verify the USB cable and power source are working correctly. Ensure the charging port is free of debris.

If the problem persists, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	VGR
Model Number	V-333
Dimensions	19.7 x 12.8 x 7.8 cm
Weight	510 grams
Recommended Use	Beard
Special Features	High efficiency
Power Source	Battery powered (Rechargeable)
Battery Life	60 minutes
Color	Black
Blade Material	Stainless Steel
Head Type	Rotary
Water Resistance	IPX6
Included Components	Battery

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the official VGR website or contact their customer service department.