



Manuals.plus /

- › Remotes Remade /
- › Remotes Remade RG10A / RH10B AC Remote Control Instruction Manual

Remotes Remade RG10A / RH10B

Remotes Remade RG10A / RH10B AC Remote Control Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your Remotes Remade RG10A / RH10B replacement remote control. This remote is designed to be compatible with various Midea air conditioner models, including MAW08V1QWT, MAW10V1QWT, and MAW12V1QWT, as well as other RG10A and RG10B series units. Please read this manual carefully to ensure proper use and to maximize the functionality of your air conditioning unit.



Image: The Remotes Remade RG10A / RH10B AC remote control, featuring a clear LCD screen displaying temperature and mode, alongside various control buttons for power, mode, fan, swing, and other functions.

SETUP

Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Initial Use

For most compatible Midea air conditioner models, the remote control is designed to operate immediately upon battery installation without requiring additional programming. Point the remote directly at the air conditioner unit and press the power button to test functionality.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions:

- **Power Button ():** Press to turn the air conditioner unit ON or OFF.
- **Mode Button:** Cycles through available operating modes: Auto, Cool, Dry, Fan, and Heat. The current mode is displayed on the LCD screen.
- **Eco Gear Button:** Activates or deactivates the energy-saving mode, optimizing power consumption.
- **Temperature Adjustment Buttons (▲ / ▼):** Adjusts the desired set temperature. Press ▲ to increase and ▼ to decrease.
- **SET / OK Button:** Confirms selected settings or enters specific menu options.
- **Timer Button ():** Used to set the ON/OFF timer for the air conditioner. Refer to your air conditioner's main manual for detailed timer programming.
- **Fan Speed Button ():** Adjusts the fan speed. Options typically include Auto, Low, Medium, and High.
- **Swing Button:** Controls the vertical louver movement, directing airflow. Press to start or stop the swing function.
- **Sleep Mode Button ():** Activates the sleep function, which automatically adjusts temperature and fan speed for comfortable sleep and energy efficiency.
- **Boost Button:** Initiates a rapid cooling or heating function to quickly reach the desired temperature.
- **LED Button:** Controls the backlight or display light of the air conditioner unit.
- **Clean Button:** Activates the self-clean function of the air conditioner, if supported by your unit.

DISPLAY INFORMATION

Temperature Unit Conversion (Fahrenheit/Celsius)

The remote control typically defaults to Fahrenheit. To switch the temperature display between Fahrenheit (°F) and Celsius (°C):

- Ensure the remote is powered on.
- Press and hold the **SET** button for approximately 5 seconds. The temperature unit on the LCD display should change.
- Release the button once the desired unit is displayed.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's display becomes dim or the remote becomes unresponsive. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries or different types of batteries.

Cleaning the Remote

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:** Check if the batteries are inserted correctly and have sufficient charge. Ensure there are no obstructions between the remote and the air conditioner's receiver.
- **Incorrect temperature display:** Verify the temperature unit setting (Fahrenheit/Celsius) as described

in the Display Information section.

- **Limited functionality:** While this remote is broadly compatible, some advanced features specific to certain air conditioner models may not be fully supported. Refer to your air conditioner's original manual for specific unit functions.

SPECIFICATIONS

- **Product Dimensions:** 7 x 2.5 x 1 inches
- **Item Weight:** 3.2 ounces
- **Compatible Devices:** Air Conditioner
- **Max Number of Supported Devices:** 1
- **Power Source:** 2 x AAA Batteries (not included)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Remotes Remade customer service directly. Keep your purchase receipt for warranty claims.