

j006

CHARGE MINI Portable Wireless Speaker User Manual

Model: j006 | Brand: Generic

INTRODUCTION

Thank you for purchasing the CHARGE MINI Portable Wireless Speaker. This compact yet powerful speaker is designed to deliver high-quality audio for various indoor and outdoor activities. With its wireless connectivity and long-lasting battery, you can enjoy your favorite music wherever you go. Please read this manual carefully to ensure proper use and maintenance of your speaker.



Image: The CHARGE MINI speaker shown within its retail packaging, highlighting the product name and key features.

WHAT'S IN THE BOX

Upon opening the package, please ensure all the following items are present:

- CHARGE MINI Portable Wireless Speaker
- Micro-USB Charging Cable
- User Guide



Image: The CHARGE MINI speaker, its micro-USB charging cable, and the included user guide, laid out on a white surface.

PRODUCT OVERVIEW

The CHARGE MINI speaker features a robust design with intuitive controls and multiple connectivity options. Familiarize yourself with the speaker's components:



Image: A direct front view of the CHARGE MINI speaker, showcasing its cylindrical shape and speaker grille.

Key Features:

- **Portable Design:** Lightweight and easy to carry for on-the-go audio.
- **Wireless Connectivity:** Bluetooth for seamless pairing with your devices.
- **Long Battery Life:** Up to 12 hours of playtime on a single charge.
- **Integrated Controls:** Buttons for volume, track control, and call management.
- **Multiple Playback Options:** Supports Bluetooth, USB, and TF card playback.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied Micro-USB cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port.



Image: The rear panel of the CHARGE MINI speaker, displaying the DC 5V charging port, TF card slot, USB port, and ON/OFF switch.

- **Charging Indicator:** An LED indicator will typically show charging status (e.g., red for charging, off or blue for fully charged).
- **Charging Time:** Approximately 3-4 hours for a full charge.

2. Powering On/Off

Locate the ON/OFF switch on the rear panel of the speaker. Slide the switch to the "ON" position to power on the speaker. Slide it to the "OFF" position to power off.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (a voice prompt or flashing LED may indicate this).
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "CHARGE MINI" or a similar name from the list of devices.
4. Once paired, the speaker will confirm with an audible prompt, and the LED indicator will typically stop flashing.

The speaker will automatically attempt to reconnect to the last paired device when powered on.

OPERATING INSTRUCTIONS

The CHARGE MINI speaker features intuitive buttons for easy control of your audio playback and calls.



Image: The top panel of the CHARGE MINI speaker, displaying the mode (M), volume down (-), volume up (+), and play/pause/call buttons.

Button Functions:

- **M (Mode) Button:**
 - Short press to switch between Bluetooth, TF Card, USB, and FM radio modes.
- **- (Volume Down / Previous Track) Button:**
 - Short press to decrease volume.
 - Long press to go to the previous track.
- **+ (Volume Up / Next Track) Button:**
 - Short press to increase volume.
 - Long press to go to the next track.
- **▶ ||| (Play/Pause / Call) Button:**
 - Short press to play or pause music.
 - Short press to answer an incoming call.
 - Short press again to end a call.
 - Long press to reject an incoming call.
 - Double press to redial the last number.

FM Radio Operation:

To use the FM radio function, ensure the speaker is in FM mode. Connect the Micro-USB cable to the charging port; it acts as an antenna for better reception. Short press the Play/Pause button to auto-scan and save available stations.

MAINTENANCE

Proper care will extend the life and performance of your CHARGE MINI speaker.

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's surface. Do not use abrasive cleaners, alcohol, or other chemical solvents, as they may damage the finish.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery every 3-6 months to maintain its health.
- **Water Resistance:** The speaker is not waterproof. Avoid exposing it to water, rain, or excessive moisture.
- **Handling:** Avoid dropping the speaker or subjecting it to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker won't turn on.	Battery is low or depleted.	Charge the speaker fully using the provided Micro-USB cable.
No sound.	Volume is too low; Speaker not paired; Incorrect mode.	Increase volume on both speaker and device. Re-pair Bluetooth. Press 'M' button to switch modes.
Bluetooth connection unstable or failing.	Device is out of range; Interference; Speaker not in pairing mode.	Ensure device is within 30 feet of speaker. Move away from other wireless devices. Restart speaker and device, then re-pair.
Cannot play from USB drive/TF card.	Incorrect file format; Card/drive not inserted correctly; Speaker not in correct mode.	Ensure audio files are in MP3 format. Reinsert the card/drive. Press 'M' button to switch to USB/TF mode.

SPECIFICATIONS

Model Name	J006 Portable Speaker
Brand	Generic
Speaker Type	Portable Bluetooth Speakers
Connectivity Technology	Bluetooth, USB
Wireless Communication Technology	Bluetooth
Bluetooth Range	30 Feet (9.1 meters)
Battery Life	12 Hours
Battery Capacity	6000 Milliamp Hours
Power Source	Battery Powered
Product Dimensions	6.25"D x 2.75"W x 3.25"H (15.88 x 6.99 x 8.26 cm)
Item Weight	11.5 Ounces (326 grams)
Color	Black

Included Components	Speaker, Micro-USB cable, User Guide
Recommended Uses	Indoor/Outdoor, Golf Cart
Special Features	Lightweight, Portable, USB Port
Is Waterproof	FALSE (Not waterproof)

WARRANTY INFORMATION

The CHARGE MINI Portable Wireless Speaker comes with a **Full Warranty**. For specific terms and conditions, please refer to the warranty card included in your product packaging or contact customer support.

CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please refer to the contact information provided with your purchase or on the product packaging. Keep your purchase receipt for warranty claims.