

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Norelco](#) /

> [Philips Norelco Beard Trimmer and Hair Clipper BT3230/41 User Manual](#)

Norelco BT3230/41

Philips Norelco Beard Trimmer and Hair Clipper

Model: BT3230/41

Brand: Norelco

INTRODUCTION

This user manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Philips Norelco Beard Trimmer and Hair Clipper. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

WARNING:

- No Safety Warning (as per product data).
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

Always ensure the appliance is dry before charging. Do not immerse the appliance in water. Keep out of reach of children.

PRODUCT OVERVIEW

The Philips Norelco Beard Trimmer and Hair Clipper (Model BT3230/41) is designed for cordless grooming, offering convenience and precision. Key features include:

- **Self-sharpening steel blades:** Designed for long-lasting performance without the need for blade oil.
- **Lithium Ion battery:** Provides up to 90 minutes of cordless use on a single charge.
- **Lift & Trim comb:** Engineered to capture more low-lying hairs with each pass for an even trim.
- **10 adjustable length settings:** Easily lock in desired lengths in 3/64" (1 mm) increments using the zoom wheel.
- **Detachable head:** Allows for easy cleaning under running water.



Image: Philips Norelco Beard Trimmer and Hair Clipper BT3230/41, showing the trimmer, adjustable comb, and charging cable.

2x more steel blades – for a precise trim

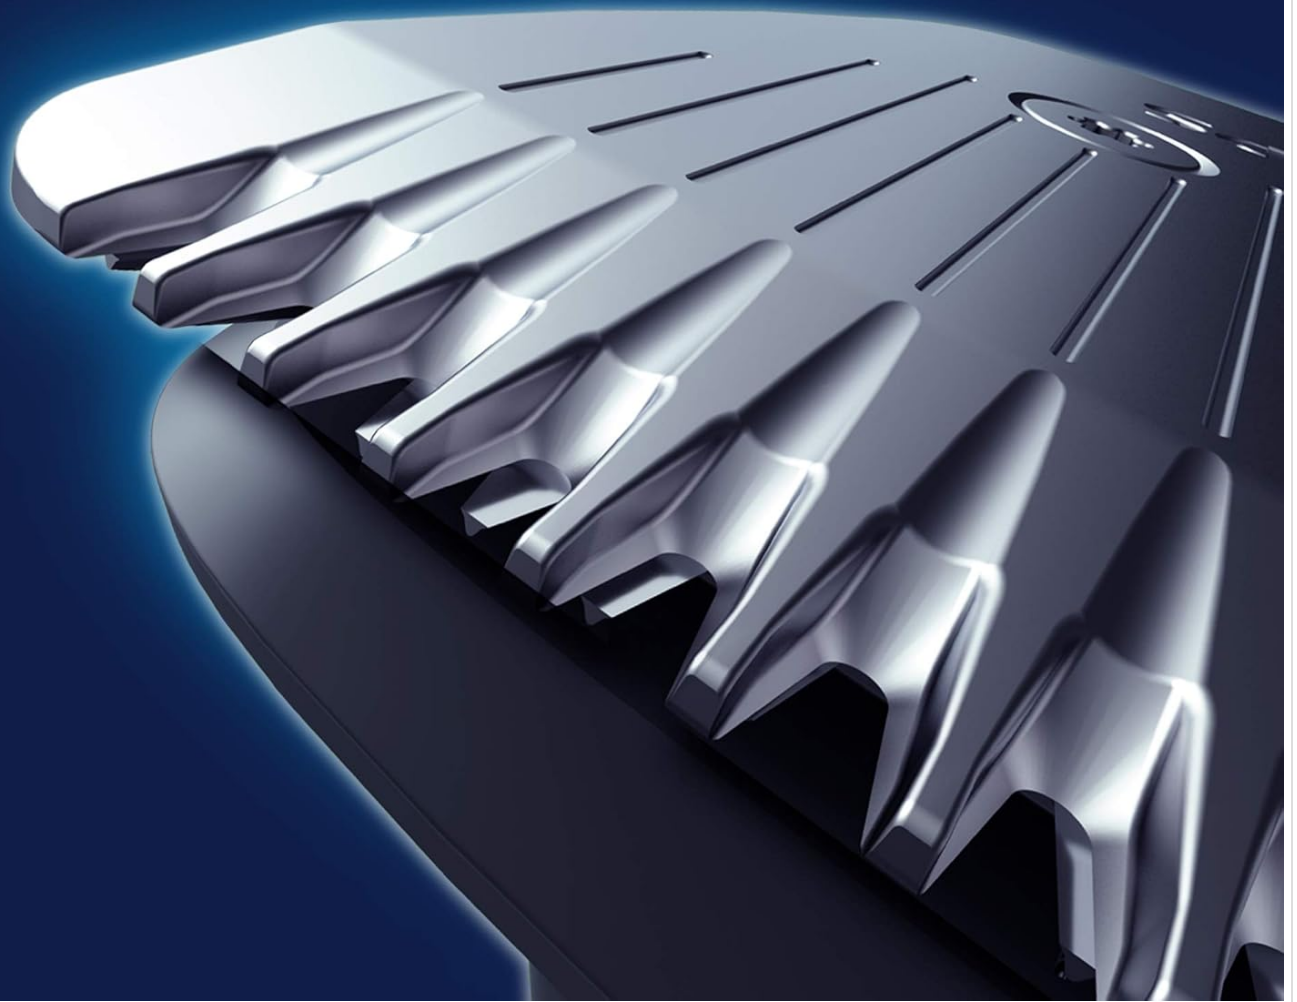


Image: A close-up view of the self-sharpening steel blades of the Philips Norelco Beard Trimmer, highlighting their precision design.

SETUP

Charging the Appliance

1. Ensure the trimmer is switched off.
2. Connect the USB-A charging cable to the trimmer's charging port.
3. Plug the USB-A end of the cable into a compatible USB wall adapter (not included).
4. Allow the trimmer to charge fully before first use. A full charge provides up to 90 minutes of cordless operation.



Rechargeable battery

Li-Ion


**Maximum power
for high-performance
cutting**



**90 minutes
run time**

Image: Illustration of the Philips Norelco Beard Trimmer being charged, emphasizing its rechargeable Lithium-Ion battery for extended cordless use.

Pulling the plug on waste

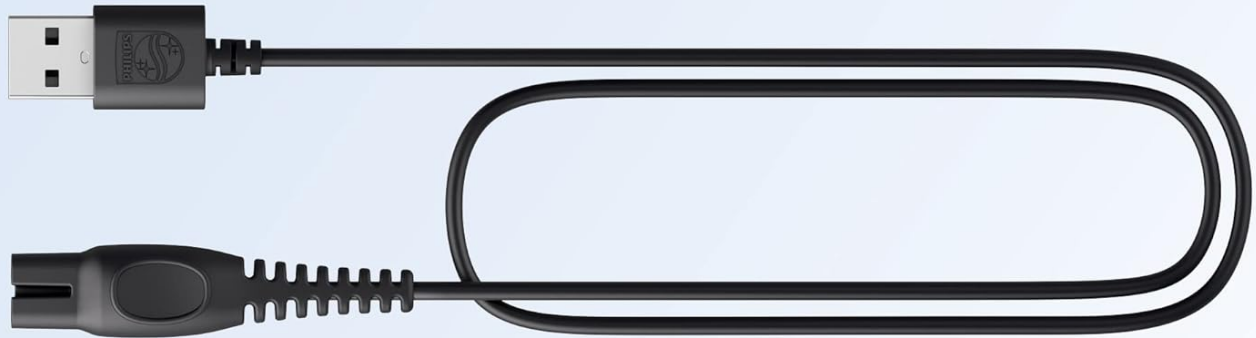

USB-A charging cable

This product comes with a USB-A charging cable (wall adapter not included).

Image: The USB-A charging cable included with the Philips Norelco Beard Trimmer. Note that a wall adapter is not included.

OPERATING INSTRUCTIONS

Adjusting Length Settings

1. Ensure the trimmer is switched off.
2. Rotate the zoom wheel located on the trimmer body to select your desired length setting. The settings are in 3/64" (1 mm) increments.
3. The selected length will be displayed on the trimmer.

Lock-in length settings

10
lengths

**Spin the wheel
for your perfect
length.**



Image: The Philips Norelco Beard Trimmer highlighting the zoom wheel for locking in 10 different length settings.

Trimming Your Beard or Hair

1. Select the appropriate length setting.
2. Switch on the trimmer.
3. Place the comb flat against your skin and move the trimmer slowly against the direction of hair growth.
4. The Lift & Trim comb system helps guide hairs into the blades for an even cut.

Lift&Trim system

Lifts
low-lying
hairs



Image: An illustration demonstrating the Lift & Trim system of the Philips Norelco Beard Trimmer, showing how it lifts low-lying hairs for a more effective trim.

MAINTENANCE

Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene.

1. Switch off the trimmer and disconnect it from the power outlet.
2. Detach the trimming head by gently pulling it upwards.
3. Rinse the trimming head and comb under running water.
4. Shake off excess water and allow all parts to air dry completely before reattaching or storing.
5. No blade oil is required for the self-sharpening steel blades.

Detachable head for quick cleaning



Image: The detachable head of the Philips Norelco Beard Trimmer being rinsed under running water, demonstrating its ease of cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer pulls hair or cuts unevenly.	Blades are dirty or clogged with hair.	Clean the trimming head and comb thoroughly. Ensure no hair is trapped.
Reduced battery life.	Battery not fully charged or aging.	Ensure full charge cycles. If problem persists after extended use, battery may be nearing end of life.

SPECIFICATIONS

- **Brand:** Norelco
- **Model Number:** BT3230/41
- **Item Weight:** 8.46 ounces
- **Package Dimensions:** 7.52 x 4.02 x 2.05 inches
- **Color:** Black
- **Hair Type:** All
- **Recommended Uses:** Beard, Face, Mustache, Sideburns
- **Batteries:** 1 Lithium Ion battery required
- **Manufacturer:** Philips Norelco
- **First Available:** October 27, 2023

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Philips Norelco website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

For additional product information and support, you may visit the official Philips Norelco website:

<https://philips.to/31FWEJX>