

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kitchen HQ](#) /

› [Kitchen HQ 10-in-1 9-Quart Dual Air Fryer with Kebabs \(Renewed\) User Manual Model 761-724](#)

Kitchen HQ 761-724

Kitchen HQ 10-in-1 9-Quart Dual Air Fryer with Kebabs User Manual

Model: 761-724

INTRODUCTION

Thank you for choosing the Kitchen HQ 10-in-1 9-Quart Dual Air Fryer. This appliance is designed to provide a versatile and efficient cooking experience, allowing you to prepare a variety of meals with less oil. Featuring two independent cooking zones, you can cook different foods simultaneously with separate settings. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance of your air fryer.

This product is a renewed item, thoroughly inspected and tested to work and look like new. It comes with a 1-Year Refurbished Warranty for your peace of mind.



Image: The Kitchen HQ Dual Air Fryer, showcasing its two independent cooking baskets filled with fried chicken and french fries, ready for cooking.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Avoid blocking air vents during operation.

PRODUCT COMPONENTS

Your Kitchen HQ Dual Air Fryer package includes the following items:

- Air fryer main body
- 2 Cooking Baskets
- 2 Crisper Racks
- 4 Kebab Skewers
- User Manual (this document)
- Cooking Guide with 17 Recipes



Image: The Kitchen HQ Dual Air Fryer with its two cooking baskets extended, showing the internal components and food items.

SETUP

Before first use, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Clean Components:** Wash the cooking baskets and crisper plates with warm, soapy water. Rinse thoroughly and dry completely. The crisper plates are dishwasher safe. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 6 inches of space around the unit.
4. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor may be present, which is normal. Ensure the area is well-ventilated.

OPERATING INSTRUCTIONS

Basic Operation

1. **Prepare Food:** Place your ingredients into the cooking basket. Do not overfill.
2. **Insert Basket:** Slide the cooking basket firmly into the air fryer until it clicks into place.
3. **Power On:** Plug the air fryer into a grounded electrical outlet. The control panel will illuminate.
4. **Select Zone:** If using only one basket, select Zone 1 or Zone 2 on the control panel.
5. **Set Time and Temperature:** Use the temperature and time controls (usually '+' and '-' buttons) to adjust to your desired settings.
6. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
7. **Shake/Flip (Optional):** For even cooking, some foods may require shaking or flipping halfway through. The air fryer may beep to remind you. Carefully remove the basket, shake/flip, and reinsert.
8. **Finish:** The air fryer will beep when the cooking cycle is complete. Carefully pull out the basket and remove food.



Image: A user demonstrates pulling out a cooking basket from the air fryer, showing the ease of access to food during or after cooking.

Dual Basket Functionality

The Kitchen HQ Dual Air Fryer features two independent 4.5-quart cooking zones, allowing you to cook two different foods

simultaneously with different settings.

- **Smart Finish:** This function synchronizes the cooking times of both baskets so that both foods finish cooking at the same moment, even if they require different temperatures and durations.
- **Match Cook:** This function allows you to quickly apply the same cooking settings (time and temperature) to both baskets, ideal when cooking larger quantities of the same food.

Preset Functions

Your air fryer includes ten convenient preset functions for common dishes:

- Pre-Heat
- Drumsticks
- Steak
- Vegetable
- Chop (for chopped foods)
- Shrimp
- Cake
- Fish
- French Fries
- Dehydrate

Refer to the included Cooking Guide for recommended times and temperatures for these presets and other recipes.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your air fryer.

- **Always Unplug:** Before cleaning, always unplug the air fryer from the power outlet and allow it to cool completely.
- **Baskets and Crisper Plates:** The cooking baskets and crisper plates are dishwasher safe. Alternatively, wash them with warm, soapy water using a non-abrasive sponge. Rinse and dry thoroughly.
- **Interior:** Wipe the interior of the air fryer with a damp cloth or non-abrasive sponge. For stubborn food residue, a small amount of mild dish soap can be used. Ensure the interior is completely dry before next use.
- **Exterior:** Wipe the exterior of the air fryer with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food particles. Do not use water or liquid cleaners directly on the heating element.
- **Storage:** Store the air fryer in a cool, dry place once it is clean and dry.

TROUBLESHOOTING

If you encounter issues with your air fryer, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on	Not plugged in; Power outlet malfunction; Appliance malfunction	Ensure the power cord is securely plugged into a working outlet. Try a different outlet. If still not working, contact customer support.

Problem	Possible Cause	Solution
Food is not cooked evenly	Basket overcrowded; Food not shaken/flipped; Incorrect temperature/time	Do not overcrowd the basket. Shake or flip food halfway through cooking. Adjust temperature and time as per recipe or cooking guide.
White smoke coming from appliance	Grease residue from previous use; High fat content food	Clean the basket and crisper plate thoroughly. For high-fat foods, drain excess fat during cooking. Ensure no food is touching the heating element.
Food is not crispy	Basket overcrowded; Not enough oil (for some foods); Incorrect temperature/time	Cook in smaller batches. Lightly spray or toss food with oil. Increase cooking time or temperature slightly.
Appliance emits a burning smell	Food residue on heating element; Overcooked food	Unplug and allow to cool. Clean the heating element. Adjust cooking time to prevent overcooking.

SPECIFICATIONS

Product specifications for the Kitchen HQ 10-in-1 9-Quart Dual Air Fryer (Model 761-724):

Feature	Detail
Model Number	761-724
Product Dimensions	15.74 x 14.25 x 12.6 inches
Item Weight	10 pounds
Manufacturer	Kitchen HQ
ASIN	B0CLWWSKB5
Dishwasher Compatible Parts	Yes (Crisper Plates)
Batteries Required	No

WARRANTY AND SUPPORT

Warranty Information

This Kitchen HQ 10-in-1 9-Quart Dual Air Fryer (Renewed) comes with a **1-Year Refurbished Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or general inquiries, please contact the Amazon Renewed customer support team through your purchase platform. Have your product model number (761-724) and ASIN (B0CLWWSKB5) ready when contacting support.

