

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› **TOCHIC** /

› TOCHIC Modern Chandelier DS-CCP067 User Manual

TOCHIC CCP067

TOCHIC Modern Chandelier User Manual

Model: DS-CCP067

1. SAFETY INFORMATION

Please read these instructions carefully before installation and retain them for future reference. Improper installation or use can lead to electrical shock, fire, or personal injury.

- **Electrical Safety:** Always turn off the main power supply at the circuit breaker before beginning installation, maintenance, or cleaning. Consult a qualified electrician if you are unsure about wiring procedures.
- **Voltage:** Ensure the voltage supply matches the chandelier's requirements (110 Volts).
- **Weight:** The chandelier is heavy (9.48 kg). Ensure the ceiling junction box and mounting structure can safely support its weight.
- **Handling:** Handle glass components and crystals with care to prevent breakage and injury.
- **Indoor Use Only:** This product is designed for indoor use only and is not water-resistant.

2. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- Chandelier Frame (Metal)
- Crystal Pendants (Glass)
- Mounting Hardware (Canopy, Mounting Plate, Screws, Wire Nuts)
- Instruction Manual

3. TOOLS REQUIRED (NOT INCLUDED)

- Phillips Head Screwdriver
- Wire Strippers
- Pliers
- Electrical Tape

- Ladder
- Voltage Tester

4. SETUP AND INSTALLATION

4.1 Pre-Installation

1. **Turn off Power:** Locate the circuit breaker controlling the light fixture and turn off the power. Verify power is off using a voltage tester.
2. **Unpack:** Carefully unpack all components from the box. Place them on a clean, soft surface to prevent scratches.
3. **Review Diagram:** Familiarize yourself with the chandelier's components and assembly diagram.

4.2 Mounting the Fixture

1. **Attach Mounting Plate:** Secure the mounting plate to the ceiling junction box using the provided screws. Ensure it is firmly attached and can support the chandelier's weight.
2. **Adjust Height:** The chandelier features an adjustable height mechanism. Press the button on the canopy to adjust the suspension cable to your desired length. The maximum adjustable length is approximately 51.18 inches (130 cm).



Image: This diagram illustrates the overall dimensions of the chandelier, including its width of 31.5 inches, height of 15.43 inches, and an adjustable suspension cable length of up to 51.18 inches. A detailed inset shows how to press a button on the canopy to adjust the height.

4.3 Wiring Instructions

Connect the electrical wires according to local electrical codes. If you are not comfortable with electrical wiring, consult a qualified electrician.

1. **Ground Wire:** Connect the bare copper ground wire from the chandelier to the ground wire from the junction box (usually bare copper or green). Secure with a wire nut.
2. **Neutral Wire:** Connect the white wire from the chandelier to the white (neutral) wire from the junction box. Secure with a wire nut.
3. **Live Wire:** Connect the black wire from the chandelier to the black (live) wire from the junction box. Secure with a wire nut.
4. **Secure Wires:** Carefully tuck all wires into the junction box.

4.4 Attaching the Chandelier Body and Canopy

1. **Attach Canopy:** Carefully push the chandelier canopy up to the ceiling, aligning the mounting holes with the screws on the mounting plate. Secure the canopy with the decorative nuts or screws provided.
2. **Install Bulbs:** Screw in 6 E27 base incandescent or LED bulbs (max 60 watts each) into the sockets. Ensure bulbs are fully seated.
3. **Attach Crystals:** Carefully hang each crystal pendant onto the designated hooks on the chandelier frame. Refer to the assembly diagram for correct placement.



Image: A close-up view of the clear glass crystal pendants, some with a twisted design, hanging from the bronze-finished metal frame of the chandelier. The light bulbs are visible between the crystals.

5. OPERATING INSTRUCTIONS

5.1 Power On

Once installation is complete, restore power at the circuit breaker. The chandelier can be operated via a wall switch or the included remote control.

5.2 Remote Control Functions

The chandelier is equipped with a remote control for convenient operation.

- **On/Off:** Press the power button to turn the chandelier on or off.
- **Dimming:** Use the dimming buttons to adjust the brightness level. The chandelier is dimmable.
- **Light Color:** If using compatible bulbs, the remote may allow switching between warm white and cool white light, or adjusting color temperature.



Image: This image displays the chandelier illuminated with two different light temperatures. The top half shows the chandelier emitting a warm, yellowish light, labeled 'Warm Light'. The bottom half shows the same chandelier emitting a bright, bluish-white light, labeled 'Cool Light'.

5.3 Product Overview Video

For a visual overview of the TOCHIC Modern Chandelier, please watch the following video:

Your browser does not support the video tag.

Video: This video provides a general overview of the TOCHIC Modern Chandelier, showcasing its design, crystal details, and the effect of its illumination in various settings. It demonstrates the chandelier's aesthetic appeal and light output.

6. MAINTENANCE

6.1 Cleaning

To maintain the appearance and performance of your chandelier:

- **Power Off:** Always turn off the power supply before cleaning.
- **Frame:** Wipe the metal frame with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners or solvents.
- **Crystals:** Gently wipe crystal pendants with a soft, lint-free cloth. A mild glass cleaner can be used sparingly, applied to the cloth, not directly to the crystals.
- **Bulbs:** Ensure bulbs are cool before cleaning. Wipe with a dry cloth.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chandelier does not light up.	No power supply. Loose wiring. Faulty bulb(s).	Check circuit breaker. Ensure all wire connections are secure (power off first). Replace bulb(s).
Lights flicker.	Loose bulb. Incompatible dimmer switch. Loose wiring.	Tighten bulbs. Ensure dimmer switch is compatible with LED/incandescent bulbs. Check wiring connections (power off first).
Remote control not working.	Dead batteries. Obstruction.	Replace remote control batteries. Ensure clear line of sight to the chandelier's receiver.

8. SPECIFICATIONS

Feature	Detail
Model Number	DS-CCP067
Brand	TOCHIC
Product Dimensions	78.7L x 78.7W x 45.7H Centimetres (approx. 31.5L x 31.5W x 18H inches)
Material	Metal (Frame), Glass (Crystals)
Color	Bronze
Style	Modern
Light Fixture Form	Chandelier

Feature	Detail
Power Source	Corded Electric
Voltage	110 Volts
Number of Light Sources	6
Bulb Base	E27
Max Wattage per Bulb	60 watts
Light Color	Warm White (with compatible bulbs)
Brightness	5400 lumen (total, with compatible bulbs)
Control Method	Remote Control, Wall Switch
Special Features	Adjustable Height, Dimmable
Installation Type	Semi Flush Mount
Assembly Required	Yes
Indoor/Outdoor Usage	Indoor

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact TOCHIC customer service through the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.