

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [tectake](#) /

› [Instruction Manual for tectake® Clamp Awning](#)

**tectake 404963**

# Instruction Manual for tectake® Clamp Awning

**Model:** 404963 | **Brand:** tectake

## INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, and maintenance of your tectake® Clamp Awning. Designed for balconies and terraces, this height-adjustable awning offers effective sun protection and privacy without the need for drilling. Its UV-resistant and water-repellent fabric ensures durability and comfort.



*Image: The tectake clamp awning, illustrating its adjustable design and sun protection capabilities.*

## SAFETY INFORMATION

---

**Warning:** Please read these instructions carefully before assembling and using the awning. Failure to follow these instructions may result in injury or damage to the product.

- Ensure the awning is securely fastened to the wall or ceiling to prevent slipping or falling.
- Use the awning only in suitable weather conditions. Retract the awning during strong winds, heavy rain, or snow to prevent damage.
- Ensure no objects or persons are under the awning when it is being extended or retracted.
- Keep children and pets away from the awning during operation.
- Do not hang heavy objects from the awning frame.

## PACKAGE CONTENTS

---

Please check that all components are present before beginning assembly:

- 1 x tectake® Clamp Awning
- Assembly Material (screws, caps, etc.)
- Assembly Instructions (this manual)

**tectake**  
garden

# Produktinformationen

## ABMESSUNGEN

### Totalmaße

300 x 120 x 211 - 304 cm

### Maße geklappt

300 x 12 x 211 - 304 cm

### Bespannung

287 x 180 cm

### Länge Ausfallarme

120 cm

### Durchmesser Kunststoffkappen

7 cm

Alle Maße sind ca.-Angaben

## TECHNISCHE DATEN

UV-Schutz 50+

Stoffstärke 180 g/m<sup>2</sup>

Gewicht ca. 9,5 kg

Material pulverbeschichteter

Stahl, Aluminium, 100 %

Polyester, Polyethylen,

Polyurethan

## LIEFERUMFANG

Klemmmarkise

Montagematerial

Montageanleitung

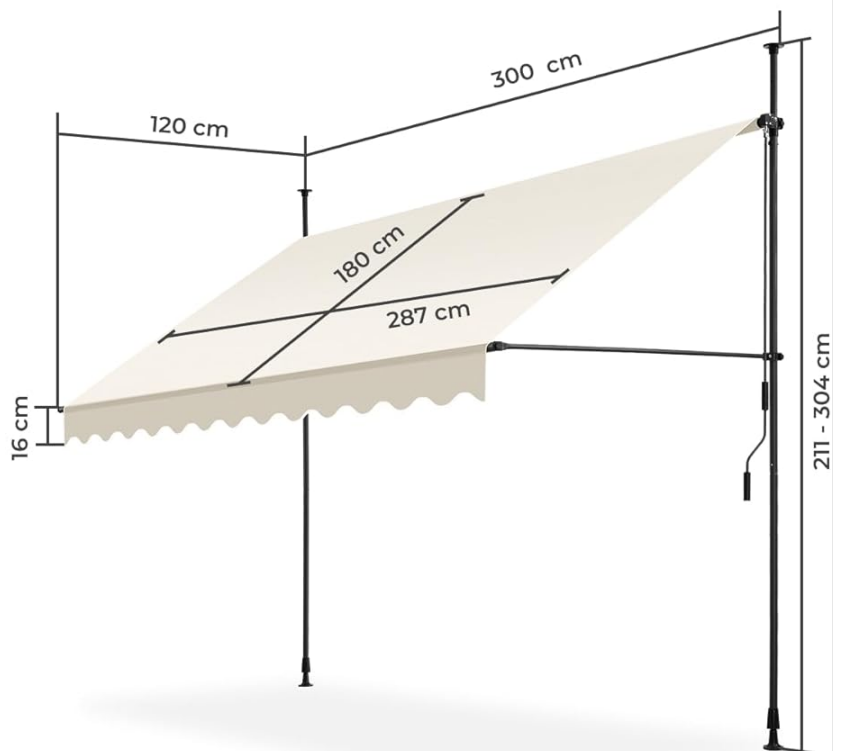 


Image: Product information and scope of delivery, including key dimensions and materials.

## SETUP

The tectake® Clamp Awning is designed for quick and easy assembly without the need for drilling. It features a practical clamping mechanism and telescopic poles for flexible height adjustment.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all parts are present according to the package contents list.
2. **Assemble Frame:** Connect the robust, powder-coated steel frame components as per the diagrams in the assembly instructions. Ensure all connections are secure.
3. **Attach Awning Fabric:** Slide the awning fabric onto the designated aluminum waves. Ensure the fabric is

correctly oriented.

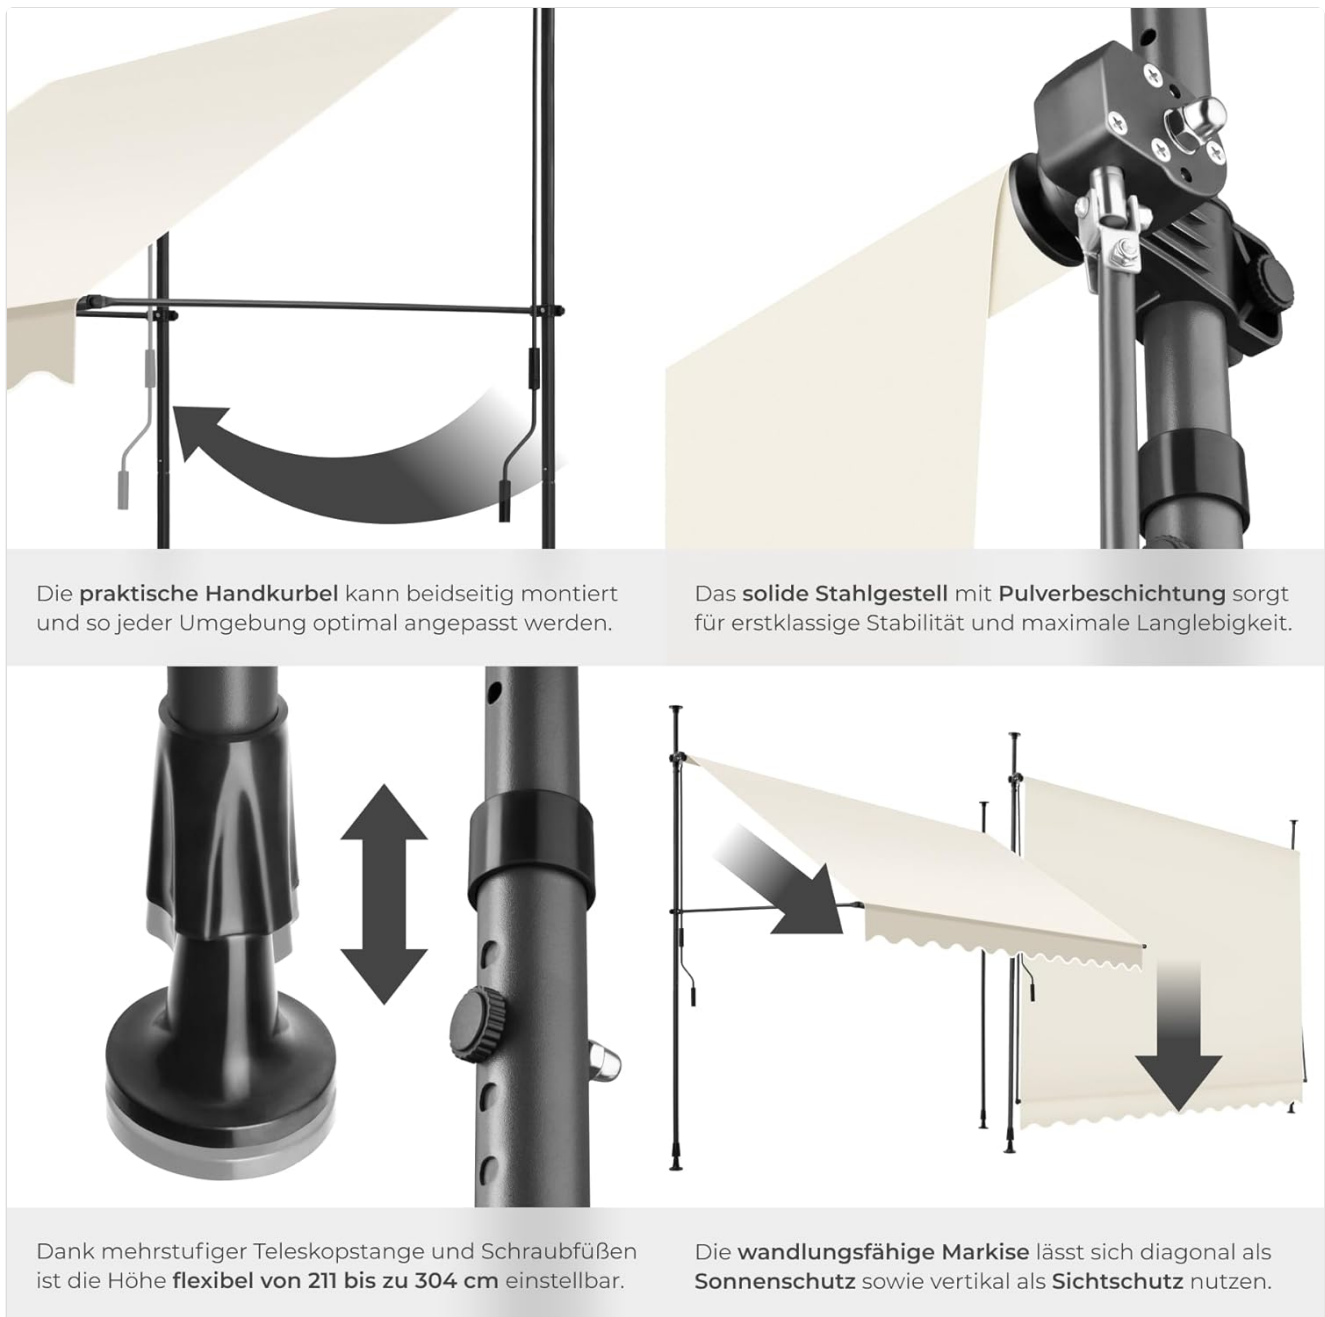
4. **Install Telescopic Poles:** Insert the telescopic poles into the main frame. Adjust the height of the poles to fit your balcony or patio space (adjustable from 211 cm to 304 cm). The non-slip, floor and ceiling protective plastic caps should be at the ends of the poles.
5. **Position and Clamp:** Place the assembled awning in the desired location. Extend the telescopic poles until they firmly clamp between the floor and ceiling/balcony overhang. Ensure the awning is stable and level.
6. **Mount Hand Crank:** The practical hand crank can be mounted on either side of the awning for optimal accessibility. Attach it securely to the designated mechanism.

## LEICHTER **Aufbau.**

Die praktische Klemmvorrichtung sorgt für eine besonders schnelle, sehr mühelose und äußerst variable Montage - ganz ohne Bohren & Dübeln.



Image: Visual guide for easy setup and demonstrating the awning's versatility as a sunshade and privacy screen.



*Image: Detailed views of the crank installation, height adjustment, and flexible positioning options.*

## OPERATING

Your tectake® Clamp Awning features a smooth-running crank mechanism for effortless extension and retraction.

- **Extending the Awning:** Turn the hand crank clockwise to extend the awning fabric to the desired length. The awning can be extended diagonally for sun protection or vertically for privacy.
- **Retracting the Awning:** Turn the hand crank counter-clockwise to retract the awning fabric. Ensure the fabric retracts smoothly and completely.
- **Adjusting Height:** The telescopic poles allow for height adjustment between 211 cm and 304 cm. Loosen the locking mechanism on the poles, adjust to the desired height, and then securely tighten the mechanism.
- **Adjusting Angle:** The awning's extension arms allow for flexible angle adjustment, from diagonal to completely vertical, to suit your sun protection or privacy needs.



**tectake**  
garden

|                                                                                     |                                                                                 |                                                                                       |                                                                                 |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
|  | <b>Blitzschnelle Montage</b><br>dank des praktischen Klemmmechanismus           |  | <b>Flexibler Neigungswinkel</b><br>von diagonal bis hin zu vollkommen senkrecht |
|  | <b>Verstellbare Höhe</b><br>lässt sich ganz flexibel den Gegebenheiten anpassen |  | <b>Kurbelantriebssystem</b><br>sorgt für eine besonders mühelose Handhabung     |
|  | <b>Robuster Polyester</b><br>ist wasserabweisend mit einem UV-Schutz von 50+    |  | <b>100 % Standsicherheit</b><br>dank der rutschfesten Kappen aus Kunststoff     |

Image: The awning in use on a balcony, highlighting its UV protection feature.

# DEINE GESCHÜTZTE Wohlfühloase.



*Image: The awning providing shade and comfort in a patio setting.*

## MAINTENANCE

---

Proper maintenance will extend the lifespan of your awning and ensure its continued performance.

- **Cleaning the Fabric:** The polyester fabric is water-repellent and easy to clean. Use a mild soap solution and a soft brush or cloth to clean the fabric. Rinse thoroughly with clean water and allow to air dry completely before retracting. Do not use harsh chemicals or abrasive cleaners.
- **Cleaning the Frame:** Wipe down the powder-coated steel and aluminum frame with a damp cloth to remove dust and dirt.
- **Lubrication:** Periodically check the crank mechanism and moving parts. Apply a silicone-based lubricant if necessary to ensure smooth operation.
- **Inspection:** Regularly inspect all screws, bolts, and connections to ensure they are tight and secure. Check the fabric for any tears or damage.
- **Winter Storage:** If storing the awning for an extended period, especially during winter, ensure it is clean and completely dry. Store in a dry, protected area to prevent damage from extreme weather conditions.

## WIND- & wetterfest

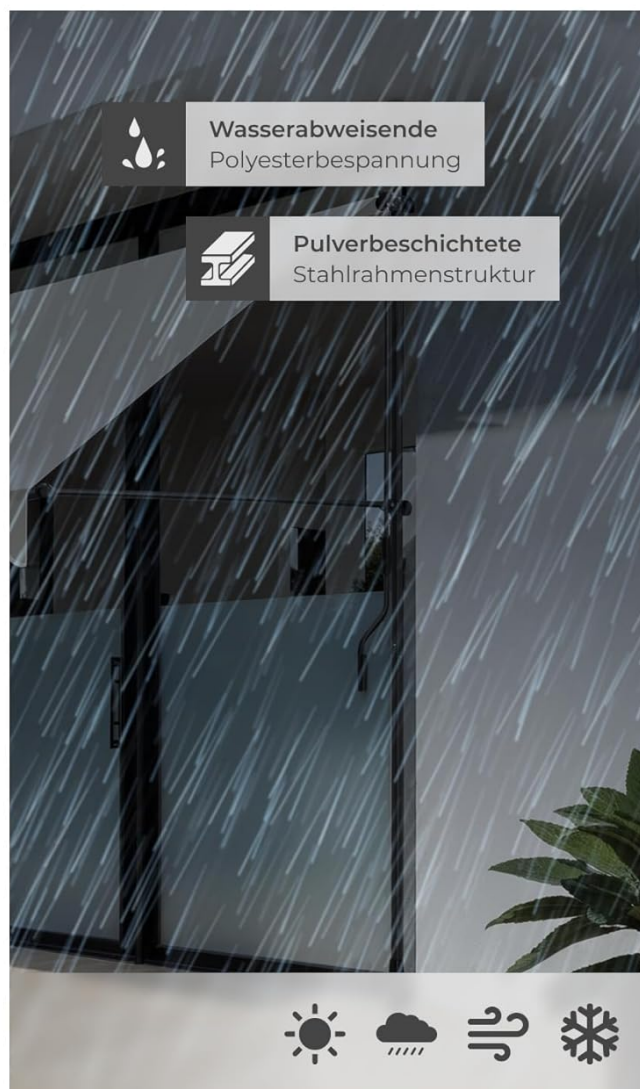 


Image: Visual representation of the awning's wind and weather-resistant features.

## TROUBLESHOOTING

If you encounter issues with your tectake® Clamp Awning, please refer to the following common solutions:

| Problem                                  | Possible Cause                                              | Solution                                                                                                                      |
|------------------------------------------|-------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| Awning does not extend/retract smoothly. | Mechanism is dry or obstructed.                             | Clean the mechanism and apply a silicone-based lubricant. Check for any obstructions.                                         |
| Awning feels unstable after setup.       | Telescopic poles not securely clamped or unevenly adjusted. | Ensure poles are extended to maximum tension and are level. Check that the plastic caps are firmly in place and not slipping. |
| Fabric sags or is uneven.                | Fabric not properly aligned on the rollers or frame.        | Retract the awning completely and then re-extend it slowly, guiding the fabric to ensure even tension.                        |

| Problem                                       | Possible Cause                           | Solution                                                        |
|-----------------------------------------------|------------------------------------------|-----------------------------------------------------------------|
| Awning makes unusual noises during operation. | Lack of lubrication or loose components. | Lubricate moving parts. Check and tighten all screws and bolts. |

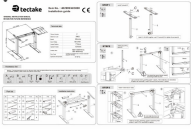 
### SPECIFICATIONS

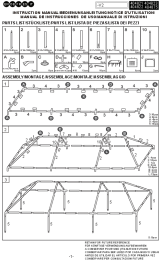 
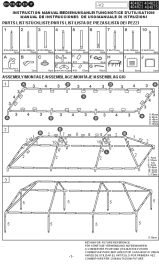 
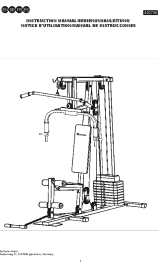 
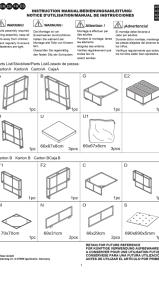 
| Feature                       | Detail                                                                    |
|-------------------------------|---------------------------------------------------------------------------|
| Model Number                  | 404963                                                                    |
| Total Dimensions (W x D x H)  | 300 x 120 x 211 - 304 cm                                                  |
| Folded Dimensions (W x D x H) | 300 x 12 x 211 - 304 cm                                                   |
| Awning Fabric Dimensions      | 287 x 180 cm                                                              |
| Extension Arm Length          | 120 cm                                                                    |
| Plastic Cap Diameter          | 7 cm                                                                      |
| UV Protection                 | UV 50+                                                                    |
| Fabric Weight                 | 180 g/m <sup>2</sup>                                                      |
| Product Weight                | Approx. 9.5 kg                                                            |
| Materials                     | Powder-coated steel, Aluminum, 100% Polyester, Polyethylene, Polyurethane |
| Drive Type                    | Hand-operated                                                             |

### WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official tectake website. Contact details for support are typically found on the manufacturer's product page or within your purchase confirmation.

#### Related Documents - 404963

|                                                                                     |                                                                                                                                                                                                                                                                                |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><a href="#">tectake Height-Adjustable Desk Frame Installation Guide</a></p> <p>Installation guide for the tectake height-adjustable desk frame (Item No. 402999/403000). Includes technical specifications, parts list, assembly steps, operation, and troubleshooting.</p> |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|     | <p><a href="#">tectake Gazebo Instruction Manual - Assembly and Care Guide</a></p> <p>Comprehensive instruction manual for the tectake gazebo (models 404821, 404823, 404822, 404875), covering parts list, assembly steps, location selection, cleaning, maintenance, and storage. Includes safety warnings for outdoor use.</p>                                             |
|    | <p><a href="#">tectake Gazebo Instruction Manual - Assembly Guide</a></p> <p>Comprehensive instruction manual for assembling and maintaining your tectake gazebo. Includes parts list, step-by-step assembly, location advice, care instructions, and contact information.</p>                                                                                                |
|    | <p><a href="#">TecTake 402756 Home Gym Assembly and Exercise Guide</a></p> <p>Instruction manual for the TecTake 402756 home gym, covering assembly, safety precautions, and exercise guidance. Includes preparation tips and warm-up/cool-down routines.</p>                                                                                                                 |
|  | <p><a href="#">TecTake 400777 Semi-Automatic Washing Machine User Manual and Instructions</a></p> <p>This user manual provides comprehensive instructions for the TecTake 400777 semi-automatic washing machine, covering installation, operation, safety guidelines, and maintenance. Learn how to effectively wash and spin your clothes with this efficient appliance.</p> |
|  | <p><a href="#">TecTake Rattan Garden Furniture Assembly Instructions</a></p> <p>Comprehensive assembly instructions for TecTake rattan garden furniture sets, including a detailed parts list and step-by-step visual guidance. Model numbers: 403696, 403697, 403880, 403881.</p>                                                                                            |