

## Vitamix 62824

# Vitamix Drink Machine Advance 48 Ounce Blender

*Model: 62824*

*Brand: Vitamix*

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Vitamix Drink Machine Advance 48 Ounce Blender. Designed for commercial use, this blender offers powerful performance and durability for a variety of beverage preparations.

## IMPORTANT SAFETY INFORMATION

---

Always read all instructions before operating the appliance. Failure to follow these instructions may result in injury or damage to the appliance.

- Ensure the blender is placed on a stable, level surface.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender.
- Never operate the blender with damaged cord or plug.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.

## PRODUCT COMPONENTS

---

Your Vitamix Drink Machine Advance comes with the following main components:

- Motor Base (Blender Base)
- 48-ounce Advance Tritan Plastic Container with Blade Assembly and Lid
- Lid Plug



Figure 1: Vitamix Drink Machine Advance 48 Ounce Blender with container and lid.

## SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean:** Before first use, wash the container, lid, and lid plug with warm, soapy water. Rinse thoroughly and dry.
3. **Placement:** Place the motor base on a clean, dry, and stable countertop. Ensure adequate ventilation around the unit.
4. **Connect Power:** Plug the power cord into a grounded electrical outlet. The unit operates on 120 Volts.

## OPERATING YOUR BLENDER

---

The Vitamix Drink Machine Advance is equipped with 6 pre-programmed settings and a pulse feature for optimal blending results.

### Basic Operation:

1. **Add Ingredients:** Place ingredients into the 48-ounce container. Ensure the lid and lid plug are securely in place.
2. **Place Container:** Set the container onto the motor base, ensuring it is properly seated.
3. **Select Program:** Use the program dial to select one of the 6 optimized blending programs. Each program is designed for specific beverage types, ensuring consistent results.
4. **Start Blending:** Flip the ON switch to begin the selected program. The blender will automatically shut off once the program is complete.
5. **Pulse Feature:** For quick bursts of power or to chop ingredients, use the PULSE switch.

### Tips for Best Results:

- For frozen ingredients, add liquids first, then soft ingredients, and finally frozen items.
- Do not overfill the container beyond the maximum capacity line.
- If ingredients are not circulating, use the tamper (if included with your model) through the lid plug opening to push ingredients towards the blades.

## CARE AND MAINTENANCE

---

### Cleaning the Container:

1. After each use, rinse the container.
2. For thorough cleaning, fill the container halfway with warm water and add a drop of dish soap. Secure the lid.
3. Place the container on the motor base and run the blender on a medium setting for 30-60 seconds.
4. Rinse the container thoroughly with clean water.
5. The container, lid, and lid plug are dishwasher safe.

### Cleaning the Motor Base:

- Unplug the blender before cleaning the motor base.
- Wipe the motor base with a damp cloth. Do not immerse in water.
- Dry thoroughly before storing or next use.

## TROUBLESHOOTING GUIDE

---

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power switch off; circuit breaker tripped.	Ensure unit is plugged in and power switch is ON. Check circuit breaker.
Ingredients not blending smoothly.	Too little liquid; too many frozen/hard ingredients; air pocket around blades.	Add more liquid. Reduce amount of hard ingredients. Use tamper to push ingredients down.
Motor smells hot or unit shuts off.	Overload protection activated due to heavy load or prolonged use.	Turn off and unplug. Allow to cool for 20-45 minutes. Reduce load for next use.

## PRODUCT SPECIFICATIONS

<b>Brand</b>	Vitamix
<b>Model Number</b>	62824
<b>Capacity</b>	48 Fluid Ounces
<b>Number of Speeds</b>	6 Programs (Pre-set)
<b>Motor</b>	2.3 peak output horsepower
<b>Voltage</b>	120 Volts
<b>Frequency</b>	50/60 Hz
<b>Amperage</b>	11.5 Amps
<b>Blade Material</b>	Stainless Steel
<b>Container Material</b>	Tritan Plastic
<b>Product Dimensions</b>	13.1 x 11.9 x 16.9 inches
<b>Item Weight</b>	13.1 pounds
<b>UPC</b>	703113628245

## WARRANTY AND SUPPORT

This Vitamix Drink Machine Advance comes with a Limited Warranty. For specific warranty details, registration, or technical support, please refer to the warranty card included with your product or visit the official Vitamix website.

For further assistance, you may contact Vitamix Customer Service.