

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Electronic Arts](#) /
- › [Rolo to the Rescue Sega Genesis Game Cartridge Manual](#)

Electronic Arts Rolo to the Rescue

Rolo to the Rescue: Sega Genesis Game Manual

Comprehensive instructions for your Rolo to the Rescue game cartridge.

1. SETUP INSTRUCTIONS

1.1 Unpacking the Game

Carefully remove the Rolo to the Rescue game cartridge and its manual from the packaging. Inspect the cartridge for any visible damage before proceeding.



Image 1.1: The Rolo to the Rescue game cartridge and its accompanying manual, displayed within the game case. The cartridge features a yellow tab and the game's title label. The manual shows the game's cover art with the character Rolo the elephant.

1.2 Connecting to Sega Genesis Console

1. Ensure your Sega Genesis console is powered off and unplugged from the electrical outlet.
2. Gently insert the Rolo to the Rescue game cartridge into the cartridge slot on top of your Sega Genesis console. Ensure it is fully seated and secure.

3. Connect your Sega Genesis console to your television using the appropriate audio/video cables.
4. Plug the console's power adapter into an electrical outlet.
5. Connect your Sega Genesis controller(s) to the controller ports on the front of the console.

2. OPERATING INSTRUCTIONS

2.1 Starting the Game

1. Turn on your television and select the correct input channel for your Sega Genesis console.
2. Press the power button on your Sega Genesis console to turn it on.
3. The Rolo to the Rescue title screen should appear. Press the **START** button on your controller to begin the game.

2.2 Basic Gameplay and Controls

Rolo to the Rescue is a platform-adventure game. Familiarize yourself with the standard Sega Genesis controller layout:

- **Directional Pad (D-Pad):** Moves Rolo left, right, up, and down.
- **A Button:** Perform actions such as jumping or interacting with objects.
- **B Button:** Perform actions such as attacking or using special abilities.
- **C Button:** Perform actions such as attacking or using special abilities.
- **START Button:** Pauses the game and accesses the in-game menu.

Refer to the in-game tutorial or the original game manual for specific character abilities and advanced controls.

2.3 Saving Progress

Many Sega Genesis games, including Rolo to the Rescue, typically do not feature an in-game save function. Progress is usually maintained through passwords provided at certain points in the game, or by completing levels in a single session. Consult the original game manual for details on how progress is recorded in Rolo to the Rescue.

3. MAINTENANCE

3.1 Cartridge Care and Storage

- Always handle the game cartridge by its edges to avoid touching the connector pins.
- Store the cartridge in its original case or a protective sleeve when not in use to prevent dust accumulation and physical damage.
- Keep the cartridge away from extreme temperatures, direct sunlight, and moisture.
- If the connector pins appear dirty, gently clean them with a cotton swab lightly dampened with isopropyl alcohol. Allow to dry completely before use.

4. TROUBLESHOOTING

4.1 Common Issues and Solutions

- **Game does not start or screen is black:**
 - Ensure the cartridge is fully and correctly inserted into the console.

- Verify that the console is powered on and connected to the TV on the correct input.
- Clean the cartridge's connector pins as described in Section 3.1.
- **Game freezes or glitches during play:**
 - Turn off the console, remove the cartridge, reinsert it firmly, and restart.
 - Ensure the console itself is functioning correctly with other games.
- **Controller not responding:**
 - Check that the controller is securely plugged into the console.
 - Test with a different controller if available.

5. SPECIFICATIONS

- **Product Name:** Rolo to the Rescue
- **Platform:** Sega Genesis
- **Manufacturer:** Electronic Arts
- **ASIN:** B0CLYPBW62
- **UPC/GTIN:** 657768753978
- **Item Weight:** 6.4 ounces
- **Rating:** Everyone 10+
- **Date First Available:** October 27, 2023

6. WARRANTY AND SUPPORT

As a renewed product, the warranty and support for your Rolo to the Rescue Sega Genesis game cartridge are typically provided by the seller or the Amazon Renewed program. Please refer to the specific return policy and warranty information provided at the time of purchase from the seller (RetroRefresh) or Amazon Renewed.

For technical issues related to the game's functionality, first consult the troubleshooting section of this manual. If problems persist, contact the seller directly for assistance regarding your renewed product.