

[Manuals.plus](#) /

> [Orbegozo](#) /

> Orbegozo CR-5033 Heater User Manual

Orbegozo CR-5033

Orbegozo CR-5033 2000W Heater

User Instruction Manual

IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before operating the appliance and keep it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the heater when not in use or before cleaning.
- Do not use the heater in bathrooms, laundry areas, or similar indoor locations where it may come into contact with water.
- Do not operate any heater with a damaged cord or plug, or after the heater malfunctions or has been dropped or damaged in any manner.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- The heater has an anti-roll safety device that automatically shuts off the unit if it tips over.

PRODUCT OVERVIEW

The Orbegozo CR-5033 is a powerful and efficient 2000W ceramic heater designed for consistent and even heat distribution. It features a compact tower design, an oscillating function for wider coverage, and multiple operating modes.



Figure 1: Front view of the OrbeGozo CR-5033 heater.

This image displays the front of the OrbeGozo CR-5033 heater, highlighting its sleek white body and prominent black mesh grille. The control knobs are visible on the top panel.



Figure 2: Side view of the Orbegozo CR-5033 heater.

This image shows the side profile of the Orbegozo CR-5033 heater, emphasizing its slim design and the air vents located on the side panel, which are essential for proper air circulation.

Key Features:

- **Power:** 2000 W for fast and consistent heating.
- **PTC Ceramic Heating Element:** Ensures rapid heating.
- **Operating Positions:** Fan only, 1000W (low heat), and 2000W (high heat).
- **Oscillating Function:** Distributes heat across a wider area.
- **Adjustable Thermostat:** Allows for precise temperature control.
- **Anti-roll Safety Device:** Automatically shuts off the unit if it tips over.
- **Operating Indicator Light:** Shows when the unit is powered on.
- **Carry Handle:** For easy portability.
- **Low Noise Level:** Designed for quiet operation.

SETUP

1. **Unpacking:** Carefully remove the heater from its packaging. Retain the packaging for future storage or transport.
2. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 3 feet (0.9 meters) of clear space around the heater from walls, furniture, curtains, or other combustible materials.
3. **Power Connection:** Ensure the heater is switched off (thermostat set to minimum, mode selector to OFF). Plug the power cord directly into a grounded 120V AC wall outlet. Do not use extension cords or power strips.

OPERATING INSTRUCTIONS

Control Panel:

The heater features two main control knobs on the top panel:

- **Mode Selector Knob:** Controls the operating mode (OFF, Fan, 1000W, 2000W).
- **Thermostat Control Knob:** Adjusts the desired room temperature.

Turning On/Off and Setting Heat:

1. **Power On:** Turn the Mode Selector Knob from OFF to your desired setting:
 - **Fan:** Activates the fan without heat, useful for air circulation.
 - **1000W:** Provides low heat output.
 - **2000W:** Provides high heat output for faster warming.

The operating indicator light will illuminate.

2. **Set Temperature:** Turn the Thermostat Control Knob clockwise to increase the desired temperature, or counter-clockwise to decrease it. The heater will cycle on and off to maintain the set temperature.
3. **Power Off:** Turn the Mode Selector Knob to the OFF position. Unplug the heater from the wall outlet when not in use.

Oscillating Function:

To activate the oscillating function, press the oscillation button located on the top panel (if present, or indicated by a specific symbol on the mode selector). The heater will then rotate from side to side to distribute heat more evenly across the room. Press the button again to stop oscillation.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your heater.

- **Cleaning:**
 - Always unplug the heater and allow it to cool completely before cleaning.
 - Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
 - Use a vacuum cleaner with a brush attachment to clean dust from the air intake and exhaust grilles.
 - Never immerse the heater in water or allow water to drip into the interior of the heater.
- **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Heater does not turn on.	<p>Not plugged in.</p> <p>Power outlet not working.</p> <p>Thermostat set too low.</p> <p>Tip-over switch activated.</p> <p>Overheat protection activated.</p>	<p>Ensure the power cord is securely plugged into a grounded outlet.</p> <p>Check the circuit breaker or try a different outlet.</p> <p>Turn the thermostat knob to a higher setting.</p> <p>Ensure the heater is on a flat, stable surface. If it tipped, stand it upright and it should reset.</p> <p>Unplug the heater, wait 10-15 minutes for it to cool down, then plug it back in.</p> <p>Clear any obstructions around the heater.</p>
Heater produces no heat in heat modes.	<p>Mode selector set to "Fan" only.</p> <p>Thermostat set too low.</p>	<p>Turn the mode selector to "1000W" or "2000W".</p> <p>Increase the thermostat setting.</p>
Heater makes unusual noises.	<p>Dust or debris in fan.</p> <p>Unit not on a level surface.</p>	<p>Unplug and clean the heater as per maintenance instructions.</p> <p>Ensure the heater is placed on a stable, flat surface.</p>

SPECIFICATIONS

Model Number	CR-5033
Power Output	2000W
Operating Positions	Fan, 1000W, 2000W
Heating Element	PTC Ceramic
Features	Oscillating function, Adjustable Thermostat, Anti-roll Safety Device, Carry Handle, Operating Indicator Light
Item Weight	2.2 pounds (approx. 1 kg)
Manufacturer	Orbegozo

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or replacement parts, please contact Orbegozo customer service directly. Refer to the product packaging or the official Orbegozo website for the most up-to-date contact information. Please have your model number (CR-5033) and purchase date ready when contacting support.

