

## QFX VP-110

# QFX VP-110 Progressive Scan DVD/CD Player

## User Manual

### 1. INTRODUCTION

The QFX VP-110 is a versatile digital multimedia player designed for home entertainment. It supports DVD and CD playback, features an HDMI output for high-definition video, and includes functionalities such as CD ripping to USB and an integrated FM radio tuner. This manual provides essential information for setting up, operating, and maintaining your device.

### 2. PACKAGE CONTENTS

Please check the package for the following items:

- QFX VP-110 DVD/CD Player
- Remote Control (requires 2x AAA batteries, not included)
- Power Cable
- User Manual

### 3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your QFX VP-110 player.

#### 3.1 Front Panel and Remote Control



**Image 1:** Front view of the QFX VP-110 DVD/CD Player alongside its remote control. The player features a disc tray, display, and control buttons. The remote control provides comprehensive functions for playback, menu navigation, and settings.



**Image 2:** An angled perspective of the QFX VP-110 DVD/CD Player, highlighting its compact design and front panel layout including the disc tray and display.

### 3.2 Rear Panel Connections



**Image 3:** The rear panel of the QFX VP-110 DVD/CD Player, displaying the HDMI output, composite video output, stereo audio outputs (RCA), and the AC power input. These ports are used for connecting the player to a television or audio system.

## 4. SETUP

Follow these steps to connect your DVD/CD player to your television and power source.

### 4.1 Connecting to a Television

1. **HDMI Connection (Recommended):** Connect one end of an HDMI cable (not included) to the **HD OUT** port on the rear of the player and the other end to an HDMI input on your television. Select the corresponding HDMI input on your TV.
2. **Composite Video Connection:** If your TV does not have an HDMI input, connect a composite video cable (yellow RCA) to the **VIDEO** output on the player and the corresponding video input on your TV. Connect the red and white RCA audio cables to the **R** (right) and **L** (left) audio outputs on the player and the corresponding audio inputs on your TV.

## 4.2 Power Connection

1. Plug the power cable into the **AC IN** port on the rear of the player.
2. Plug the other end of the power cable into a standard electrical outlet.

## 4.3 Remote Control Battery Installation

Open the battery compartment on the back of the remote control and insert two AAA batteries, ensuring correct polarity (+/-). Close the compartment securely.

# 5. OPERATING INSTRUCTIONS

---

## 5.1 Disc Playback (DVD/CD)

1. Turn on your television and the QFX VP-110 player. Select the correct input source on your TV.
2. Press the **OPEN/CLOSE** button on the player or remote control to open the disc tray.
3. Place a DVD or CD disc gently onto the disc tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the disc tray. The player will automatically begin playback or display a disc menu.
5. Use the remote control's navigation buttons (Up, Down, Left, Right) and **ENTER** button to navigate menus. Use **PLAY/PAUSE**, **STOP**, **FF** (Fast Forward), and **REW** (Rewind) for playback control.

## 5.2 CD Ripping to USB

The player allows you to convert audio tracks from a CD into MP3 files and save them to a USB drive.

1. Insert an audio CD into the disc tray.
2. Insert a USB flash drive into the USB port on the front of the player.
3. During CD playback, press the **RIP** button on the remote control (if available) or navigate through the on-screen menu to find the ripping function.
4. Follow the on-screen prompts to select tracks and start the ripping process.

## 5.3 FM Radio Operation

1. Press the **MODE** or **FUNCTION** button on the remote control to switch to FM radio mode.
2. Use the **TUNE+** and **TUNE-** buttons to manually tune to a station, or press **SCAN** to automatically search and save available stations.
3. Adjust the volume using the **VOL+** and **VOL-** buttons.

# 6. MAINTENANCE

---

Proper care ensures the longevity and optimal performance of your player.

- **Cleaning the Unit:** Wipe the exterior of the player with a soft, dry cloth. Do not use liquid cleaners or

abrasive materials.

- **Cleaning Discs:** Use a soft, lint-free cloth to wipe discs from the center outwards. Avoid touching the playback surface.
- **Ventilation:** Ensure the player has adequate ventilation. Do not block ventilation openings.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet faulty	Ensure power cable is securely connected. Try a different outlet.
No picture on TV	Incorrect TV input selected; Loose HDMI/AV cable	Select the correct HDMI or AV input on your TV. Check cable connections.
No sound	TV/player volume too low; Audio cables loose	Increase volume on TV and player. Check audio cable connections.
Disc not playing	Disc is dirty, scratched, or incompatible format	Clean the disc. Try a different disc. Ensure disc format is supported (DVD+/-R, DVD+/-RW, CD, CD-R, CD-RW).
Remote control not working	Batteries depleted or incorrectly inserted; Obstruction between remote and player	Replace batteries. Ensure correct polarity. Remove any obstructions.

## 8. SPECIFICATIONS

- **Model:** VP-110
- **Media Type Support:** DVD+/-R, DVD+/-RW, CD, CD-R, CD-RW
- **Connectivity:** HDMI, Composite Video (RCA), Stereo Audio (RCA), USB
- **Video Output:** Progressive Scan, Full HD 1080p (via HDMI)
- **Additional Features:** CD Ripping to USB, FM Radio
- **Power Supply:** AC 110V-240V~ 50/60Hz
- **Item Weight:** Approximately 1.94 pounds (0.88 kg)
- **Dimensions (approx.):** 9.96 x 9.8 x 2.87 inches (25.3 x 24.9 x 7.3 cm)

## 9. WARRANTY AND SUPPORT


For warranty information and technical support, please refer to the warranty card included with your product or visit the official QFX website. Keep your purchase receipt as proof of purchase for any warranty claims.


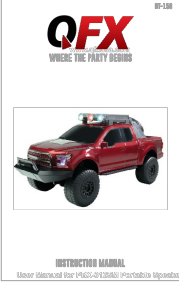 
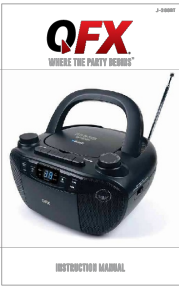 
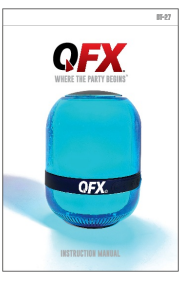 
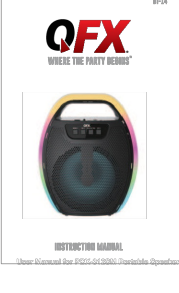 
## 10. PRODUCT IN USE



**Image 4:** The QFX VP-110 DVD/CD Player integrated into a home entertainment setup, positioned on a TV stand beneath a television. This illustrates a typical placement for the device in a living room environment.

## Related Documents - VP-110

	<p><a href="#">QFX VP-109 Portable Speaker User Manual</a></p> <p>User manual for the QFX VP-109 portable speaker, detailing its features, operation, safety precautions, and warranty information. Includes setup, playback, and troubleshooting guides.</p>
---	---

 <p>The cover of the instruction manual for the QFX PDT-307DTV Portable DVD Player. It features the QFX logo at the top, the slogan 'WHERE THE PARTY BEGINS' below it, and a photograph of the black DVD player. The text 'INSTRUCTION MANUAL' is at the bottom.</p>	<p><a href="#">QFX PDT-307DTV Portable DVD Player Instruction Manual</a></p> <p>This document provides comprehensive instructions for the QFX PDT-307DTV portable DVD player, covering safety guidelines, package contents, unit and remote functions, setup procedures, playback options, and warranty information.</p>
 <p>The cover of the instruction manual for the QFX BT-150 Bluetooth Speaker. It features the QFX logo at the top, the slogan 'WHERE THE PARTY BEGINS' below it, and a photograph of a red pickup truck. The text 'INSTRUCTION MANUAL' is at the bottom.</p>	<p><a href="#">QFX BT-150 Bluetooth Speaker: Instruction Manual &amp; Features</a></p> <p>Get detailed instructions for your QFX BT-150 Bluetooth speaker, including control panel functions, TWS pairing, Bluetooth connectivity, safety warnings, and warranty information.</p>
 <p>The cover of the instruction manual for the QFX J-300BT Bluetooth CD/Cassette/Radio/USB Boombox. It features the QFX logo at the top, the slogan 'WHERE THE PARTY BEGINS' below it, and a photograph of the black boombox. The text 'INSTRUCTION MANUAL' is at the bottom.</p>	<p><a href="#">QFX J-300BT Bluetooth CD/Cassette/Radio/USB Boombox Instruction Manual</a></p> <p>Comprehensive instruction manual for the QFX J-300BT Bluetooth CD/Cassette/Radio/USB Boombox, detailing setup, operation, and maintenance.</p>
 <p>The cover of the instruction manual for the QFX BT-27 Portable Bluetooth Speaker. It features the QFX logo at the top, the slogan 'WHERE THE PARTY BEGINS' below it, and a photograph of the blue portable speaker. The text 'INSTRUCTION MANUAL' is at the bottom.</p>	<p><a href="#">QFX BT-27 Portable Bluetooth Speaker Instruction Manual and Warranty</a></p> <p>Comprehensive instruction manual for the QFX BT-27 portable Bluetooth speaker. Learn how to set up, use Bluetooth, FM radio, USB playback, True Wireless Stereo (TWS), charging, and LED lights. Includes important safety warnings and the QFX limited product warranty policy.</p>
 <p>The cover of the instruction manual for the QFX BT-14 Portable Bluetooth Speaker. It features the QFX logo at the top, the slogan 'WHERE THE PARTY BEGINS' below it, and a photograph of the black portable speaker. The text 'INSTRUCTION MANUAL' is at the bottom.</p>	<p><a href="#">QFX BT-14 Portable Bluetooth Speaker: Instruction Manual, Features, and Warranty</a></p> <p>Comprehensive instruction manual for the QFX BT-14 portable Bluetooth speaker. Learn about controls, TWS pairing, Bluetooth, FM radio, safety, and warranty information from QFX.</p>