

[manuals.plus](#) /

› [Smeg](#) /

› [Smeg DN83SE Freestanding Front-Load Heat Pump Dryer User Manual](#)

**Smeg DN83SE**

# Smeg DN83SE Freestanding Front-Load Heat Pump Dryer User Manual

Model: DN83SE

## INTRODUCTION

---

The Smeg DN83SE is an 8 kg capacity, A+++ energy-rated freestanding front-load heat pump dryer. This appliance is designed for efficient and gentle drying of various fabric types, utilizing advanced heat pump technology to minimize energy consumption and protect garments. Please read this manual carefully before using your dryer to ensure safe and optimal operation.



Image: The Smeg DN83SE dryer, white, with its front-loading door open, revealing the empty stainless steel drum and control panel.

## SETUP

---

### Unpacking

Carefully remove all packaging materials. Inspect the dryer for any transport damage. Report any damage immediately to your retailer.

### Positioning

Place the dryer on a firm, level surface. Ensure adequate ventilation around the appliance. The dryer features reversible doors, allowing for flexible installation to suit your laundry room layout.



Image: A side-front view of the white Smeg DN83SE dryer with its door closed, highlighting its compact design.

## Electrical Connection

Connect the dryer to a properly grounded electrical outlet (230-240 V AC, 50 Hz). Ensure the power cord is not trapped or damaged.

## Water Drainage

This heat pump dryer collects condensed water in a drawer. Ensure the drawer is correctly inserted. For continuous drainage, connect the provided drain hose to a suitable drain point.

## OPERATING INSTRUCTIONS

---

### Control Panel

The dryer features a control panel with a combination of a rotary knob and touch controls, along with an integrated LED display for easy program selection and monitoring.



Image: A detailed view of the Smeg DN83SE control panel, showing the program selection knob, touch buttons, and LED display.

## Loading Laundry

Open the door and load laundry into the 110 L stainless steel drum. Do not overload the dryer beyond its 8 kg capacity to ensure optimal drying performance.



Image: The Smeg DN83SE dryer with its door open, showing various colored clothes placed inside the drum, ready for drying.

## Selecting a Program

Turn the rotary knob to select a drying program. Available programs include:**Shirts, Cotton, Duvet, Eco, Anti-allergy Hygiene, Jeans, Mix, Sport Outdoor, Quick, Refresh, Silent, Steam, Synthetics, Wool**. The display will show the estimated cycle time.

## Adjusting Settings

Use the touch controls to adjust additional settings such as the anti-crease function, delayed start (up to 24 hours), or child lock.

## Starting the Cycle

Press the Start/Pause button to begin the drying cycle. The internal drum light will illuminate during operation.



Image: A close-up view of clothes tumbling inside the illuminated drum of the Smeg DN83SE dryer during a cycle.

## End of Cycle

The dryer will signal the end of the cycle. Remove laundry promptly to minimize creasing.

## MAINTENANCE

---

### Cleaning the Lint Filter

After each cycle, clean the lint filter located inside the door opening. Remove accumulated lint to maintain drying efficiency and prevent fire hazards.



Image: The interior of the Smeg DN83SE dryer drum, brightly lit, showing the textured surface and the lint filter area.

### **Emptying the Water Condenser Drawer**

Empty the water condenser drawer after each cycle. If connected to a drain, this step is not necessary.



Image: A close-up of the Smeg DN83SE dryer's water condenser drawer, partially pulled out, showing its design.

## Cleaning the Condenser

Periodically clean the main condenser unit, typically located at the bottom of the appliance. Refer to the full manual for detailed instructions on accessing and cleaning the condenser.

## Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.

## TROUBLESHOOTING

- **Dryer not starting:** Check if the power cord is properly plugged in and the door is fully closed. Ensure the child lock is not activated.
- **Laundry not drying properly:** Clean the lint filter and condenser. Do not overload the dryer. Select an appropriate drying program for the fabric type.
- **Unusual noise:** Check for foreign objects in the drum. Ensure the dryer is level.

- **Error codes:** If an error code appears on the display, consult the full user manual for specific solutions or contact customer support.

## SPECIFICATIONS

Feature	Value
Positioning	Freestanding
Loading Type	Front-load
Drying System	Heat pump
Product Color	White
Reversible Doors	Yes
Control Type	Knob, touch
Integrated Display	Yes (LED)
Door Hinge	Right (reversible)
Door Style	Glass door
Drum Volume	110 L
Drum Material	Stainless steel
Cable Length	1.5 M
Door Opening Angle	160°
Drum Capacity	8 Kg
Drying Efficiency Class	A
Noise Emission	63 dB
Number of Drying Programs	15
Anti-crease Function	Yes
Refrigerant Medium	R290
Delayed Start	Yes (up to 24 H)
Internal Drum Light	Yes
Child Lock	Yes
Energy Efficiency Class	A+++ (on a scale of A+++ to D)
Energy Consumption	1.44 kWh
Annual Energy Consumption	177 kWh
Heat Source	Electric

Connected Load	800 W
AC Input Voltage	230-240 V
AC Input Frequency	50 Hz
Dimensions (WxDxH)	59.8 x 60.7 x 84.6 cm
Weight	46 kg
Model Number	DN83SE



Image: The energy efficiency label for the Smeg DN83SE dryer, indicating an A+++ rating.

## WARRANTY AND SUPPORT

---

### Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including coverage period and registration details.

### Customer Support

For technical assistance, spare parts, or service requests, please contact Smeg customer support. Contact details can be found on the Smeg official website or in the documentation provided with your dryer. When contacting support, please have your model number (DN83SE) and serial number ready.