



Manuals.plus /

› Vittanly /

› Vittanly 10 Pack Picture Frames Instruction Manual

Vittanly 10 Pack Picture Frames

Vittanly 10 Pack Picture Frames Instruction Manual

Model: 10 Pack Picture Frames

INTRODUCTION

The Vittanly 10 Pack Picture Frames set is designed to help you display your cherished memories. This set includes a variety of frame sizes to create a cohesive gallery wall or to be used individually throughout your home or office. The frames are constructed from engineered wood and feature shatter-resistant plexiglass for protection.



Image: A complete set of Vittanly 10 Pack Picture Frames in black, displayed as a gallery wall arrangement.



Image: An example of a gallery wall arrangement using the Vittanly 10 Pack Picture Frames in a living room setting.

Video: An overview of the Vittanly 10 Pack Picture Frames Collage Wall Decor, highlighting its features and aesthetic appeal.

COMPONENTS INCLUDED

Your Vittanly 10 Pack Picture Frames set includes the following:

- 2 x 8x10 inch picture frames
- 4 x 5x7 inch picture frames
- 4 x 4x6 inch picture frames
- Shatter-resistant plexiglass for each frame
- White mats for displaying smaller photos (e.g., 5x7 in 8x10 frame, 4x6 in 5x7 frame, 3.5x5 in 4x6 frame)
- Engineered wood backboards
- Hanging hardware (nails/hooks)
- Tabletop stands integrated into backboards for smaller frames

SIZE

Fit **5"x7"** picture



Fit **8"x10"** picture



Fit **4"x6"** picture



Image: Visual representation of the multi-size frames and their dimensions.



Image: Detailed breakdown of the frame's structure and materials.

SETUP AND INSTALLATION

Follow these steps to set up and install your Vitanly picture frames:

1. **Prepare the Frame:** Carefully remove the backboard from the frame by rotating the clips.
2. **Remove Protective Film:** The plexiglass has protective film on both sides. Gently peel off this film to reveal a clear, scratch-free surface.
3. **Insert Photo:** Place your desired photo inside the frame. If using a mat, ensure the photo is centered within the mat opening.
4. **Reassemble:** Place the backboard back into the frame and secure it by rotating the clips back into position.
5. **Choose Display Method:**
 - **Wall Mounting:** Use the included hanging hardware. The backboards feature sawtooth hangers for both horizontal and vertical orientation. Mark your desired spot on the wall, gently tap the nail/hook into place, and hang the frame.
 - **Tabletop Display:** Smaller frames include a built-in easel stand on the backboard. Simply unfold the stand to prop the frame on any flat surface.

Video: A step-by-step guide on how to install the gallery wall frame set, including preparing the frame, inserting photos, and hanging.



Image: Illustration of peeling the protective film from the plexiglass before use.

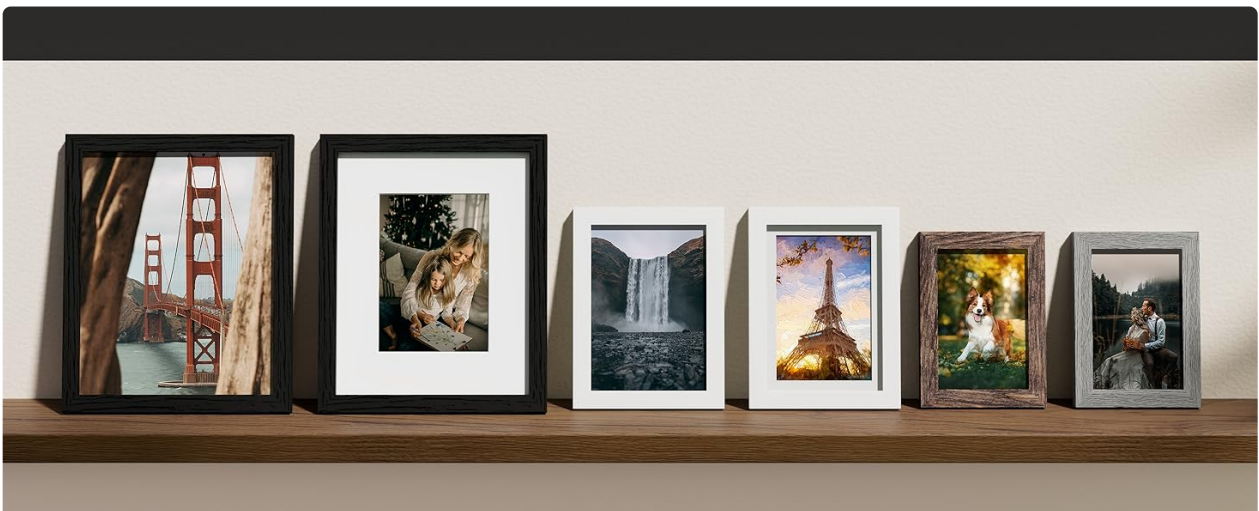


Image: Close-up of the rotating clips for easy photo insertion and removal.

OPERATING AND DISPLAY OPTIONS

The Vittanly picture frames offer versatile display options to suit your preferences:

- **Wall Display:** Utilize the sawtooth hangers on the backboard to mount frames horizontally or vertically on your wall.
- **Tabletop Display:** Smaller frames are equipped with an easel stand, allowing them to be placed on desks, shelves, or any flat surface.



Image: Frames displayed on a tabletop and mounted on a wall, demonstrating versatile placement.



Image: The back of a frame showing both wall hanging options and the tabletop stand.

MAINTENANCE

To keep your picture frames looking their best:

- Wipe the frame and plexiglass with a dry, soft cloth to remove dust.
- For more stubborn marks on the plexiglass, use a slightly damp cloth and then immediately dry with a clean, soft cloth. Avoid abrasive cleaners.

TROUBLESHOOTING

If you encounter any issues with your picture frames, consider the following:

- **Plexiglass appears cloudy:** Ensure that the protective film has been removed from both sides of the plexiglass.
- **Frame not hanging straight:** Double-check that the hanging hardware on the wall is level and securely installed. Adjust as needed.
- **Photo slipping:** Ensure the backboard clips are fully rotated and securely holding the photo and backboard in place.

SPECIFICATIONS

Feature	Detail
Brand	Vittanly
Color	Black
Product Dimensions	11.61"L x 10.03"W (for largest frame)
Shape	Rectangular
Mounting Type	Wall & Tabletop
Frame Material	Engineered Wood
Finish Type	Matte
Number of Items	10
Orientation	Horizontal & Vertical
Item Weight	3.91 pounds (total for 10 pack)
Included Components	10 Pack Picture Frames

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Vittanly 10 Pack Picture Frames, please refer to the seller's information on the product page or visit the official Vittanly store on Amazon. The product typically comes with a 30-day return policy for refunds or replacements.

Visit the [Vittanly Store](#) for more information.