

1231234

6' Pre-Lit Prismatic Snowman Instruction Manual

Model: 1231234 | Brand: Generic

IMPORTANT SAFETY INFORMATION

For indoor and outdoor use. Unplug during inclement weather. Do not allow children to play on or near the display. Keep away from flammable materials. Always ensure the product is placed on a stable, level surface to prevent tipping.

PRODUCT OVERVIEW

The 6' Pre-Lit Prismatic Snowman is a festive holiday decoration designed for both indoor and outdoor use. It features a durable metal frame adorned with a prismatic finish that creates a dazzling iridescent effect. The snowman is illuminated by 450 cool white LED lights, which include a charming twinkle effect to enhance its visual appeal.

Key Features:

- 6-foot (72 inches) prismatic snowman design
- Suitable for indoor and outdoor display
- Equipped with 450 cool white LED lights featuring a twinkle effect
- Includes 4 yard stakes for enhanced stability outdoors
- Features a colorful iridescent finish
- Comes with a 5-foot (1.52 m) lead cord for power connection



The 6-foot Pre-Lit Prismatic Snowman, showcasing its vibrant, iridescent finish and twinkling cool white LED lights, ready for holiday display.

PACKAGE CONTENTS

Please ensure all components are present before beginning assembly:

- 1 x Prismatic Snowman Unit (may be in multiple sections)
- 1 x Power Cord (attached, 5-foot lead)
- 4 x Yard Stakes

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging. Inspect for any damage that may have occurred during shipping.
2. **Assembly:** If the snowman unit comes in multiple sections, connect them securely according to the internal frame structure. Ensure all connections are firm. Attach any separate accessories such as the hat, scarf, or arms if they are not pre-attached.
3. **Placement:** Choose a suitable location for your snowman. For outdoor use, select a flat, stable area away from high traffic or potential hazards. For indoor use, ensure it is placed on a level surface.
4. **Staking (Outdoor Use Only):** For outdoor placement, use the four provided yard stakes. Insert the stakes through the designated loops or holes at the base of the snowman and firmly push them into the ground to secure the unit against wind or accidental tipping.

5. **Power Connection:** Extend the 5-foot lead cord and plug it into a standard, grounded electrical outlet. Ensure the outlet is suitable for outdoor use if placed outdoors (e.g., a GFCI outlet).



Detail of the snowman's prismatic surface and internal lighting, illustrating the intricate design that contributes to its vibrant appearance.

OPERATING INSTRUCTIONS

The 6' Pre-Lit Prismatic Snowman is designed for simple operation.

- **Power On/Off:** Once properly set up and plugged into a power outlet, the snowman's lights will illuminate automatically. To turn off the snowman, simply unplug the power cord from the electrical outlet.
- **Light Effect:** The 450 cool white LED lights are designed with an integrated twinkle effect, which will activate automatically upon power-on. No additional settings or controls are required for this feature.
- **Usage:** This product is suitable for continuous display during the holiday season. For outdoor use, ensure it is unplugged during severe weather conditions such as heavy rain, snowstorms, or strong winds.

MAINTENANCE AND CARE

- **Cleaning:** To clean the snowman, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the prismatic finish or electrical components.
- **Storage:** When not in use, especially after the holiday season, unplug the snowman and carefully disassemble it if it was assembled from multiple parts. Store the unit in its original packaging or a protective container in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Before each use, inspect the power cord, plug, and all light connections for any signs of

damage, fraying, or loose parts. Do not use the product if any damage is detected.

- **Weather Precautions:** Always unplug the snowman during inclement weather conditions to prevent electrical hazards and damage to the unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights not illuminating	Not plugged in; Power outage; Damaged wire or LED	Ensure plug is fully inserted into a working outlet; Check household circuit breaker; Inspect power cord for damage. If damaged, discontinue use.
Snowman is unstable or tips over	Not properly staked (outdoor); Uneven ground; Strong winds	Ensure all 4 yard stakes are firmly pushed into the ground; Place the snowman on a flat, level surface; Consider additional anchoring in very windy conditions or bring indoors.
Twinkle effect not working	Internal component issue	Unplug the unit, wait 30 seconds, then plug it back in. If the issue persists, contact customer support.

SPECIFICATIONS

- **Height:** 6 feet (72 inches)
- **Dimensions (L x W x H):** 58 x 27 x 72 inches
- **Light Type:** LED
- **Light Color:** Cool white with twinkle effect
- **Number of Lights:** 450
- **Lead Cord Length:** 5 feet (1.52 m)
- **Frame Material:** Metal
- **Power Source:** Plug-in (1.1E+2 Volts DC)
- **Recommended Use:** Indoor/Outdoor Decoration
- **Item Weight:** 19.9 pounds
- **Model Number:** 1231234



The 6-foot prismatic snowman, illustrating its full form and the intricate details of its design.

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For details regarding warranty coverage, returns, or technical support, please contact the retailer or manufacturer directly where you purchased this product. Please have your model number (1231234) and proof of purchase ready when contacting support.



A different perspective of the prismatic snowman, highlighting its unique material and light reflection.

© 2024 Generic. All rights reserved.