

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Dexin](#) /

> [Dexin KK-82MS-B Electronic Calculator User Manual](#)

Dexin KK-82MS-B

Dexin KK-82MS-B Electronic Calculator User Manual

Model: KK-82MS-B

INTRODUCTION

Thank you for choosing the Dexin KK-82MS-B Electronic Calculator. This calculator is designed for home, office, and school use, offering 240 functions to support a wide range of mathematical calculations. Its durable design and clear LCD display ensure reliable performance and ease of use.

This manual provides essential information on setting up, operating, maintaining, and troubleshooting your calculator to ensure optimal performance and longevity.

SETUP

Battery Installation

The Dexin KK-82MS-B calculator is battery-powered. Before first use, or if the display becomes dim, you may need to install or replace the batteries.

1. Locate the battery compartment cover on the back of the calculator.
2. Using a small screwdriver (not included), gently remove the screw securing the battery compartment cover.
3. Remove the cover.
4. Insert the required batteries (typically AAA or button cell, refer to specifications for exact type) ensuring correct polarity (+/-).
5. Replace the battery compartment cover and secure it with the screw.

Note: Always use new batteries of the specified type. Do not mix old and new batteries, or different types of batteries.





Image: Rear view of the Dexin KK-82MS-B calculator, highlighting the area where the battery compartment is typically located.

OPERATING INSTRUCTIONS

Basic Operations

- **Power ON/OFF:** Press the **ON** button to turn on the calculator. Press **SHIFT** then **AC** (OFF) to turn off.
- **Clear Entry:** Press **AC** to clear all entries and reset the calculator. Press **DEL** to delete the last entered digit.
- **Basic Arithmetic:** Enter numbers and use the **+**, **-**, *****, **÷** keys for addition, subtraction, multiplication, and division. Press **=** for the result.
- **Decimal Point:** Use the **.** key for decimal numbers.

Advanced Functions (240 Functions)

The Dexin KK-82MS-B offers 240 functions, including scientific, statistical, and trigonometric calculations. Many functions are accessed via the **SHIFT** or **ALPHA** keys.

- **Shift Key:** Press **SHIFT** to access the secondary functions printed above the keys (usually in yellow or orange).
- **Alpha Key:** Press **ALPHA** to access the alpha-numeric characters or variables printed above the keys (usually in red).
- **Mode Key:** Press **MODE** to change calculation modes (e.g., COMP, STAT, EQN). Refer to the on-screen menu for options.
- **Memory Functions:** Use **STO** (Store) to save a value to memory and **RCL** (Recall) to retrieve a stored value.

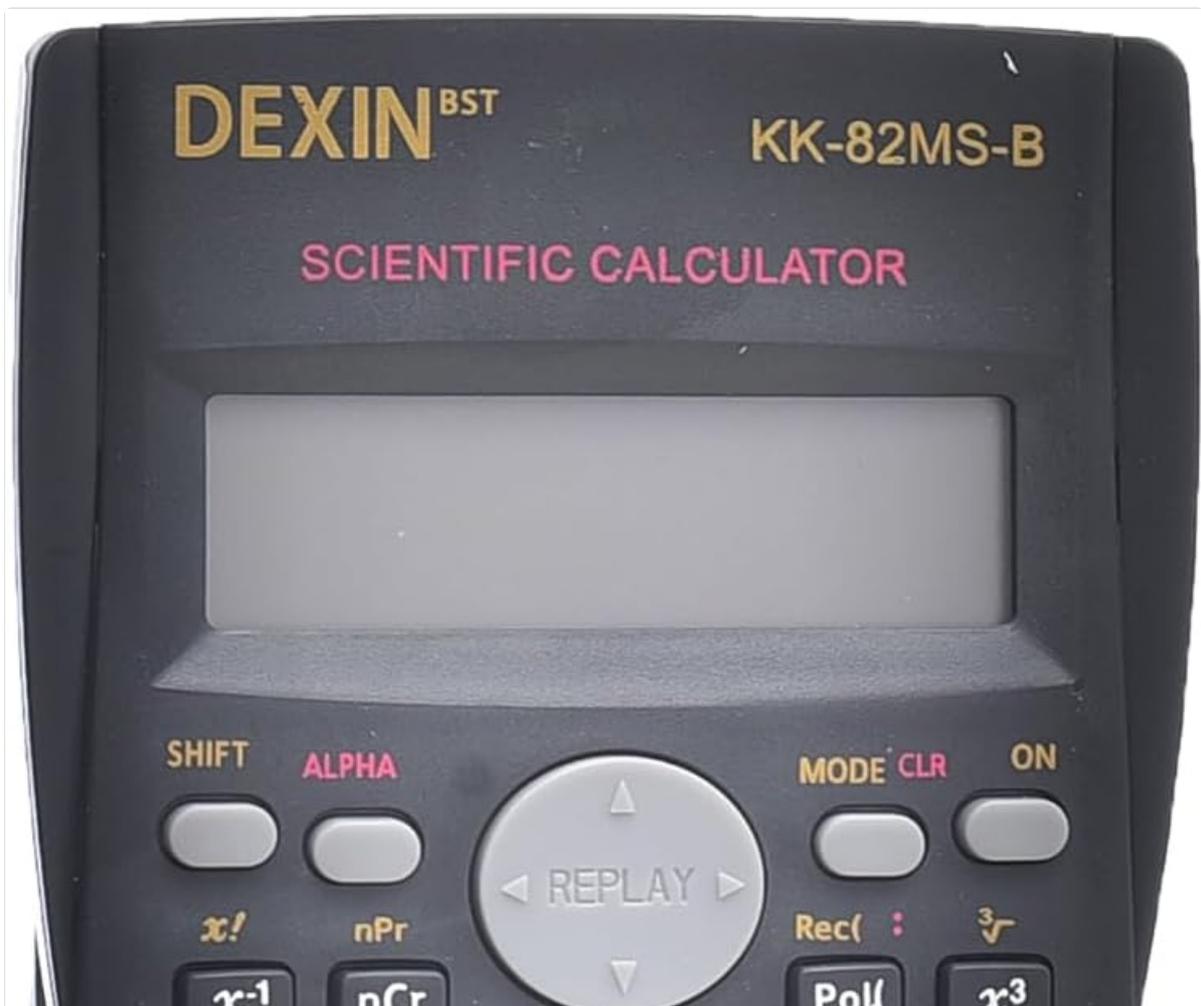




Image: Front view of the Dexin KK-82MS-B calculator, displaying its two-line LCD screen and comprehensive keypad for various functions.

LCD Display

The calculator features a two-line LCD display. The upper line typically shows the input expression, while the lower line displays the calculation result. The high-resolution screen ensures clear readability of numbers and symbols.



Image: Angled view of the Dexin KK-82MS-B calculator, showcasing its ergonomic design and key layout.

MAINTENANCE

- **Cleaning:** Wipe the calculator with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the casing or display.
- **Storage:** Store the calculator in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, it is advisable to remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the calculator or subjecting it to strong impacts. Do not attempt to disassemble the unit, as this will void any warranty and may cause damage.

TROUBLESHOOTING

- **Display is blank or dim:**
 - Check if the calculator is turned on.
 - Replace the batteries with new ones.
 - Ensure batteries are inserted with correct polarity.
- **Incorrect calculations:**
 - Press **AC** to clear any previous calculations or error states.
 - Check the current calculation mode (e.g., DEG/RAD, STAT mode). Reset to default if necessary by pressing **SHIFT** then **CLR** (Mode).
 - Ensure correct input of numbers and operations.
- **Keys are unresponsive:**

- Clean around the keys to remove any dust or debris.
- Ensure the calculator has sufficient battery power.

SPECIFICATIONS

Feature	Detail
Brand	Dexin
Model Name	KK-82MS-B (Kk 82Ms)
Model Number	6221237572953
Calculator Type	Standard Function / Scientific Calculator
Number of Functions	240
Display Type	LCD (Two-line display)
Power Source	Battery Powered
Color	Black
Item Weight	150 g
Package Dimensions	17.2 x 9.7 x 2.4 cm

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Dexin KK-82MS-B calculator, please refer to the warranty card included with your purchase or contact the retailer or manufacturer directly. Keep your proof of purchase for warranty claims.

For general inquiries or further assistance, please visit the official Dexin website or contact their customer service department.