

[Manuals.plus](#) /

› [PSIDE](#) /

› SILVERCREST® Kitchen Tools SEAD 1800 A1 - Instruction Manual

PSIDE SEAD 1800 A1

SILVERCREST® Kitchen Tools SEAD 1800 A1 - Instruction Manual

Model: SEAD 1800 A1

INTRODUCTION

The SILVERCREST® Kitchen Tools SEAD 1800 A1 is a versatile kitchen appliance designed for preserving jams, fruits, and vegetables, as well as for heating and keeping warm beverages, stews, soups, and other dishes. Featuring a digital display and electronic control, this appliance offers precise temperature and time settings for optimal results. Its large capacity and integrated tap make it suitable for various culinary tasks.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged from the power outlet before cleaning or when not in use.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- This appliance is for household use only. Do not use it outdoors.
- Keep the appliance out of reach of children and pets.
- Surfaces become hot during operation. Use oven mitts or insulated handles when handling.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other heat-sensitive materials.
- Do not overfill the appliance beyond its maximum fill line (24 L usable volume).
- Exercise extreme caution when moving an appliance containing hot liquid.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your SILVERCREST® Kitchen Tools SEAD 1800 A1.



Figure 1: Overall view of the appliance, showing the main body, digital display, control knobs, and integrated tap.



Figure 2: The appliance with the included canning rack, designed to hold jars during the preserving process.



Figure 3: Detail of the integrated tap, demonstrating its use for dispensing beverages like punch.

- **Main Unit:** Enameled casing with thermally insulated handles.
- **Digital Display:** Shows current and preset temperature, and remaining operating time.
- **Control Knobs:** For adjusting temperature and time.
- **Integrated Tap:** For easy dispensing of liquids.
- **Lid:** Covers the main unit during operation.
- **Insert Grid:** For placing jars during preserving.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and check for any damage.
2. **Initial Cleaning:** Before first use, clean the interior of the appliance, the lid, and the insert grid with warm soapy water. Rinse thoroughly and dry.
3. **Placement:** Place the appliance on a flat, stable, and heat-resistant surface. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet (220-240 V, 50 Hz).

OPERATING INSTRUCTIONS

Preserving Jams, Fruits, and Vegetables



Figure 4: The appliance can accommodate up to 14 canning jars in two layers using the insert grid.



Figure 5: Jars filled with preserved goods inside the appliance, ready for processing.

1. Place the insert grid at the bottom of the appliance.
2. Arrange your filled and sealed canning jars on the grid. The appliance can hold up to 14 jars in 2 layers.
3. Fill the appliance with water, ensuring the jars are sufficiently covered, but do not exceed the maximum fill line (24 L usable volume).
4. Place the lid on the appliance.
5. Use the control knobs to set the desired temperature (adjustable from 30 to 100 °C in 1 °C increments) and time (adjustable from 1 to 120 minutes in 1-minute steps).
6. Press the "START/STOP" button to begin the preserving process. The digital display will show the current temperature and

remaining time.

- 7. A beep will sound when the set temperature is reached and again when the set cooking duration is complete.
- 8. Carefully remove the hot jars using appropriate tools after the process is complete.

Heating and Keeping Warm Beverages and Dishes

- 1. Fill the appliance with the desired beverage (e.g., punch, mulled wine) or food (e.g., stew, soup).
- 2. Set the desired temperature using the control knobs. For keeping warm, a lower temperature (e.g., 60-70 °C) is usually sufficient.
- 3. Press the "START/STOP" button.
- 4. Once the desired temperature is reached, the appliance will maintain it.
- 5. Use the integrated tap to dispense beverages directly.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your appliance.

- Always unplug the appliance and allow it to cool completely before cleaning.
- Clean the interior and exterior of the enameled casing with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
- The lid and insert grid can be washed in warm soapy water.
- To clean the tap, run warm water through it. For stubborn residue, disassemble the tap if possible according to specific instructions (not provided here, general advice).
- Do not immerse the main unit in water.
- Dry all parts thoroughly before storing.
- Store the appliance in a dry place.

TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker.
Temperature not reaching set value.	Lid not properly closed; insufficient water; appliance overloaded.	Ensure the lid is securely closed. Check water level. Reduce load if necessary.
Overheating protection activated.	Insufficient liquid; prolonged dry operation.	Unplug the appliance and let it cool down. Add sufficient liquid before restarting. Never operate dry.
Digital display not working.	Power issue; internal malfunction.	Check power connection. If problem persists, contact customer support.

TECHNICAL SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Model Number	SEAD 1800 A1
Power	1800 W
Voltage	220-240 V, 50 Hz
Total Capacity	Approx. 27 L
Usable Volume (max.)	24 L
Temperature Range	30 to 100 °C (in 1 °C increments)
Timer Range	1 to 120 minutes (in 1-minute steps)
Cable Length	110 cm
Material	Steel, Plastic, Silicone
Dimensions (Appliance)	Approx. 46.5 x 37 x 48 cm
Weight (Total)	Approx. 5800 g

WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the manufacturer's customer service. Keep your proof of purchase for warranty claims.

Brand: **PSIDE**

© 2023 PSIDE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CM25WQ3C>

More documents and user manuals: <https://manuals.plus/>