



[Manuals.plus](#) /

› [Kikkerland](#) /

› Kikkerland Hands-Free Book Light BL14 Instruction Manual

Kikkerland BL14

Kikkerland Hands-Free Book Light BL14 Instruction Manual

Model: BL14

INTRODUCTION

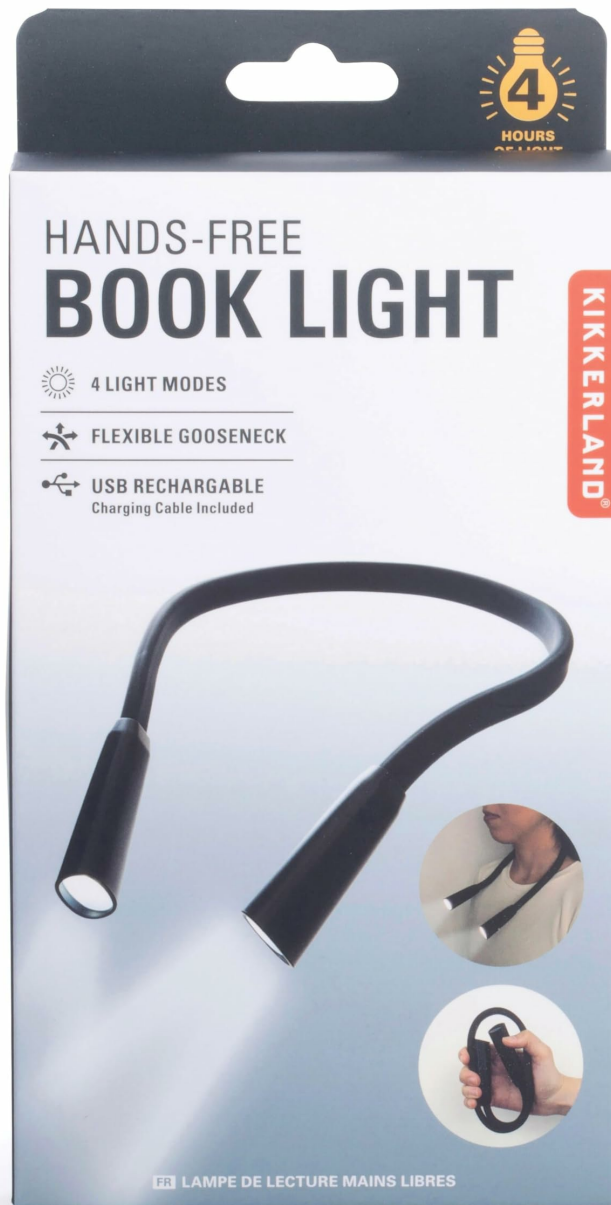


Image: The Kikkerland Hands-Free Book Light BL14, a flexible neck-worn LED light.

Thank you for purchasing the Kikkerland Hands-Free Book Light BL14. This innovative device is designed to provide convenient, adjustable illumination for reading, crafting, or other activities requiring focused light. Its flexible neck and multiple light modes offer comfort and versatility. Please read this manual thoroughly before use to ensure proper operation and maintenance.

Safety Instructions

- Do not expose the device to water or excessive moisture.
- Keep away from extreme temperatures and direct sunlight.
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Use only the provided or a certified USB charging cable.
- Keep out of reach of children.
- Avoid direct eye exposure to the LED light.

Package Contents

Verify that all items are present in your package:

- 1 x Kikkerland Hands-Free Book Light (Model BL14)
- 1 x USB Charging Cable



HANDS-FREE BOOK LIGHT



4 LIGHT MODES



FLEXIBLE GOOSENECK



USB RECHARGABLE
Charging Cable Included

KIKKERLAND®



FR LAMPE DE LECTURE MAINS LIBRES

Image: Front view of the Kikkerland Hands-Free Book Light BL14 retail packaging, showing the product and key features.

SETUP

Initial Charging

1. Before first use, fully charge the book light.
2. Connect the provided USB charging cable to the charging port on the device.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, wall adapter).
4. The charging indicator light will illuminate during charging and turn off when fully charged.

Wearing the Book Light

Gently bend the flexible neck to shape the light around your neck, positioning the two light heads to illuminate your desired area. The flexible design allows for custom adjustment.



Image: A person wearing the flexible book light around their neck, illuminating a book they are holding.

OPERATING INSTRUCTIONS

The Kikkerland Hands-Free Book Light features independent controls for each light head, allowing for customized illumination.

Power On/Off and Light Mode Selection

1. Locate the power/mode button on each light head.
2. **Press the button once:** Turns on the light to the first mode (e.g., warm light).
3. **Press the button a second time:** Switches to the second mode (e.g., cool light).
4. **Press the button a third time:** Switches to the third mode (e.g., mixed light).
5. **Press the button a fourth time:** Switches to the fourth mode (e.g., brighter mixed light).
6. **Press the button a fifth time:** Turns off the light.

Each light head can be operated independently, allowing you to have different light modes or one light off while the other is on.



Image: The book light illuminated with a warm light setting, showing both light heads active.



Image: The book light illuminated with a cool white light setting, showing both light heads active.

MAINTENANCE

Cleaning

Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.

Storage

When not in use for extended periods, store the book light in a cool, dry place. It is recommended to fully charge the device every 3-6 months to maintain battery health.

TROUBLESHOOTING

- **Light does not turn on:**
 - Ensure the device is charged. Connect it to a power source using the USB cable.
 - Verify that the power/mode button is being pressed correctly.

- **Light is dim:**
 - The battery may be low. Recharge the device.
 - Ensure you have selected the desired brightness mode.
- **Charging indicator does not light up:**
 - Check the USB cable connection at both ends.
 - Try a different USB port or power adapter.
 - Ensure the charging cable is not damaged.

SPECIFICATIONS

Model Number	BL14
Brand	Kikkerland
Material	ABS, Silicone, Steel, Lithium Polymer Battery, Electronic Components
Weight	49 Grams
Dimensions (L x W x H)	62.5 cm x 2 cm x 3 cm (approximate, flexible)
Light Type	LED
Power Source	Battery Powered (Rechargeable via USB)
Control Method	Touch Button
Light Modes	4 adjustable light settings (Warm, Cool, Mixed, Brighter Mixed)
Color	Black
Connectivity	USB (for charging)
Indoor/Outdoor Use	Indoor Use Only

WARRANTY AND SUPPORT

The Kikkerland Hands-Free Book Light BL14 comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage caused by misuse, abuse, accident, or neglect.
- Damage from unauthorized repairs or modifications.
- Normal wear and tear.

For warranty claims or technical support, please contact Kikkerland customer service through their official website or the retailer where the product was purchased. Please have your proof of purchase and model number (BL14) available.