

TOGETDREAM vegetable chopper

TOGETDREAM Electric 4-in-1 Vegetable Slicer Set User Manual

Model: vegetable chopper

INTRODUCTION

Thank you for purchasing the TOGETDREAM Electric 4-in-1 Vegetable Slicer Set. This versatile kitchen appliance is designed to simplify your food preparation tasks, offering chopping, slicing, and whisking functions. Please read this manual thoroughly before first use to ensure safe operation, optimal performance, and proper maintenance of your device. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using electrical appliances. This includes:

- **Read all instructions:** Familiarize yourself with the appliance before operation.
- **Keep away from children:** This appliance is not intended for use by children. Keep plastic bags away from children to avoid suffocation.
- **Electrical Safety:** Do not immerse the motor unit in water or other liquids. Ensure the charging voltage matches the standard. Avoid electric shock.
- **Sharp Blades:** Blades are very sharp. Handle with extreme care during assembly, disassembly, and cleaning to prevent injury.
- **Proper Use:** Use the appliance only for its intended household purpose as described in this manual.
- **Avoid Overfilling:** Do not exceed the maximum fill level of the container to prevent motor strain and spills.
- **Secure Assembly:** Ensure all parts are correctly assembled and locked before operating.
- **Unplug When Not In Use:** Always unplug the appliance from the power source before cleaning, assembling, disassembling, or when not in use.
- **Damage Inspection:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- **Charging:** Only use the provided charging cable. Do not attempt to charge the product alone if you are a child.

Batch Number:20240806

! Warnung:
 Um Erstickten zu vermeiden, halten Sie Kinder von Plastiktüten fern.
 Kinder dürfen das Produkt nicht allein aufladen.
 Bitte folgen Sie den Anweisungen.Vorsicht vor Stromschlag.
 Bitte beachten Sie den Spannungsstandard.

! Avertissement:
 Pour éviter la suffocation, gardez les enfants loin des sacs en plastique.
 Les enfants ne doivent pas charger le produit seul.
 Veuillez suivre les instructions. Attention aux électrocutions.

! Attention:
 Per evitare il soffocamento, tenere i bambini lontani dalle borse di plastica.
 I bambini non sono autorizzati a caricare il prodotto da soli.
 Si prega di seguire le istruzioni. Attenzione alle scosse elettriche.

! Si prega di notare lo standard di tensione.

! Advertencia:
 Para evitar la asfixia, mantenga a los niños alejados de las bolsas de plástico.
 Los niños no pueden cargar el producto por separado.
 Siga las instrucciones. Cuidado con la descarga eléctrica.

! Preste atención al estándar de voltaje.

! Waarschuwing:
 Om verstikking te voorkomen, houd kinderen uit de plastic zak.
 Kinderen mogen het product niet alleen opladen.
 Volg de instructies op. Pas op voor elektrische schokken. Let op de spanningsnorm.

! Ostrzeżenia:
 Aby uniknąć uduszenia, trzymaj dzieci z dala od plastikowych toreb.
 Dzieci nie mogą ładować produktu samodzielnie.
 Proszę postępować zgodnie z instrukcjami. Uważaj na porażenie

! Proszę zwrócić uwagę na standard napięcia.

! Varning:
 För att undvika kvävning, håll barn borta från plastpåsar.
 Barn får inte ladda produkten ensam.
 Följ instruktionerna. Akta dig för elektriska stötar. Observera spänningsstandarderna.








 Séparez les éléments avant de trier

Figure 1: Safety and warning labels for the product, emphasizing child safety, electrical precautions, and disposal information.

PRODUCT COMPONENTS

Your TOGETDREAM Electric 4-in-1 Vegetable Slicer Set includes the following parts:

- Main Motor Unit (Handheld)
- Chopping/Mincing Blade
- Transparent Chopping Bowl/Container
- Slicing Attachment (with push rod)
- Whisk Attachments (2 sizes)
- USB Charging Cable (Type-C)
- Spatula
- Fruit/Vegetable Cutters (various shapes)



Figure 2: Overview of all included components.

SETUP AND ASSEMBLY

Before first use, ensure the appliance is fully charged. Wash all parts that will come into contact with food (chopping bowl, blades, slicing attachment, whisks, cutters) with warm soapy water, rinse thoroughly, and dry.

Charging the Device

1. Locate the USB charging port on the main motor unit.
2. Connect the provided USB charging cable to the port and plug the other end into a compatible USB power adapter (not included) or a USB port.
3. The indicator light will show charging status. Charge until fully charged before initial use.

Assembling for Chopping/Mincing

1. Place the chopping blade onto the central pin inside the transparent chopping bowl. Ensure it sits securely.

2. Add your ingredients into the chopping bowl. Do not overfill.
3. Align the main motor unit with the chopping bowl and twist or press down to secure it. Ensure it is locked in place.

Assembling for Slicing

1. Attach the slicing attachment to the main motor unit. Ensure it clicks into place.
2. The slicing attachment has an opening for ingredients and a chute for sliced food.

Assembling for Whisking/Blending

1. Select the desired whisk attachment.
2. Insert the whisk attachment into the designated slot on the main motor unit until it is secure.

OPERATING INSTRUCTIONS

Chopping and Mincing

1. Prepare ingredients by cutting them into smaller pieces if necessary to fit into the chopping bowl.
2. Assemble the chopping unit as described in the "Setup" section.
3. Press and hold the power button on the main motor unit to start chopping. Release to stop.
4. Pulse for coarse chopping or hold longer for finer results. Do not operate continuously for more than 30 seconds to prevent overheating.
5. Once desired consistency is reached, release the button, disassemble carefully, and remove processed food.

Multifunctional Food Processor



Figure 3: Examples of chopping and mincing various ingredients.



Figure 4: The chopper is suitable for preparing baby food supplements.

Slicing

1. Assemble the slicing attachment to the main motor unit.
2. Place a plate or container beneath the slicing chute to collect the sliced food.
3. Insert ingredients (e.g., chili, cucumber, carrots) into the top opening of the slicing attachment.
4. Use the push rod to gently guide the ingredients towards the blade while pressing the power button.
5. Exercise caution and keep fingers away from the blade.



Figure 5: Using the slicing attachment with decorative cutters.



Figure 6: Direct slicing onto a serving dish.

Whisking and Blending

1. Attach the desired whisk to the main motor unit.
2. Immerse the whisk into the ingredients you wish to blend or whisk (e.g., eggs, cream).
3. Press and hold the power button to start whisking. Move the whisk gently to ensure even mixing.
4. Release the button to stop.



Figure 7: Using the whisk attachment for blending.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your appliance.

- **Always unplug:** Ensure the device is turned off and disconnected from any power source before cleaning.
- **Motor Unit:** The main motor unit is **NOT** waterproof. Wipe it clean with a damp cloth. Do not immerse it in water or rinse under running water.
- **Blades and Attachments:** The chopping blade, whisk attachments, slicing attachment, chopping bowl, and decorative cutters are dishwasher safe or can be hand-washed with warm, soapy water. Handle blades with extreme care.
- **Drying:** Ensure all parts are completely dry before reassembling or storing.
- **Storage:** Store the appliance and its accessories in a clean, dry place, out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is low or depleted.	Charge the appliance fully using the provided USB cable.
Appliance stops during operation.	Overloaded with ingredients. Battery is low.	Reduce the amount of ingredients. Charge the appliance.
Ingredients are not chopped/sliced evenly.	Ingredients are too large or too few. Not operating long enough.	Cut ingredients into smaller, uniform pieces. Process for a longer duration or use pulse action.
Slicing attachment is not working effectively.	Ingredients are too soft or too hard. Improper insertion of ingredients.	Ensure ingredients are firm enough for slicing. Guide ingredients properly with the push rod.

SPECIFICATIONS

- Brand:** TOGETDREAM
- Model Name:** vegetable chopper
- Special Feature:** Multipurpose (Chop, Slice, Whisk)
- Power Source:** Battery Powered (USB Rechargeable)
- Blade Material:** Stainless Steel
- Product Dimensions:** 7.48"D x 4.92"W x 3.74"H
- Item Weight:** 1.39 pounds
- Included Components:** Container, Blades, Whisks, Slicing Attachment, Cutters, Spatula, USB Cable
- Care Instructions:** Hand Wash (Motor Unit: Wipe Clean), Dishwasher Safe (Attachments)

WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical support, or any questions regarding your TOGETDREAM Electric 4-in-1 Vegetable Slicer Set, please contact the retailer or manufacturer directly. Please have your purchase receipt and model number (vegetable chopper) available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question