

- [Manuals.plus](#) /
- › [LUXOAK](#) /
 - › LUXOAK 80" Fireplace TV Stand User Manual

LUXOAK 80" Fireplace TV Stand

LUXOAK 80" Fireplace TV Stand User Manual

Model: 80" Fireplace TV Stand (ASIN: B0CM32Y8TP)
Brand: LUXOAK

1. PRODUCT OVERVIEW

The LUXOAK 80" Fireplace TV Stand is a modern media console designed to accommodate TVs up to 90 inches. It integrates a 40-inch electric fireplace, open storage, and 12-color LED lighting to enhance your living space. This manual provides essential information for assembly, operation, and maintenance.



Figure 1.1: LUXOAK 80" Fireplace TV Stand with electric fireplace and LED lights.

Key Features:

- **40" Electric Fireplace:** Can be operated with or without heat. Features temperature control (62°F to 82°F), 8 realistic flame colors, a timer (1-8 hours), and a 5-level dimmer. Controlled via remote or touch screen. Max 4800 BTU output.
- **Modern Design:** Mirrored fronts with a matte body complement various furniture styles.
- **LED Lighting:** 12-color LED light system adds ambiance to your living or gaming room.
- **Large Storage Space:** Includes open storage and two cabinets for media components, books, and accessories.
- **High Gloss Surface:** Easy to clean and maintain.

2. SAFETY INFORMATION

Please read and understand all safety warnings before assembly and operation.

- **Heat Source:** This product contains a heat source. Do not touch the fireplace insert while in use or immediately

after use to prevent burns.

- **Weight:** This product is heavy and requires assembly. Use caution when handling to prevent injuries.
- **Sharp Edges:** Be aware of sharp edges that could cause cuts during assembly.
- **Instructions:** Always follow the provided instructions for safe assembly and usage.

3. COMPONENTS LIST

Ensure all components are present before beginning assembly. The product ships in two separate boxes.

- 1 x TV Stand
- 1 x Electric Fireplace
- 1 x Installation Guide
- 1 x Screw Pack

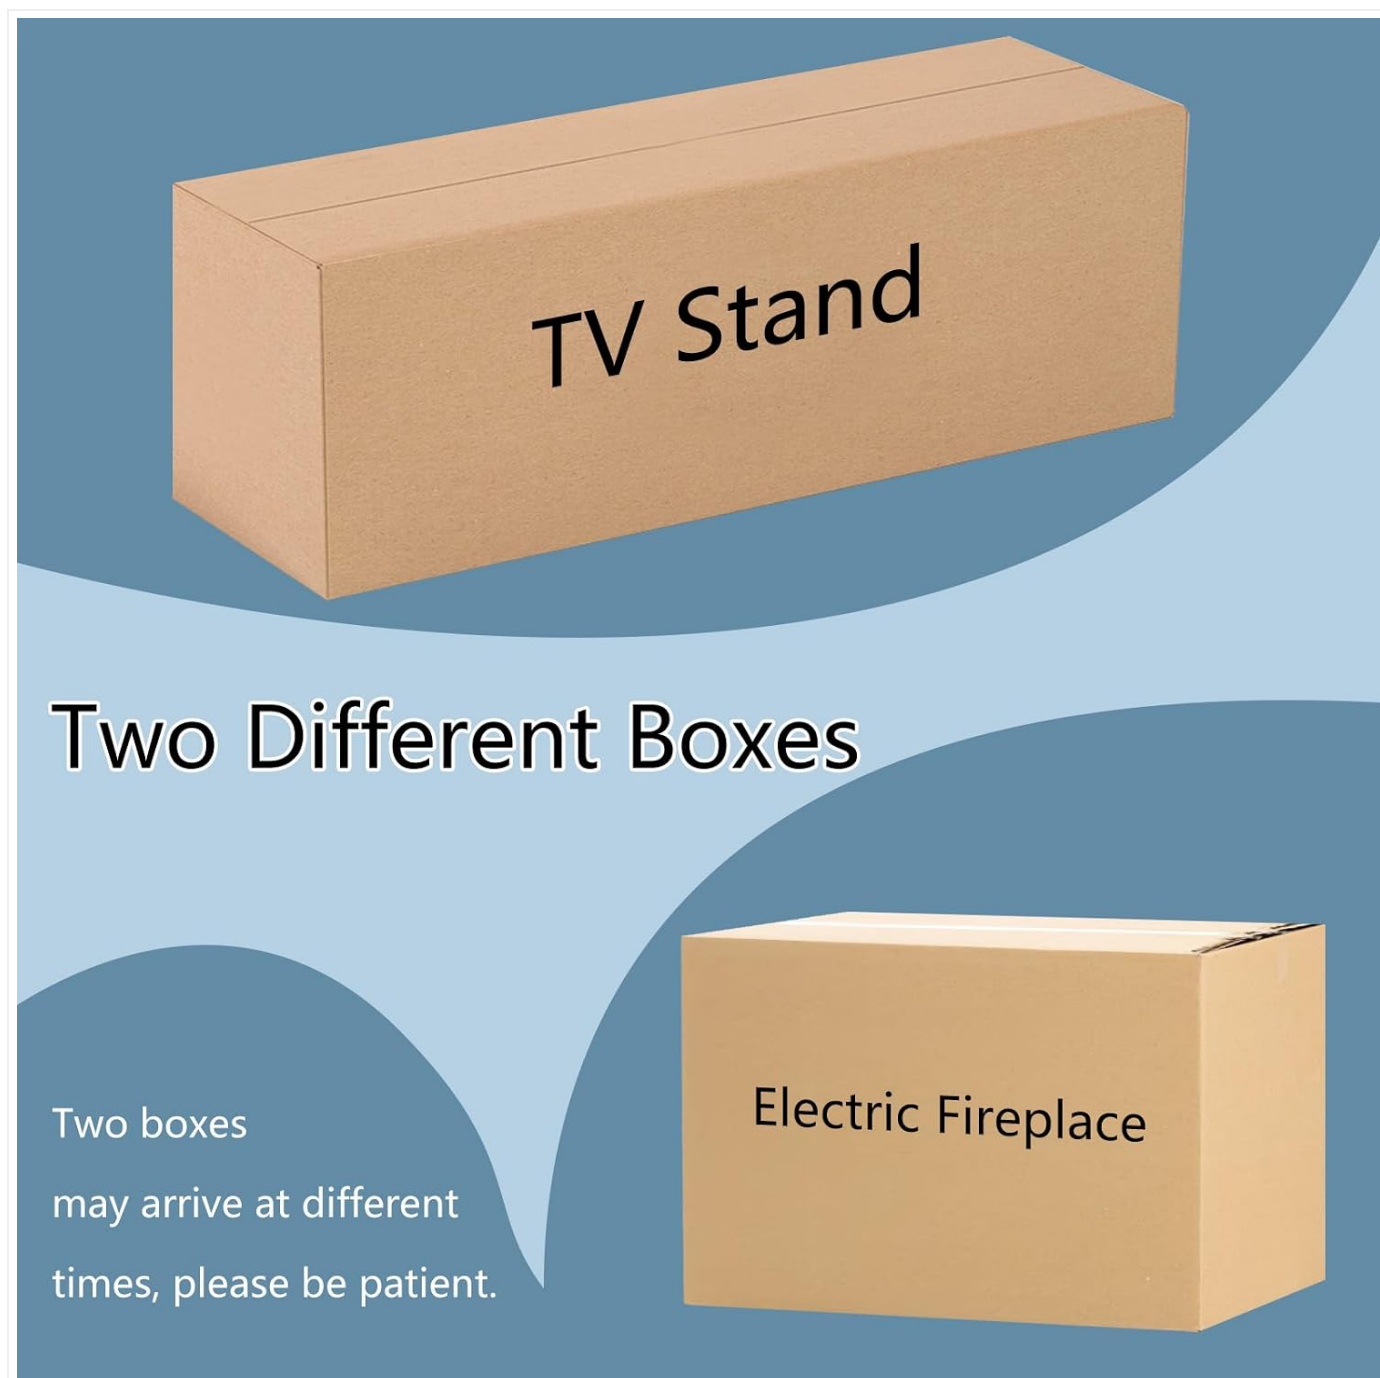 


Figure 3.1: The TV stand and electric fireplace are shipped in two separate boxes.

 
4. SETUP AND ASSEMBLY

The LUXOAK TV cabinet includes detailed instructions and fittings for assembly. Assembly is designed to be completed within approximately one hour for the 80-inch TV stand.

- Refer to the included Installation Guide for step-by-step assembly instructions.
- Ensure all parts are accounted for before starting.
- Use the provided screw pack and any necessary tools as indicated in the guide.
- For optimal stability, assemble on a clean, flat surface.

STAINLESS STEEL POLES

SUPPORTING TOP PANEL
FORMS OPEN STORAGE SPACE

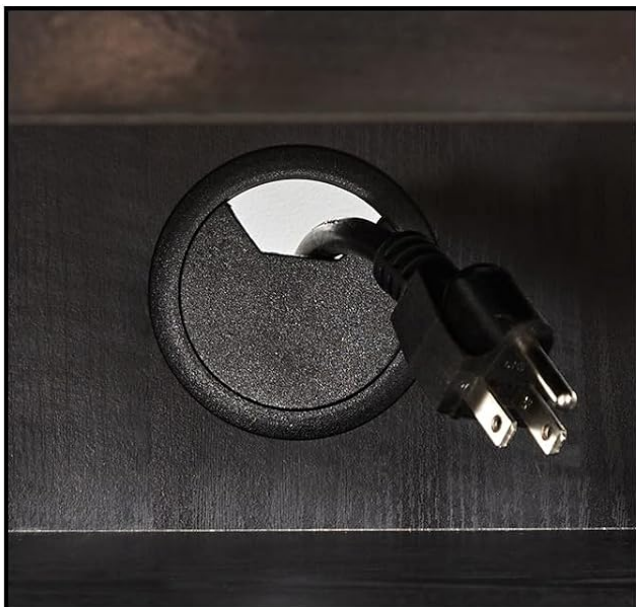

CABLE MANAGEMENT

MAKE THE WIRES NO
LONGER MESS UP

Figure 4.1: Detail of stainless steel support poles and cable management feature.

5. OPERATING INSTRUCTIONS

5.1 Electric Fireplace Operation

The 40-inch electric fireplace can be controlled using either the included remote control or the touch screen panel on the unit.

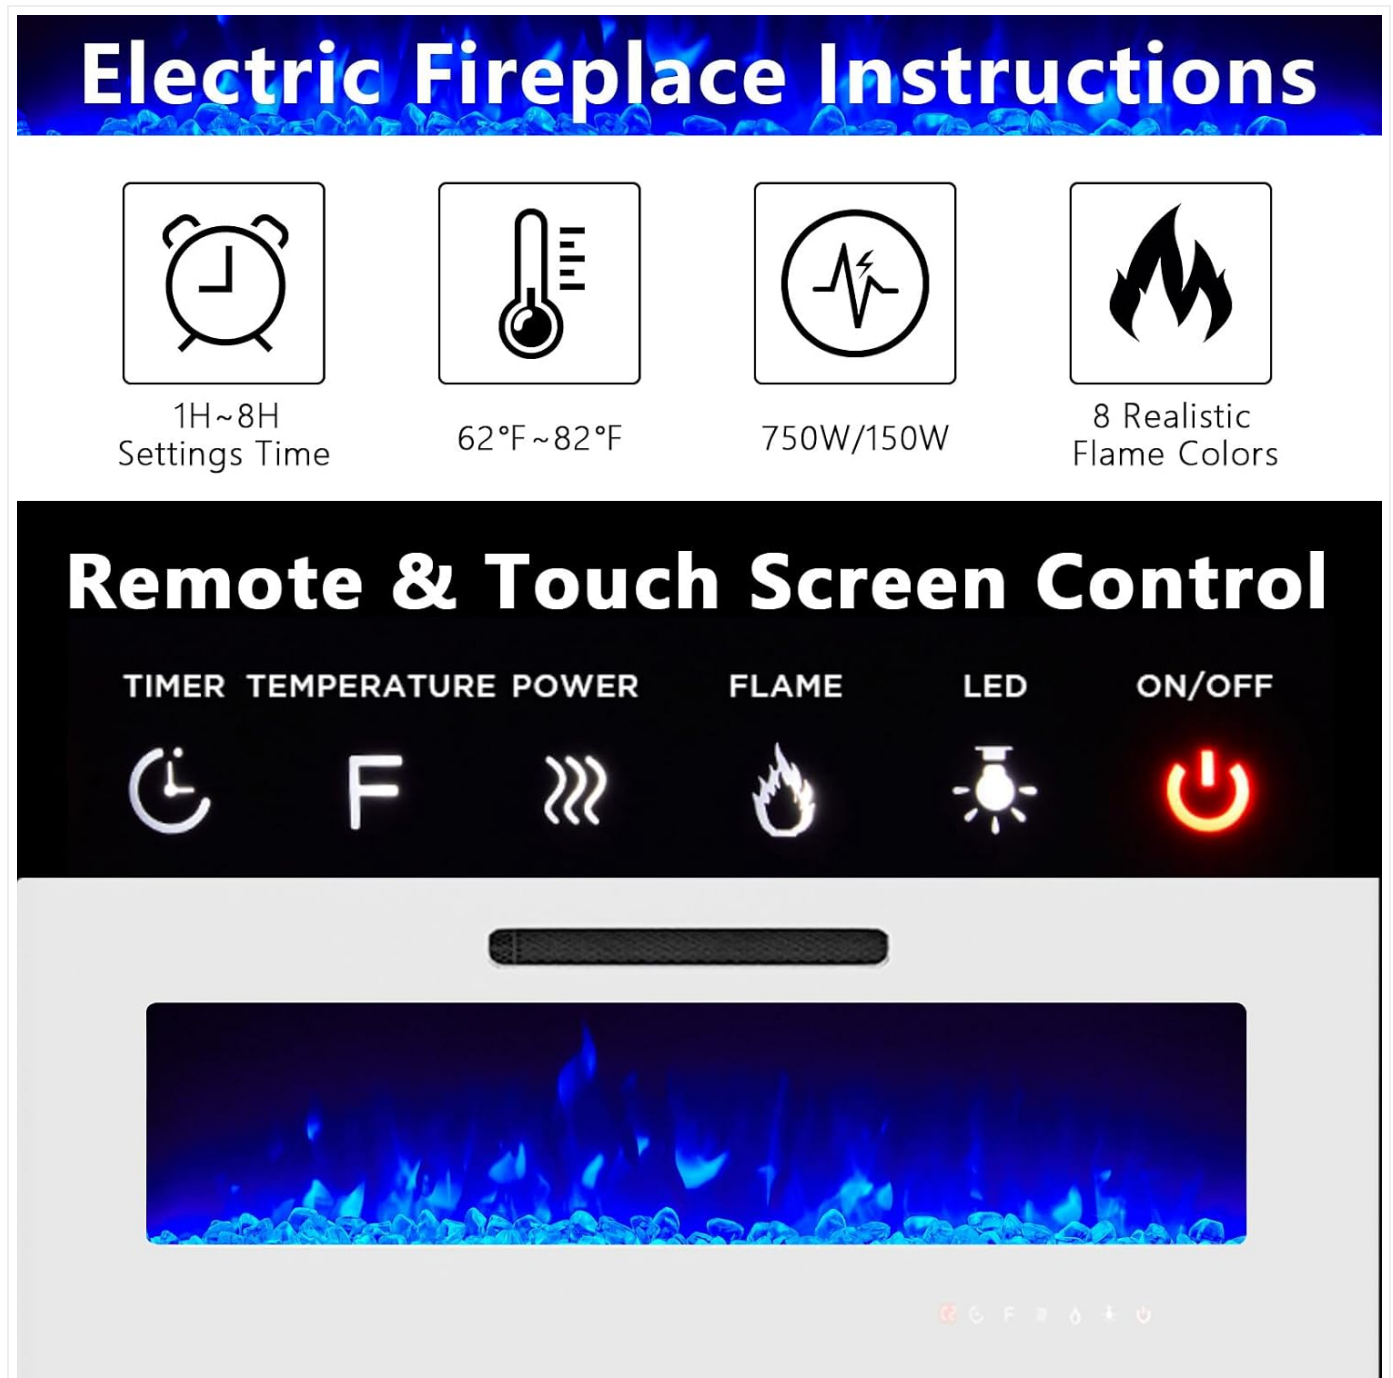 


Figure 5.1: Electric Fireplace control icons.

- **Power (ON/OFF):** Press the power button to turn the fireplace on or off.
- **Heat Settings:** Adjust the temperature between 62°F and 82°F. The fireplace can be used with or without heat.
- **Flame Colors:** Select from 8 realistic flame colors to match your mood or decor.
- **Dimmer:** Adjust the flame brightness with 5 levels of dimmer control.
- **Timer:** Set the operating time from 1 to 8 hours.

5.2 LED Lights Operation

The TV stand features 12-color LED lights to create a dynamic ambiance.

- The LED lights are typically controlled via a separate switch or remote, as indicated in the assembly guide.
- Cycle through the 12 available colors to customize your lighting.

Video 5.2: Overview of the 80" Fireplace TV Stand features, including LED lights and fireplace operation. (Source: boliyangnet)

6. MAINTENANCE

Proper care will ensure the longevity and appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a damp cloth. Avoid harsh chemicals that may damage the finish.
- **Dusting:** Regularly dust the unit to prevent buildup.
- **Mirrored Fronts:** Clean mirrored surfaces with a glass cleaner and a soft cloth to avoid streaks.



Figure 6.1: Mirrored fronts are easy to clean and help maintain a tidy appearance.

7. TROUBLESHOOTING

If you encounter any issues with your LUXOAK Fireplace TV Stand, please refer to the following general advice:

- **Fireplace Not Heating/Lighting:** Check if the unit is properly plugged into a working power outlet. Ensure the power switch on the unit is in the 'ON' position.
- **LED Lights Not Working:** Verify all connections for the LED strip are secure. Check if the power adapter for the LEDs is connected.
- **Missing Parts/Damaged Components:** If any parts are missing or damaged upon arrival, contact customer support immediately.

For further assistance, please contact LUXOAK customer support.

8. SPECIFICATIONS

Attribute	Value
Color	Black/White
Brand	LUXOAK
Size	80"
Item Weight	120 Pounds
Style	Modern
Item Dimensions (L x W x H)	80 x 14 x 23 inches
Fireplace Dimensions (W x H)	40 x 14 inches
Max Load Capacity (Top)	250 lbs
Max TV Screen Size	90"
Material Type	Wood
UPC	199169051319
Required Assembly	Yes

For TV up to 90"

250
LBS

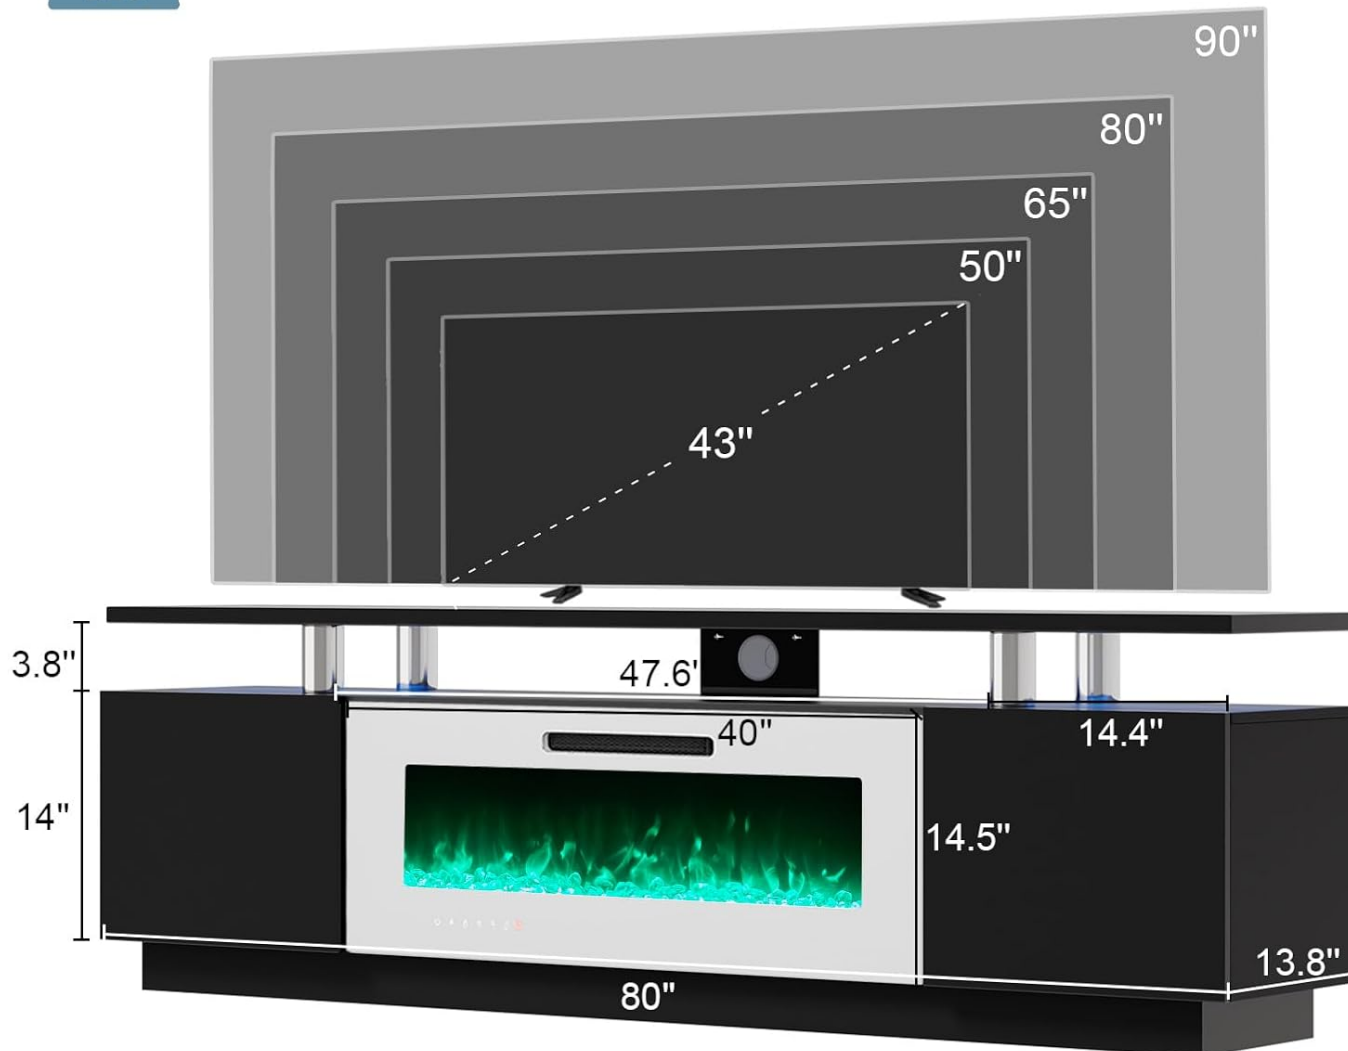 


Figure 8.1: Product dimensions and TV size compatibility.

9. WARRANTY AND SUPPORT

For any questions regarding your LUXOAK 80" Fireplace TV Stand, including assembly, operation, or parts, please contact the seller, boliyangnet, directly through your purchase platform. They have a professional service team available to assist you.

This product typically includes a 30-day easy return policy. For details on specific warranty coverage, please refer to your purchase documentation or contact the seller.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CM32Y8TP>

More documents and user manuals: **<https://manuals.plus/>**