

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [COBIZI](#) /
- › [COBIZI 10x20 Pop Up Canopy Tent User Manual](#)

COBIZI 10x20 canopy

COBIZI 10x20 Pop Up Canopy Tent User Manual

Model: 10x20 canopy | Brand: COBIZI

1. PRODUCT OVERVIEW

The COBIZI 10x20 Pop Up Canopy Tent is a versatile outdoor shelter designed for various events such as parties, beach outings, camping, and commercial use. It provides a spacious 18 square meters of shade, comfortably accommodating 10-15 people. Key features include easy setup, waterproof and UV-protective fabric, and removable sidewalls for customizable configurations.



Figure 1: COBIZI 10x20 Pop Up Canopy Tent with included components and various setup examples.

Key Features:

- **Easy Setup and Takedown:** Designed for quick assembly by two people without tools.
- **Waterproof and UV Protection:** Constructed with 210D Oxford fabric, 99.99% waterproof, and UPF 50+ UV silver coating.
- **Spacious Design:** 10x20 feet (18 square meters) provides ample shade for 10-15 people.
- **Adjustable Height:** Features 3 adjustable heights (74, 76, and 79 inches).
- **Versatile Removable Sidewalls:** Includes 6 detachable sidewalls (4 with arched windows, 2 with zippered doors).
- **Durable Construction:** Sturdy, powder-coated steel frame for rust resistance and longevity.

2. SAFETY INFORMATION

Please read and understand all safety warnings before setting up or using the COBIZI Pop Up Canopy Tent. Failure to follow these instructions may result in injury or damage to the product.

- **Weather Conditions:** Do not use the canopy in severe weather conditions, including strong winds, heavy rain, snow, or thunderstorms. It is recommended that the tent be folded and stored indoors in such conditions to prevent damage and ensure safety.
- **Anchoring:** Always properly anchor the canopy using the provided ropes and stakes to prevent it from lifting or moving in windy conditions. Additional weights (e.g., sandbags, water bags) are highly recommended for increased stability, especially on hard surfaces where stakes cannot be used.
- **Assembly:** Ensure at least two people are present for setup and takedown to prevent injury and ensure proper assembly.
- **Clearance:** Set up the canopy on a level surface, clear of overhead obstructions like tree branches or power lines.
- **Fire Safety:** Keep all flame and heat sources away from the canopy fabric. The fabric is not fireproof.
- **Children and Pets:** Keep children and pets away from the canopy during setup and takedown. Do not allow them to play unsupervised under or around the canopy.

⚠ WARNING: This canopy is a temporary structure and is not designed for permanent installation. Always exercise caution and prioritize safety during use.


3. SETUP INSTRUCTIONS

Setting up your COBIZI Pop Up Canopy Tent is designed to be straightforward and requires no tools. For detailed visual instructions, please refer to the included PDF installation manual and the video below.

Components Checklist:

- 1 x Folding Shelter Tent (Canopy Top attached to frame)
- 6 x Sidewalls (4 with arched windows, 2 with zippered doors)
- 6 x Ropes
- 12 x Stakes
- 1 x Carry Bag
- 1 x User Manual (this document)

PACKAGE LIST

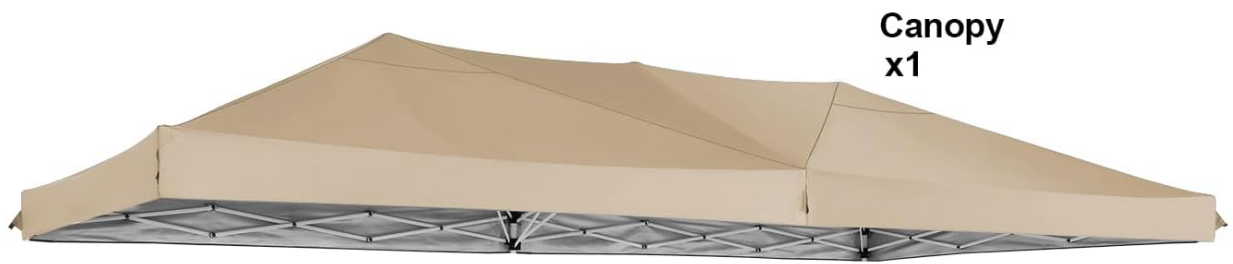

Canopy
x1



Sidewall
with Zipper x2



Sidewall with
PVC Window x2




Canopy Frame
x1



Carry Bag
x1



6 x Ropes

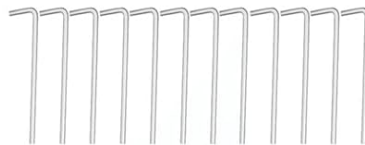

12 x Stakes



1 x Manual

Figure 2: All components included in the COBIZI 10x20 Pop Up Canopy Tent package.

Step-by-Step Setup:

- Step 1: Open the Gazebo Frame.** With two people, grasp opposite legs of the folded frame. Slowly pull outwards, allowing the frame to expand partially. Do not fully extend yet.
- Step 2: Position the Canopy on the Frame.** If the canopy top is not pre-attached, carefully place it over the partially opened frame, ensuring the corners align. Secure the canopy to the frame using any attached Velcro straps or clips.
- Step 3: Fully Extend and Lock the Frame.** Continue pulling the legs outwards until the frame is fully extended and the top canopy is taut. Engage the spring clips or thumb locks on each leg to secure the frame in the open position.
- Step 4: Adjust Height.** Press the thumb-pressed push buttons on each leg to adjust the height to your desired level (74, 76, or 79 inches). Ensure all four legs are set to the same height for stability.
- Step 5: Attach Sidewalls (Optional).** Attach the desired sidewalls using the Velcro fasteners or zippers. The 4 arched window sidewalls and 2 zippered door sidewalls can be arranged as needed.

6. **Step 6: Secure with Ropes and Stakes.** Use the provided ropes and stakes to firmly anchor the canopy to the ground. For optimal stability, especially in light wind, use all anchor points.

EASY TO SET UP



STEP 1:
Open the gazebo frame first



STEP 2:
Put the gazebo on the frame



STEP 3:
Put it up and attach the side panels

Adjust the height according to your needs, please check the manual for detailed steps

Figure 3: Visual guide for the initial setup steps of the canopy tent.

Setup Video:

Your browser does not support the video tag.

Video 1: Official COBIZI 10x20 Waterproof Canopy Tent for Party setup and feature overview. This video demonstrates the ease of assembly and highlights key product attributes.

4. OPERATING INSTRUCTIONS

Once set up, your COBIZI Pop Up Canopy Tent offers flexibility for various uses. Understanding its features will help you maximize its utility.

Adjusting Height:

The canopy features three adjustable height settings to suit different needs and environments. To adjust the height:

1. Locate the thumb-pressed push button on each leg.
2. While supporting the frame, press the button and slide the inner leg up or down to the desired height.
3. Ensure the button clicks into place, securing the leg at the chosen height. Repeat for all four legs, ensuring they are all at the same level for stability.



Figure 4: Illustration of the 3 adjustable height settings for the canopy tent.

Using Removable Sidewalls:

The 6 detachable sidewalls provide versatility for privacy, weather protection, or open-air events. They include 4 sidewalls with arched windows and 2 sidewalls with zippered doors.

- **Attachment:** Sidewalls attach to the canopy frame and to each other using Velcro straps and zippers.
- **Configuration:** You can use all 6 sidewalls for full enclosure, or fewer for partial coverage. The zippered doors allow for easy entry and exit.
- **Storage:** When not in use, detach the sidewalls, fold them neatly, and store them in the carry bag.



Figure 5: Examples of various sidewall configurations for different event needs.

5. MAINTENANCE

Proper maintenance will extend the life of your COBIZI Pop Up Canopy Tent and ensure its continued performance.

Cleaning:

- **Fabric:** Clean the canopy fabric and sidewalls with mild soap and water. Do not use harsh detergents or abrasive cleaners, as these can damage the waterproof coating and UV protection.
- **Frame:** Wipe down the steel frame with a damp cloth to remove dirt and debris. Dry thoroughly to prevent rust.
- **Drying:** Ensure all fabric components are completely dry before folding and storing to prevent mold and mildew growth.

Storage:

- Always fold the canopy and sidewalls neatly and store them in the provided carry bag.

- Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Important Note:** For your safety and the long-term use of the tent, it is strongly recommended that the 10x20 canopy tent be folded and stored indoors in extreme weather conditions (e.g., heavy winds, snow, prolonged rain).

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your COBIZI Pop Up Canopy Tent.

Problem	Possible Cause	Solution
Canopy is unstable or sways in light wind.	Insufficient anchoring; legs not fully extended or locked; uneven ground.	Ensure all legs are fully extended and locked. Verify all ropes and stakes are securely fastened. Use additional weights (e.g., sandbags) for extra stability. Set up on level ground.
Water pooling on the canopy top.	Canopy not taut enough; improper height adjustment; heavy rainfall.	Ensure the canopy fabric is stretched tightly over the frame. Verify legs are at the highest setting if possible to create more slope. In heavy rain, it's best to take down the canopy.
Difficulty extending or collapsing the frame.	Frame components are stiff or misaligned; dirt in joints.	Ensure two people are assisting. Gently wiggle the frame while extending/collapsing. Clean any dirt or debris from the joints. Apply a silicone-based lubricant if necessary.
Sidewalls do not fit properly.	Incorrect orientation; not fully zipped/Velcroed.	Ensure sidewalls are oriented correctly (e.g., doors facing desired direction). Fully zip and secure all Velcro fasteners.

7. SPECIFICATIONS

Attribute	Detail
Brand	COBIZI
Model Number	10x20 canopy
Product Dimensions	20"L x 10"W x 9"H (approx. 600cm L x 300cm W x 275cm H)
Coverage Area	194 sq ft (approx. 18 sq meters)
Material	210D Oxford fabric (canopy), Metal (frame)
Color	Khaki
Item Weight	57 Pounds (approx. 25.85 kg)
Water Resistance Level	Waterproof (99.99%)

Attribute	Detail
UV Protection	UPF 50+ (blocks 99.99% of harmful UV rays)
Adjustable Heights	74 inches, 76 inches, 79 inches
Sidewalls Included	6 (4 with arched windows, 2 with zippered doors)
Assembly Required	Yes (2 people recommended)

8. WARRANTY AND SUPPORT

COBIZI is committed to providing high-quality products and customer satisfaction. For any questions, concerns, or issues regarding your 10x20 Pop Up Canopy Tent, please do not hesitate to contact our customer support team.

- **Customer Service:** We aim to respond to all inquiries within 24 hours. Please refer to your purchase platform or the COBIZI official website for specific contact methods.
- **Returns:** This product typically comes with a 30-day easy returns policy. Please check your purchase details for specific return conditions.
- **Protection Plans:** Extended protection plans may be available for purchase to cover your product beyond the standard warranty. Please inquire at the point of purchase for details on 2-Year or 3-Year protection plans.

For additional information and support, you may visit the [COBIZI Store on Amazon](#).