

## VINABTY RC159

# VINABTY RC159 Replacement Remote Control User Manual

For JTC Ultra HD Smart TVs

## INTRODUCTION

This manual provides instructions for the VINABTY RC159 Replacement Remote Control. This remote is designed to function as a direct replacement for your original JTC Ultra HD Smart TV remote, offering full control over your television's features.

### Compatible Models:

- GU0D-S65U6511M
- GY0D-S75U7511MM
- GU0D-S75U7508M
- GY0D-S65U65129M
- GY06-S55U5521MM
- GY06-S55U55209M
- GY06-S55U55199MC
- GU06-S55U5516MMC
- GU06-S55U5515MQ
- GU06-S55U5514M
- GY06-S50U50109MQ
- GY06-S50U5009SB9M
- GU06-S50U5007M
- GT06-S40F4012MC
- GT06-S32H3200DMC
- GZ06-S32H3174MM
- GT06-S32H31733M
- GU0DD-NSS55N
- GU0DD-NS58N
- GU06D-NS58N
- GU0DD-NS55N
- GT06-S32H3165M

- GU0DD-CSS65
- GU0DD-CS75N



Image: Front view of the VINABTY RC159 Replacement Remote Control, showing all buttons and layout.

## Battery Installation

The RC159 remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back view of the remote control with the battery compartment open, showing where to insert AAA batteries.

**Note:** Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

## OPERATING INSTRUCTIONS

Point the remote control directly at your JTC Ultra HD Smart TV's infrared receiver. Ensure there are no obstructions between the remote and the TV.

### Key Button Functions:

Button	Function
POWER	Turns the TV on or off.
TV/RADIO	Switches between TV and Radio modes.
Number Buttons (0-9)	Direct channel selection.
VOL +/-	Adjusts the volume level.
CH +/-	Changes the channel up or down.
MUTE	Mutes or unmutes the TV sound.
MENU	Accesses the TV's main menu.
OK / Navigation Arrows	Confirms selections and navigates through menus.
EXIT	Exits the current menu or function.
SOURCE	Selects input sources (HDMI, AV, etc.).
SMART TV	Direct access to Smart TV features.
MEDIA Controls (Play, Pause, Stop, Rewind, Fast Forward)	Controls media playback.

Button	Function
EPG	Accesses the Electronic Program Guide.
TEXT	Activates or deactivates Teletext.
SUBTITLE	Toggles subtitles on or off.

## MAINTENANCE

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

### Storage

When not in use for extended periods, remove the batteries to prevent leakage and potential damage to the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"><li>◦ Check if the batteries are inserted correctly with the correct polarity (+/-).</li><li>◦ Replace old batteries with new ones.</li><li>◦ Ensure there are no obstructions between the remote control and the TV's infrared receiver.</li><li>◦ Make sure you are within the operating range (up to 10 meters).</li></ul>
Some buttons are not working.	<ul style="list-style-type: none"><li>◦ Clean the remote control surface, especially around the buttons, to remove any dirt or debris.</li><li>◦ Ensure the remote is compatible with your specific TV model (refer to the compatibility list).</li></ul>

## SPECIFICATIONS

Feature	Detail
Model Number	RC159
Brand	VINABTY
Control Type	Infrared
Maximum Range	10 meters
Dimensions (L x W x H)	21.5 x 5 x 1.5 cm
Weight	91 grams

