

[Manuals.plus](#) /

> [VINABTY](#) /

> VINABTY Replacement Remote Control for Philips DVP3345V/17 DVP3345V/17X DVD/VCR Player User Manual

## VINABTY DVP3345V/17

# VINABTY Replacement Remote Control User Manual

For Philips DVP3345V/17 and DVP3345V/17X DVD/VCR Players

## INTRODUCTION

This manual provides comprehensive instructions for the VINABTY replacement remote control, designed for use with Philips DVP3345V/17 and DVP3345V/17X DVD/VCR players. Please read this manual carefully to ensure proper operation and to maximize your experience with the remote control.

## PRODUCT OVERVIEW

The VINABTY replacement remote control offers full functionality for your Philips DVD/VCR combo unit. It is designed to replicate the original remote's features, providing seamless control over your device.






**Figure 1:** Front view of the VINABTY replacement remote control. This image displays the full layout of buttons, including power, number keys, playback controls, and function-specific buttons for DVD and VCR operations.



Replace

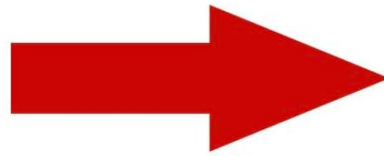

Original


Figure 2: Comparison image showing the VINABTY replacement remote control (left) next to a typical original remote control (right). This illustrates the similar design and button layout for user familiarity.

## SETUP

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



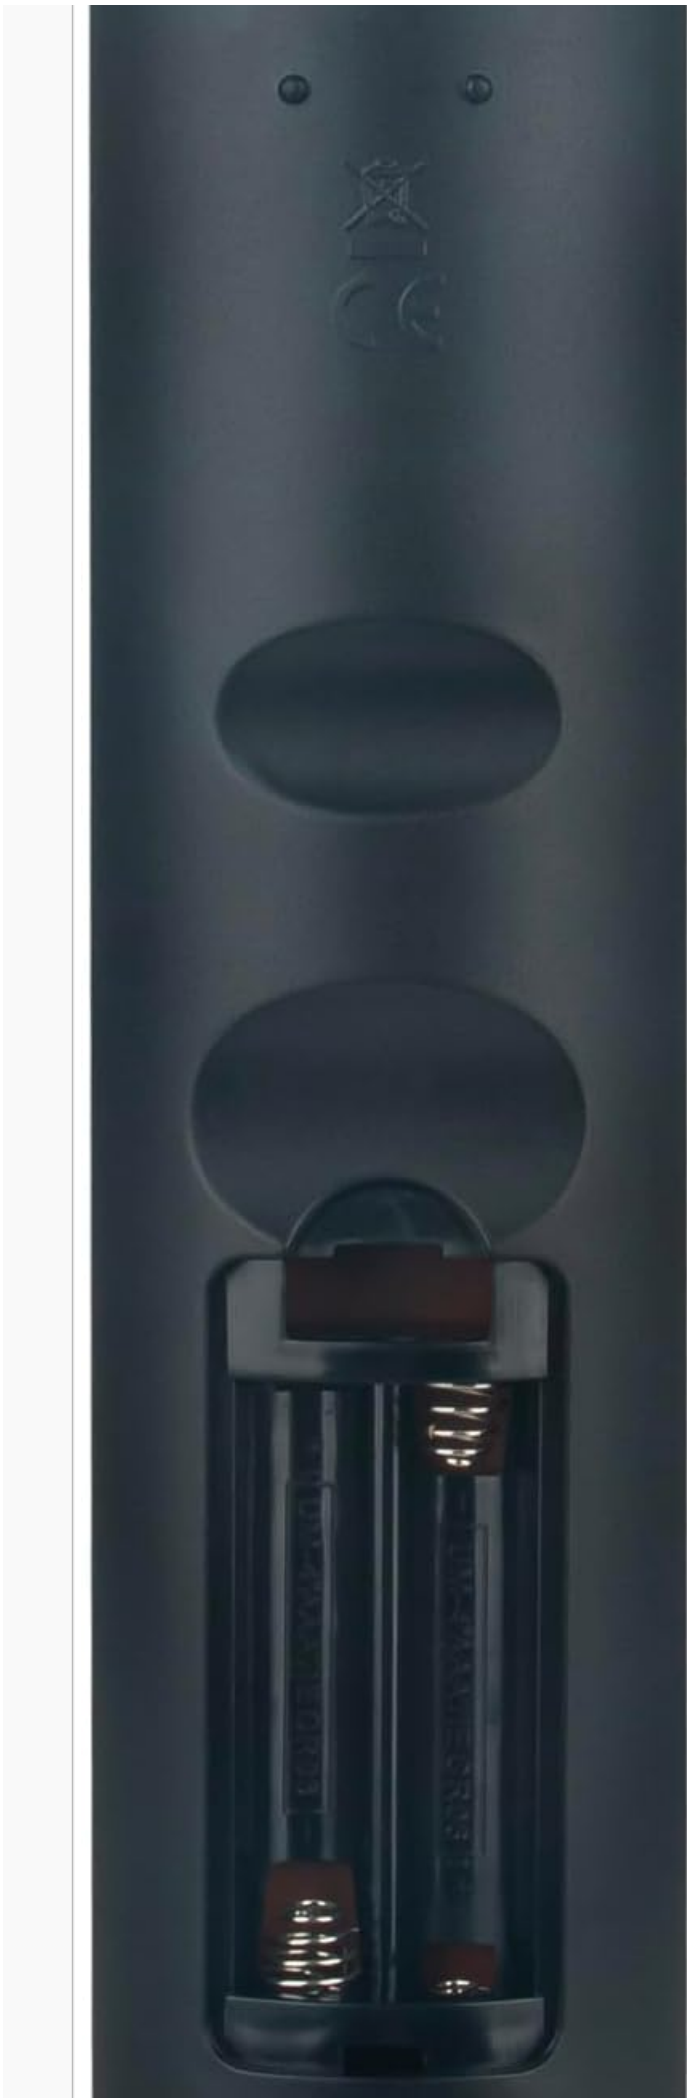



**Figure 3:** Rear view of the remote control with the battery compartment open, showing the slots for two AAA batteries. This image helps in correctly installing the batteries.

## Initial Use

This remote control is pre-programmed and does not require any setup or pairing. Once batteries are installed, it is ready for immediate use with compatible Philips DVP3345V/17 and DVP3345V/17X DVD/VCR players. Point the remote directly at the infrared sensor on your DVD/VCR player.

## OPERATING INSTRUCTIONS

---

The remote control features a standard layout for easy navigation and control of your DVD/VCR player. Below is a guide to the main functions:

- **Power (●):** Turns the DVD/VCR player on or off.
- **OPEN/CLOSE (▲):** Opens or closes the disc tray.
- **Number Buttons (0-9, +10):** Used for direct track/chapter selection or inputting numerical values.
- **Playback Controls (PLAY, PAUSE, STOP, REW, FFW, BACK):** Standard controls for media playback.
  - **PLAY (▶):** Starts playback.
  - **PAUSE (⏸):** Pauses playback.
  - **STOP (■):** Stops playback.
  - **REW (⏮):** Rewinds media.
  - **FFW (⏭):** Fast forwards media.
  - **BACK (⏪):** Skips back to the beginning of the current track/chapter or previous track/chapter.
- **Tracking ( / ):** Adjusts VCR tracking for optimal picture quality during playback.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **SETUP:** Accesses the system setup menu.
- **VCR / DVD:** Switches between VCR and DVD modes.
- **TITLE:** Displays the DVD title menu.
- **INPUT:** Selects the input source for the DVD/VCR player.
- **DISC MENU:** Displays the DVD disc menu.
- **DISPLAY:** Shows on-screen display information (e.g., time, chapter).
- **SUBTITLE:** Toggles or selects subtitle tracks.
- **ZOOM:** Zooms in on the picture.
- **AUDIO:** Selects audio tracks or audio modes.
- **ANGLE:** Changes the camera angle on compatible DVDs.
- **SEARCH:** Initiates search functions within media.
- **REPEAT / A-B:** Repeats a track/chapter or a specified segment (A-B repeat).
- **REC (●):** Initiates recording on the VCR.
- **SPEED:** Adjusts playback speed.

- **MODE:** Cycles through various playback modes.
- **TIMER SET:** Sets recording timers for the VCR.

## MAINTENANCE

### Cleaning the Remote Control

To maintain the remote control's appearance and functionality, clean it periodically:

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

### Battery Care and Replacement

- Replace batteries when the remote's response becomes sluggish or inconsistent.
- Always replace both batteries at the same time with new alkaline batteries of the same type (AAA).
- If the remote control will not be used for an extended period (e.g., one month or more), remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

### Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid placing heavy objects on the remote control.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not responding.	<ul style="list-style-type: none"> <li>• Dead or incorrectly installed batteries.</li> <li>• Obstruction between remote and DVD/VCR player.</li> <li>• Remote control is too far from the player.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries with new ones, ensuring correct polarity.</li> <li>• Remove any objects blocking the line of sight to the player's IR sensor.</li> <li>• Move closer to the DVD/VCR player (within 10 meters).</li> </ul>
Specific buttons are not working.	<ul style="list-style-type: none"> <li>• Dirty contacts under the button.</li> <li>• Remote control damage.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure the remote is clean. If the issue persists, the remote may require replacement.</li> <li>• If the remote has been dropped or damaged, it may need to be replaced.</li> </ul>
Remote works intermittently.	<ul style="list-style-type: none"> <li>• Weak batteries.</li> <li>• Interference from other electronic devices.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace batteries.</li> <li>• Ensure no other devices are emitting strong infrared signals or causing electrical interference.</li> </ul>

## SPECIFICATIONS

- **Brand:** VINABTY
- **Model Compatibility:** Philips DVP3345V/17, DVP3345V/17X
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** DVD/VCR Players
- **Maximum Range:** 10 Meters (approx. 33 feet)
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Item Weight:** 58 Grams (approx. 2.05 ounces)
- **Controller Type:** Button Control

## WARRANTY AND SUPPORT

---

For warranty information or technical support regarding your VINABTY replacement remote control, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

---