



[Manuals.plus](#) /

> [PwZzk](#) /

> PwZzk 25.4QT Dual Zone Air Fryer Toaster Oven Combo Instruction Manual

PwZzk AF557TR

25.4QT Dual Zone Air Fryer Toaster Oven Combo Instruction Manual

Brand: PwZzk | Model: AF557TR

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your PwZzk 25.4QT Dual Zone Air Fryer Toaster Oven Combo. Designed for versatility and convenience, this appliance combines the functions of an air fryer and a toaster oven, featuring a spacious 25.4-quart capacity, dual-zone cooking capability, and 16 preset functions. Please read this manual thoroughly before first use and retain it for future reference.



Image: The PwZk 25.4QT Dual Zone Air Fryer Toaster Oven Combo, featuring its sleek black design and transparent French glass doors, showcasing various food items being cooked on multiple racks.

SETUP AND FIRST USE

Unpacking

- Carefully remove all packaging materials, including any internal packing and protective films.
- Inspect the appliance for any damage. Do not operate if damaged.
- Ensure all accessories are present: air fry baskets, baking pan, oven rack, rotisserie spit, crumb tray.



Image: A visual representation of the PwZk air fryer oven's dimensions (16.9"W x 12.2"D x 14.9"H) and a display of its various included accessories, such as air fry baskets, baking pans, and oven racks.

Placement

- Place the appliance on a stable, level, heat-resistant surface.
- Ensure adequate clearance (at least 4 inches) on all sides and above the unit for proper ventilation. Do not place directly under cabinets.
- Plug the appliance into a grounded electrical outlet. Ensure the outlet can support 1700W.

Initial Cleaning

- Before first use, wipe the interior and exterior of the appliance with a damp cloth.
- Wash all accessories (baskets, trays, racks) with warm, soapy water. Rinse thoroughly and dry completely.

First Use (Burn-In)

- It is recommended to run the oven empty for approximately 15 minutes at 400°F (200°C) to eliminate any manufacturing odors.
- Ensure the area is well-ventilated during this process. A slight odor or smoke is normal during initial use.

OPERATING INSTRUCTIONS

Control Panel Overview

The appliance features an intuitive LED touchscreen control panel. It allows for precise temperature and time adjustments, as well as selection from 16 preset cooking functions.



Image: A detailed view of the LED touchscreen control panel, highlighting the various touch-sensitive buttons for temperature, time, and 16 preset cooking functions such as string roast, cake, fish, pizza, steak, popcorn, cookies, defrost, fermentation, chicken thigh, fruits, chicken, shrimp, heat, vegetables, and fries.

Basic Operation

- **Power On/Off:** Press the power icon to turn the appliance on or off.
- **Temperature Adjustment:** Use the "TEMP +" and "TEMP -" buttons to set the desired temperature between 100°F and 430°F.
- **Time Adjustment:** Use the "TIME +" and "TIME -" buttons to set the cooking duration.
- **Start/Pause:** Press the start/pause icon to begin or temporarily stop cooking.

Using Preset Functions

The appliance offers 16 pre-programmed settings for common dishes. Simply select the desired preset icon on the control panel, and the oven will automatically set the optimal temperature and time. Adjustments can be made manually after selecting a preset if needed.

Examples of presets include: String Roast, Cake, Fish, Pizza, Steak, Popcorn, Cookies, Defrost, Fermentation, Chicken Thigh, Fruits, Chicken, Shrimp, Heat, Vegetables, and Fries.

Dual Zone Functionality

This air fryer oven features a unique dual-zone capability, allowing you to cook two different items simultaneously at independent temperatures and times. To utilize this feature:

- Insert the divider into the designated slot in the middle of the oven cavity.
- Place food items in the left (L) and right (R) zones.
- On the control panel, select 'L' to adjust settings for the left zone and 'R' for the right zone.
- You can set different temperatures and times for each zone.
- To cook as a single large zone, remove the divider and select 'ALL' on the control panel.

Double Delight, Dual control

Cook Two Favorites at Once, Each to Their Perfect Taste



Image: The PwZk air fryer oven's display showing independent temperature settings for its left (290°F) and right (390°F) cooking zones, illustrating its dual-zone capability.

Safety Features

- **French Glass Doors:** The wide-opening French doors provide easy access and safe monitoring of food without the risk of burns from hot surfaces. The appliance will pause operation if the doors are opened during cooking.
- **Internal Light:** An independent furnace light allows for clear visibility of the cooking process.

Wide-Open French Doors

No More Burns



Image: A visual comparison highlighting the safety benefit of the wide-open French doors, which prevent accidental burns, contrasted with a traditional pull-down oven door that can pose a burn risk.

CARE AND MAINTENANCE

Cleaning

- Always unplug the appliance and allow it to cool completely before cleaning.
- **Interior:** Wipe the interior with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive sponge. Ensure the interior is dry before next use.
- **Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Accessories:** Wash all removable accessories (baskets, trays, racks) with warm, soapy water. Rinse thoroughly and dry completely. Note: The accessories are NOT dishwasher safe.
- Regularly clean the crumb tray to prevent grease buildup and ensure optimal performance.



Less cleaning, higher safety:

Keeps food oils away from the heating element, reducing cleaning hassle and potential safety risks.



More cleaning, higher safety risks:

Oils easily drip onto the heating element, making cleaning harder and increasing smoke or fire risks.

Image: A side-by-side comparison illustrating the benefits of the air fryer's design for easier cleaning and higher safety, showing a clean interior with a protective plate keeping oils away from the heating element, versus a dirty interior where oils drip directly onto the heating element, increasing cleaning difficulty and potential fire risks.

Storage

- Ensure the appliance is clean and dry before storing.
- Store in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your PwZzk Air Fryer Toaster Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; safety switch engaged.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker. Ensure French doors are fully closed.
Food is not cooking evenly.	Overcrowding; incorrect temperature/time; food not rotated.	Avoid overcrowding the baskets/racks. Adjust temperature and time as needed. For best results, flip or shake food halfway through cooking.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Grease buildup; cooking fatty foods.	Clean the interior and accessories thoroughly after each use. For fatty foods, place a baking pan on the bottom rack to catch drips.
Display shows an error code.	Internal malfunction.	Unplug the appliance for 5-10 minutes, then plug it back in. If the error persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	PwZzk
Model Name	AF557TR
Capacity	25.4 Quarts
Product Dimensions (D x W x H)	12.2"D x 16.9"W x 14.9"H
Color	Black
Material	Cold Rolled Steel (Exterior), Stainless Steel (Interior)
Output Wattage	1700 Watts
Voltage	120 Volts
Temperature Range	100°F - 430°F
Control Method	Touch Control (LED Display)
Special Feature	Dual Zone Features, 16 Preset Functions
Item Weight	28.2 pounds
Dishwasher Safe	No (for accessories)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or contact the manufacturer directly. PwZzk is committed to customer satisfaction and provides support for their products. You may also visit the official PwZzk store on Amazon for additional resources and contact options: [PwZzk Amazon Store](#).