

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SZYUYU](#) /

› [SZYUYU Wireless Controller P4 Instruction Manual](#)

SZYUYU P4 Controller

SZYUYU Wireless Controller P4 Instruction Manual

Model: P4 Controller

1. INTRODUCTION

This manual provides detailed instructions for the SZYUYU Wireless Controller P4. This controller is designed for an enhanced gaming experience across multiple platforms, including PlayStation 4 (PS4, PS4 Slim, PS4 Pro) and Windows PC. It features an ergonomic design, precise controls, and various functionalities to immerse you in your games.



Figure 1: SZYUYU Wireless Controller P4 (Flame White)

2. PRODUCT OVERVIEW

The SZYUYU Wireless Controller P4 integrates several key features for optimal performance and user comfort.

2.1 Key Features

- **Ergonomic Design:** Shaped to fit comfortably in hand for extended gaming sessions.
- **Wide Compatibility:** Fully compatible with PS4, PS4 Slim, PS4 Pro, Windows PC, iOS 13, Android 10, and Mac.
- **Precision Controls:** Improved dual analog sticks and trigger buttons for enhanced accuracy.
- **Sensitive Touch Pad:** Extends gaming possibilities and interaction.
- **Six-Axis Motion Control:** Provides immersive gameplay with tilt and motion sensing.
- **Dual Vibration Motors:** Delivers realistic haptic feedback for different intensities.
- **Integrated Audio:** Features a 3.5mm audio jack and built-in speaker.
- **Share Button:** Allows for easy video streaming and content sharing.

- **Efficient Charging:** Up to 8-10 hours of use from a 2-hour charge.



Figure 2: Key Features of the SZYUYU Wireless Controller P4

2.2 Controller Layout

Familiarize yourself with the buttons and ports on your controller:



Figure 3: Controller Button and Port Layout

- **D-pad:** Directional Pad for navigation.
- **Left/Right Joysticks:** Analog sticks for precise movement and camera control.
- **Share Button:** For sharing gameplay content.
- **Options Button:** Access in-game menus and options.
- **Action Buttons (Triangle, Circle, Cross, Square):** Primary game input buttons.
- **Light Bar:** Indicates player number, charging status, and in-game information.
- **Touch Pad:** Multi-touch input surface.
- **3.5mm Headphone Port:** For connecting headsets.
- **LB/RB (L1/R1):** Shoulder buttons.
- **LT/RT (L2/R2):** Trigger buttons.
- **USB Charging Jack:** For charging the controller.

3. SETUP

3.1 Charging the Controller

Before initial use, fully charge the controller. Connect the supplied USB charging cable to the controller's USB Charging Jack and the other end to a powered USB port (e.g., PS4 console, PC, or a standard USB charger).

- A full charge takes approximately 2 hours.
- The controller provides 8-10 hours of gameplay on a full charge.
- Charging can occur while the controller is in use or in static mode.

3.2 Connecting to PS4 / PS4 Slim / PS4 Pro

1. Ensure your PS4 console is powered on.
2. Connect the controller to the PS4 console using the supplied USB charging cable.
3. Press the PS button (Home button) on the controller. The light bar will flash and then glow a solid color, indicating successful pairing.
4. You can now disconnect the USB cable for wireless play.

3.3 Connecting to Windows PC / iOS / Android / Mac

The controller supports various platforms. For PC connection, a separate receiver (not included) may be required for wireless functionality. For iOS 13, Android 10, and Mac, follow standard Bluetooth pairing procedures for your device.



4. OPERATING INSTRUCTIONS

4.1 Basic Controls

Refer to the 'Controller Layout' section (Figure 3) for the location of all buttons and joysticks. These controls function similarly to standard PS4 controllers for intuitive gameplay.

4.2 Touch Pad Functionality

The central multi-touch pad offers additional input methods, enhancing interaction with compatible games. Its sensitive surface allows for precise control and unique gameplay experiences.



Figure 5: Sensitive Touch Pad

4.3 Dual Vibration Feedback

The controller features dual vibration motors that provide realistic haptic feedback, varying in intensity based on in-game events. This enhances immersion during gameplay.

STRONG POWER

Realistic vibration experience



Figure 6: Realistic Vibration Experience

4.4 Share Button

Press the 'Share' button to access options for capturing screenshots, recording video clips, or live streaming your gameplay to compatible platforms.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in constant use.
- **Avoid Drops:** Protect the controller from physical impact, as drops can damage internal components.

6. TROUBLESHOOTING

- **Controller Not Connecting:**

- Ensure the controller is charged.
 - Reconnect the controller to the console/PC using the USB cable and press the PS button to re-pair.
 - Try resetting the controller: Locate the small reset button on the back of the controller (often near the L2 button). Use a thin object (like a straightened paperclip) to press and hold the button for 3-5 seconds. Then, attempt to re-pair.
- **Input Lag or Unresponsiveness:**
 - Ensure the controller has sufficient battery charge. Low battery can sometimes cause performance issues.
 - Move closer to the console/PC to minimize wireless interference.
 - Reset the controller as described above.
- **Buttons Not Responding Correctly:**
 - Ensure no debris is lodged around the buttons.
 - If the issue persists after a reset, contact customer support.
- **Charging Issues:**
 - Try a different USB cable or charging port.
 - Ensure the charging cable is securely connected to both the controller and the power source.

7. SPECIFICATIONS

Model	P4 Controller
Product Dimensions	6 x 4 x 2 inches
Item Weight	10.5 ounces
Batteries	1 Lithium Polymer battery (included)
Compatibility	PS4, PS4 Slim, PS4 Pro, Windows PC (7/8/10), iOS 13, Android 10, Mac

8. WARRANTY AND SUPPORT

SZYUYU is dedicated to providing quality products and an excellent gaming experience. While specific warranty details are not provided in this manual, if you encounter any issues during the use of your SZYUYU Wireless Controller P4, please contact our customer service team via email. Our support staff will assist you as soon as possible to resolve any problems.

For further assistance, please refer to the contact information provided with your purchase or visit the official SZYUYU website.