

HEINPRO HP-2180GY

HEINPRO Cordless Leaf Blower User Manual

Model: HP-2180GY | **Brand:** HEINPRO

1. INTRODUCTION

Thank you for choosing the HEINPRO Cordless Leaf Blower. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new tool. Please read this manual thoroughly before first use and keep it for future reference.

Note: Battery and charger are not included with this tool. This leaf blower is designed to be compatible with DeWALT 20V MAX lithium-ion batteries (e.g., DCB200, DCB201, DCB203, DCB204, DCB230, DCB240). Ensure the battery used does not exceed 7.6 cm (3 inches) in height due to the battery protection bracket. Special attention should be paid to DeWALT 20V/60V Flexvolt series batteries.

2. INCLUDED COMPONENTS

The HEINPRO Cordless Leaf Blower package includes the following items:

- 1 x Leaf Blower (bare tool, battery not included)
- 1 x Blower Tube

3. SETUP AND ASSEMBLY

3.1 Attaching the Blower Tube

1. Align the blower tube with the air outlet on the main unit.
2. Push the tube firmly onto the outlet until it clicks into place, ensuring a secure connection.

3.2 Battery Installation

This leaf blower operates with a compatible DeWALT 20V MAX lithium-ion battery (not included).

1. Ensure the leaf blower is turned off and the trigger is not engaged.
2. Slide the charged battery pack into the battery port at the base of the blower until it locks securely into place. You should hear a click.
3. To remove the battery, press the battery release button (if present) and slide the battery out.



Figure 3.2.1: The HEINPRO Cordless Leaf Blower in use, demonstrating its compatibility with DeWALT 20V MAX Li-ion batteries. Note that the battery is sold separately.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Off

To start the leaf blower, press and hold the variable speed trigger. Release the trigger to turn the blower off.

4.2 Variable Speed Control

The leaf blower features a variable speed trigger, allowing you to control the airflow intensity. Press the trigger lightly for lower speeds and press it fully for maximum airflow.

4.3 Turbo Mode

For demanding tasks requiring maximum power, activate the Turbo Mode. Press the dedicated Turbo button (located near the trigger) to instantly boost the airflow to its highest setting (up to 400 CFM / 120 MPH).

HEINPRO



Figure 4.3.1: Detailed view of the blower's handle, highlighting the variable speed trigger for precise control and the dedicated turbo mode button for maximum power.

4.4 Ergonomics and Lightweight Design

The HEINPRO leaf blower is designed for user comfort and ease of use. Weighing only 1.6 kg (3.6 lbs) as a bare tool, it can be easily operated with one hand, reducing user fatigue during extended use. The rubber-wrapped handle provides a non-slip, comfortable grip. The base housing protects the battery and motor, also providing stable placement support when the tool is set down.

HEINPRO



Figure 4.4.1: A user demonstrating the ease of use and lightweight nature of the HEINPRO leaf blower while clearing leaves from a patio area.

4.5 Applications

This cordless leaf blower is suitable for various outdoor cleaning scenarios, including clearing leaves from lawns, patios, driveways, and even light snow or debris from vehicles.



Figure 4.5.1: The HEINPRO leaf blower is versatile, capable of clearing leaves, light snow, and other debris from various surfaces, as depicted in these usage examples.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your leaf blower.

5.1 Cleaning

- Always remove the battery before cleaning.
- Wipe the exterior of the blower with a clean, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the air intake and exhaust vents are free from debris to prevent overheating. Use compressed air if necessary to clear stubborn blockages.

5.2 Storage

- Store the leaf blower in a dry, secure location, away from direct sunlight and extreme temperatures.

- Remove the battery from the tool before storing for extended periods.
- Keep out of reach of children.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your leaf blower.

Problem	Possible Cause	Solution
Blower does not start or stops unexpectedly.	Battery not properly inserted or discharged.	Ensure battery is fully charged and securely seated.
Blower stops during operation.	Integrated overload protection activated (voltage too high/low).	This is a safety feature to protect the battery and motor. Allow the tool to cool down, check battery voltage, and ensure it's within the compatible range. If the issue persists, the battery may be faulty.
Reduced airflow.	Air intake or blower tube blocked by debris.	Remove battery and clear any obstructions from the air intake vents or blower tube.
Unusual noise or vibration.	Loose components or internal debris.	Stop operation immediately. Remove battery. Inspect for loose parts. If noise persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	75.95 x 11.94 x 23.88 cm (29.9 x 4.7 x 9.4 inches)
Item Model Number	HP-2180GY
Material	Plastic
Power Source	Battery Powered
Voltage	20 Volts
Form Factor	Portable
Special Features	Cordless, Turbo Mode, Variable Speed
Airflow Capacity	Up to 400 CFM (Cubic Feet per Minute)
Max Airspeed	Up to 120 MPH (Miles Per Hour)

Feature	Detail
Noise Level	65 dB
Item Weight	1.63 kg (3.6 lbs)
Manufacturer	HEINPRO
Color	Yellow/Black

8. WARRANTY AND SUPPORT

Specific warranty information for the HEINPRO Cordless Leaf Blower (Model HP-2180GY) is not provided in the product data. For detailed warranty terms, technical support, or service inquiries, please contact the manufacturer directly or refer to the product packaging for contact information.

You may also visit the official HEINPRO website for the most up-to-date support resources.

© 2023 HEINPRO. All rights reserved.