

[manuals.plus](#) /› [Digiquest](#) /› [Digiquest XO STICK Remote Control User Manual](#)

Digiquest XO STICK

Digiquest XO STICK Remote Control User Manual

Model: XO STICK | Brand: Digiquest

1. INTRODUCTION

This manual provides essential instructions for the proper use and maintenance of your Digiquest XO STICK original remote control. This remote is designed specifically for the Digiquest XO STICK digital terrestrial decoder. It requires no programming and is ready for use upon battery installation.

2. PRODUCT OVERVIEW AND FEATURES

The Digiquest XO STICK remote control offers intuitive operation for your digital terrestrial decoder. Key features include:

- Original replacement remote for Digiquest XO STICK decoder.
- No programming required for immediate use.
- 2-in-1 functionality to control main TV functions.
- Infrared (IR) connectivity.
- Compatible with TV decoders.
- Operates on AA batteries.

3. SETUP

3.1 Battery Installation

To install batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Image: Back of the remote control, illustrating the battery compartment area and regulatory markings.

3.2 Initial Connection

This remote control is an original replacement and does not require any programming. Once batteries are installed, it is ready for use with your Digiquest XO STICK digital terrestrial decoder. Ensure the decoder is powered on and point the remote control directly towards the decoder's infrared receiver.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. A visual guide is provided below, followed by a description of key functions.

 


Image: Front view of the remote control, displaying the layout of all buttons.

4.1 Button Functions

- **TV (Power)**: Turns the connected TV on or off.
- **TV/AV**: Switches the TV input source (e.g., HDMI, AV).
- **VOL +/-**: Adjusts the volume level of the TV.
- **SET**: Used for TV control setup (refer to TV manual if needed).
- **Power (Red button)**: Turns the Digiquest XO STICK decoder on or off.
- **MENU**: Accesses the main menu of the decoder.
- **EXIT**: Exits the current menu or screen.
- **Navigation Buttons (Up, Down, Left, Right, OK)**: Used to navigate through menus and confirm selections.
- **INFO**: Displays program information.
- **BACK**: Returns to the previous screen or menu.
- **EPG**: Accesses the Electronic Program Guide.
- **P +/- (Channel Up/Down)**: Changes channels.
- **Numeric Pad (0-9)**: Directly enters channel numbers.
- **TV/R**: Switches between TV and Radio modes.
- **FAV**: Accesses favorite channel lists.
- **Media Control Buttons (Play/Pause, Stop, Rewind, Fast Forward)**: Controls media playback.
- **TXT**: Activates Teletext.
- **AUDIO**: Selects audio tracks or languages.
- **ASPECT**: Changes the screen aspect ratio.
- **SUB-T**: Activates subtitles.

5. MAINTENANCE

- **Cleaning**: Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA batteries.
- **Storage**: If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

Problem	Solution
Remote control is not responding.	<ul style="list-style-type: none"> Check if the batteries are inserted correctly with the right polarity. Replace old batteries with new AA batteries. Ensure there is a clear line of sight between the remote and the decoder's IR receiver. Verify that the Digiquest XO STICK decoder is powered on.
Remote control works intermittently.	<ul style="list-style-type: none"> Batteries may be low; replace them. Ensure no objects are blocking the IR signal path.
Remote control does not control the TV.	<ul style="list-style-type: none"> The TV control functions (TV Power, TV/AV, VOL+/-, SET) are universal but may require initial setup with your specific TV model. Refer to your TV's instruction manual for programming universal remote functions if necessary.
Unsure if this is the correct remote for my device.	This remote is specifically for the Digiquest XO STICK model. Please verify that your Digiquest device's model number matches "XO STICK". If in doubt, consult your device's documentation or contact Digiquest support with your receiver's serial number.

7. SPECIFICATIONS

Feature	Detail
Brand	Digiquest
Model Name	XO STICK
Connectivity Technology	Infrared (IR)
Special Feature	No programming required
Compatible Devices	Digiquest XO STICK Digital Terrestrial Decoder, TV
Color	Black
Battery Type	AA Batteries
Max Number of Supported Devices	1 (Decoder) + TV functions

8. WARRANTY AND SUPPORT

Information regarding specific warranty terms and availability of spare parts for this product is not provided in the product details. For warranty claims, technical support, or inquiries about spare parts, please contact the original vendor or Digiquest customer service directly.

9. DISPOSAL INFORMATION

The symbol of the crossed-out wheeled bin indicates that this product should not be disposed of with general household waste. Instead, it should be taken to an appropriate collection point for the recycling of electrical and

electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of this product.



Image: Regulatory markings on the remote control, including the WEEE symbol for proper disposal.