

[Manuals.plus](#) /

› [COZYINN](#) /

› COZYINN Walking Pad Treadmill User Manual

## COZYINN B0CM3M3GYV

# COZYINN Walking Pad Treadmill User Manual

Model: B0CM3M3GYV

Brand: COZYINN

## INTRODUCTION

This user manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your COZYINN Walking Pad Treadmill. Please read this manual thoroughly before initial use and retain it for future reference.

The COZYINN Walking Pad Treadmill is designed for home and office use, offering a compact and quiet solution for integrating physical activity into your daily routine. It features a powerful motor, adjustable incline, and multiple control options including a remote, mobile application, and voice commands.

## INCLUDED COMPONENTS

Upon unpacking, please verify that all components listed below are present and in good condition:

- Treadmill Body
- Remote Control
- User Manual
- Power Cord
- Tool Kit
- Lubrication Oils (2 bottles)
- Foot Pads (2 sets)



Figure 1: All components included in the COZYINN Walking Pad Treadmill package.

## SETUP

The COZYINN Walking Pad Treadmill requires no assembly and is ready for use right out of the box. Follow these steps for initial setup:

1. **Placement:** Choose a flat, stable surface for the treadmill. Ensure there is adequate clear space around the unit for safe operation.
2. **Power Connection:** Connect the power cord to the treadmill and then to a grounded electrical outlet.
3. **Incline Adjustment (Optional):** The treadmill features a 3-level incline (0%, 3%, 6%, 10%). To adjust the incline, manually attach the provided foot pads to the rear of the treadmill. Refer to the included tool kit for assistance.
4. **Initial Lubrication:** Before the first use, it is crucial to lubricate the running belt. Refer to the "Maintenance" section for detailed instructions on how to apply the lubricant.



Figure 2: The COZYINN Walking Pad Treadmill is designed for easy placement and use in various settings, including under a desk.

## OPERATING INSTRUCTIONS

Your COZYINN Walking Pad Treadmill offers multiple convenient ways to control your workout.

### 1. Remote Control

The included remote control is the primary method for operating the treadmill.


- **Start/Stop:** Press the **Start/Stop** button to begin or end your workout.
- **Adjust Speed:** Use the **+** and **-** buttons to increase or decrease the speed. The speed range is 1 mph to 4 mph.
- **Mute Buzzer:** Press the **Mute Buzzer** button to silence operational sounds.

# 3 Choices to Control the Walking Pad


## Remote Control



## App Control

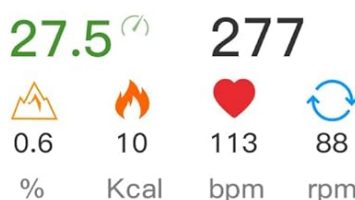

## Voice Control

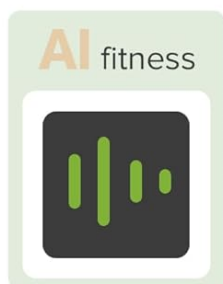

- "Start running"
- "Start running"
- "Turn on the treadmill"



Figure 3: The remote control allows for easy adjustment of speed and workout initiation.

## 2. Smart APP Control (KINOMAP WELLFIT APP)

Enhance your fitness experience by connecting your treadmill to the KINOMAP WELLFIT APP via Bluetooth. This app provides advanced features for tracking and customizing your workouts.

- **Download App:** Search for "KINOMAP WELLFIT APP" in your device's app store and install it.
- **Connect via Bluetooth:** Follow the in-app instructions to pair your device with the treadmill.
- **Features:** The app offers powerful fitness data tracking, preset programs, fitness training videos, customized workout plans, and dynamic data analysis.

# Low Noise Walking Pad with Mute Buzzer

Ensure a Quiet and Comfortable Workout  
While Exercising.



Figure 4: The KINOMAP WELLFIT APP provides comprehensive workout tracking and control.

### 3. Voice Control

The treadmill supports voice commands for convenient hands-free operation. Ensure your device is connected to the app for this feature.

- **Example Commands:** "Start running", "Hello, increase the speed", "Run 2 miles today", "Turn on the treadmill".

### LED Display

The integrated LED display on the treadmill provides real-time workout data, including speed, distance, time, and calories burned.

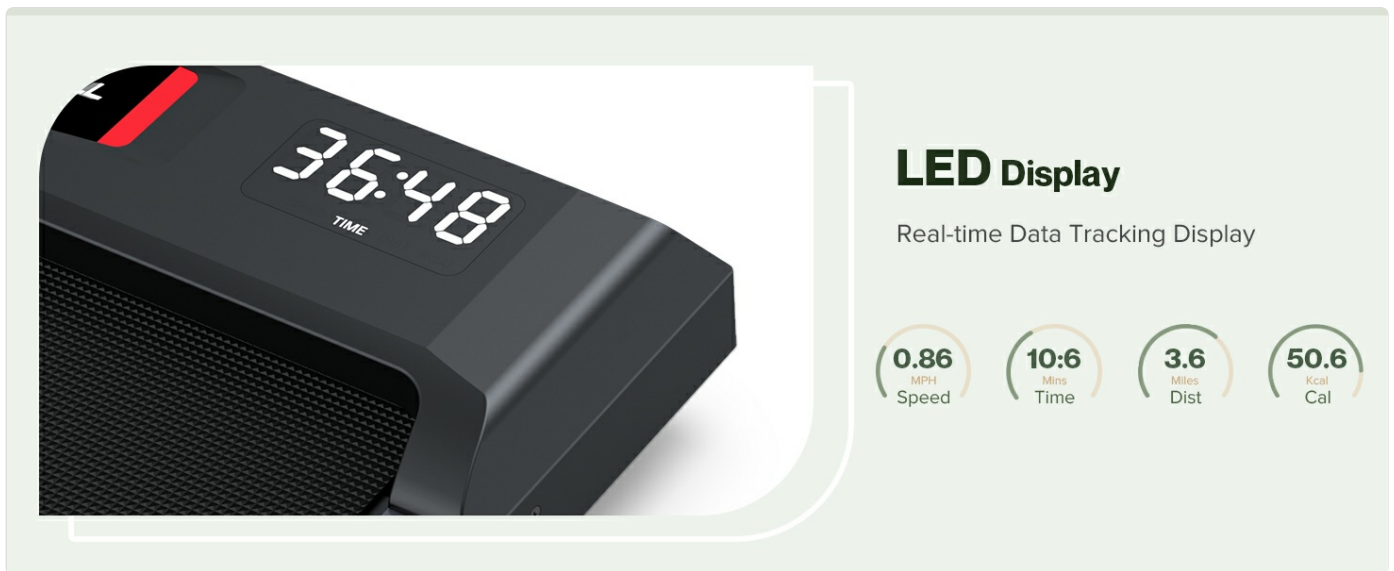 


Figure 5: The LED display provides real-time feedback on your workout progress.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your treadmill.

### 1. Lubrication

Proper lubrication of the running belt is essential. You will need to lubricate the treadmill before the first use and periodically thereafter based on usage frequency.

#### Lubrication Schedule

Usage Frequency	Maintenance Frequency
Less than 3 hours/week	Every 6 months
3-5 hours/week	Every 3 months
More than 5 hours/week	Every 2 months

#### Procedure:

1. Turn off and unplug the treadmill.
2. Remove the cap from the lubricant bottle. You may need to cut the tip of the nozzle.
3. Use an unsharp tool (like the provided Allen wrench) to gently lift the running belt.
4. Apply 4-5ml of lubricant oil evenly under the running belt, starting from the center and moving outwards. Repeat on the other side.
5. No need to oil the entire board; the lubricant will spread during use.
6. Plug in the treadmill and run it at a low speed (e.g., 1 mph) for 5 minutes to distribute the lubricant.

Your browser does not support the video tag.

Video 1: Demonstration of how to lubricate the COZYINN Walking Pad Treadmill belt.

## MAX 265LBS Capacity

Maximum Comfort and Stability



Figure 6: The running belt can be adjusted using the provided tool if needed.

## 2. Cleaning

Regular cleaning helps maintain the appearance and function of your treadmill.

- Wipe down the treadmill surface with a damp cloth after each use to remove sweat and dust.
- Avoid using abrasive cleaners or solvents that could damage the finish.
- Periodically vacuum under the treadmill to prevent dust buildup from affecting motor performance.

## TROUBLESHOOTING

This section addresses common issues you might encounter with your treadmill. For problems not listed here, please contact customer support.

Problem	Possible Cause	Solution
Treadmill does not power on.	Power cord not properly connected; power switch off; circuit breaker tripped.	Ensure power cord is securely plugged in. Check the power switch on the treadmill. Reset the household circuit breaker if necessary.
Running belt slips or hesitates.	Belt requires lubrication; belt is too loose.	Lubricate the running belt as per the "Maintenance" section. Adjust belt tension if necessary (refer to specific instructions in the full manual, not provided here).
Unusual noise during operation.	Lack of lubrication; loose components.	Apply lubricant to the running belt. Check for any loose screws or parts and tighten them.
Remote control not responding.	Low battery in remote; remote not paired.	Replace remote control batteries. Ensure the remote is pointed directly at the treadmill's receiver.

## SPECIFICATIONS

Feature	Detail
---------	--------

<b>Feature</b>	<b>Detail</b>
Brand	COZYINN
Model Name	Walking Pad
Product Dimensions (D x W x H)	42.9" x 17.75" x 3.46"
Item Weight	39.8 Pounds
Material	Acrylonitrile Butadiene Styrene (ABS)
Maximum Speed	4 Miles per Hour
Minimum Speed	1 Miles per Hour
Maximum Weight Recommendation	265 Pounds
Maximum Horsepower	2.5 Horsepower
Maximum Incline Percentage	10% (3-level adjustable)
Display Type	LED
Connectivity Technology	Bluetooth
Control Program Name	KINOMAP WELLFIT APPS
Assembly Required	No
Deck Length	36.8 Inches
Deck Width	15.2 Inches

# 150% Fat Burning Rate

4 Adjustable Incline For More Fat Burning

**Incline 0%**

🔥 240 Kcal/H

**Incline 3%**

🔥🔥 320 Kcal/H

**Incline 6%**

🔥🔥🔥 460 Kcal/H

**Incline 10%**

🔥🔥🔥🔥 512 Kcal/H



Figure 7: Key dimensions of the COZYINN Walking Pad Treadmill.

# Improved Running Experience with Our Walking Pad

Maximum Comfort and Stability

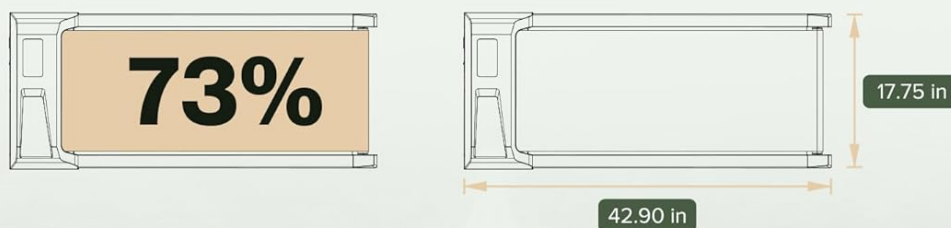 


Figure 8: Illustration of the adjustable incline feature and its calorie burning potential.

## WARRANTY AND SUPPORT

COZYINN provides comprehensive after-sales coverage for your Walking Pad Treadmill:

- **Frame:** 3 years
- **Motor, Parts, and Electronics:** 24 months
- **Replacement Parts:** Supply of replacement parts is included.

For warranty claims, technical support, or any inquiries, please contact COZYINN customer service through the official channels provided at the time of purchase or on the COZYINN website.

