

[Manuals.plus](#) /

> [TUMAMA](#) /

> TUMAMA WYH-281 Walking and Barking Plush Dog Toy Instruction Manual

TUMAMA WYH-281

TUMAMA WYH-281 Walking and Barking Plush Dog Toy Instruction Manual

Model: WYH-281

INTRODUCTION

Thank you for choosing the TUMAMA Walking and Barking Plush Dog Toy. This interactive electronic pet is designed to provide engaging play for children, featuring realistic walking, barking, and tail-wagging actions. This manual will guide you through the setup, operation, and care of your new toy to ensure a safe and enjoyable experience.

SAFETY INFORMATION

- **Age Recommendation:** Not suitable for children under 3 years of age.
- **Adult Supervision:** Always use under direct adult supervision.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Insert batteries with correct polarity. Remove batteries if the toy is not used for an extended period.
- **Material Safety:** The toy is made from non-toxic, child-friendly plush and ABS materials.

WHAT'S IN THE BOX

Please check that all components are present:

- 1 × Plush Puppy Toy
- 1 × Remote Control Leash
- 1 × Bone accessory
- 1 × Collar accessory

- 1 × Ball accessory
- 1 × Food Dish accessory
- 1 × Sunglasses accessory

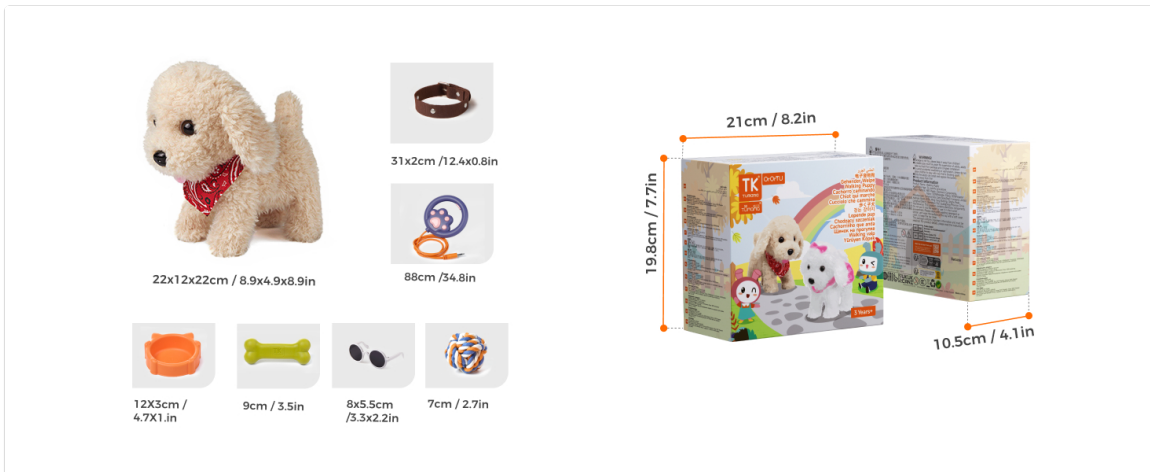


Image: The complete set of the TUMAMA Walking and Barking Plush Dog Toy, including the plush dog, remote control leash, bone, collar, ball, food dish, and sunglasses.

SETUP INSTRUCTIONS

1. Battery Installation

1. Locate the battery compartment on the underside of the plush dog.
2. Using a screwdriver, unscrew the battery compartment cover.
3. Insert 3 AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.

2. Leash Connection

1. Locate the audio jack port on the side of the plush dog.
2. Plug the connector from the remote control leash into this port.

Installation steps



Image: Visual guide for battery installation and leash connection.

OPERATING INSTRUCTIONS

Basic Functions via Remote Control Leash

Once batteries are installed and the leash is connected, press the button on the remote control leash to activate the toy.

- **Walking:** The dog will walk forward.
- **Barking:** The dog will make barking sounds.
- **Tail Wagging:** The dog will wag its tail.

Interactive Features

The toy also responds to touch and sound:

- **Voice Control:** Speak to the dog or make sounds, and it may respond with movements or barks.
- **Pat Response:** Gently pat the dog's head to trigger reactions like barking or tail wagging.

Leash control




Voice control



Pat



Walking

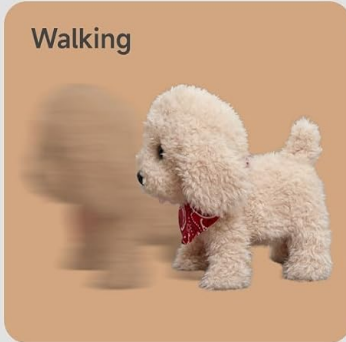

Woof Wood!



Wagging tail



©TUMAMA, Designer: XXX

Image: Illustration of the dog's interactive capabilities, including leash control, voice commands, patting, walking, barking, and tail wagging.

Control with leash Walking puppy



Image: A child demonstrating control of the walking puppy using the leash.

MAINTENANCE

Cleaning

- To clean the plush exterior, gently wipe with a damp cloth and mild soap.
- Do not immerse the toy in water, as this can damage the electronic components.
- Allow the toy to air dry completely before further use.

Battery Care

- Replace batteries when the toy's movements become slow or sounds become faint.
- Always dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Toy Not Functioning

- **Check Batteries:** Ensure batteries are inserted correctly with the right polarity and are not depleted. Replace with fresh batteries if necessary.
- **Leash Connection:** Verify that the remote control leash is securely plugged into the toy's audio jack.
- **Power Switch:** Ensure the toy's power switch (if present, usually near the battery compartment) is in the 'ON' position.

If the toy still does not function after checking these points, please contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	TUMAMA
Model Name	WYH-281
Model Number	WYH-TM281
Character	Dog
Toy Character Type	Plush
Minimum Recommended Age	36 Months (3 Years)
Maximum Recommended Age	72 Months (6 Years)
Material Type	Plush (ABS and Acrylonitrile Butadiene Styrene)
Outer Material	Plush
Inner Material	ABS Plush
Color	Brown
Item Dimensions (L x W x H)	20 x 10 x 20 cm
Item Weight	590 Grams
Batteries Required?	Yes
Supported Batteries	AA
Power Source	Battery
Special Features	Interactive Electronic, Multiple Movements
Educational Objective	Encourages imaginative play and storytelling, fosters social skills and empathy

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact your retailer. Keep your purchase receipt for any warranty claims.