

[Manuals.plus](#) /

› [MEDION](#) /

› MEDION P66700 DAB+ FM Radio Alarm Clock User Manual

## MEDION P66700

# MEDION P66700 DAB+ FM Radio Alarm Clock User Manual

Model: P66700 (MD44700) | Brand: MEDION

## 1. INTRODUCTION

Thank you for choosing the MEDION P66700 DAB+ FM Radio Alarm Clock. This device combines modern digital radio technology with classic FM reception, Bluetooth connectivity for wireless audio streaming, and a convenient alarm clock function, all housed in an elegant wooden casing. This manual provides essential information for safe operation, setup, and maintenance of your new radio.



Figure 1.1: The MEDION P66700 DAB+ FM Radio Alarm Clock, showcasing its cream-colored wooden casing, front-facing speaker grille, and control panel with a central TFT color display and rotary knobs.

## 2. SAFETY INFORMATION

Please read all safety instructions carefully before using the device. Keep this manual for future reference.

- **Power Source:** Only use the provided power adapter. Ensure the voltage matches your local power supply.
- **Water and Moisture:** Do not expose the device to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the device.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings. Place the device on a stable, flat surface.
- **Heat Sources:** Keep the device away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Batteries:** If using batteries for backup, ensure correct polarity. Do not mix old and new batteries or different types of batteries. Dispose of used batteries responsibly.

## 3. PACKAGE CONTENTS

Carefully unpack your MEDION P66700 radio and check that all items are present and in good condition:

- MEDION LIFE P66700 (MD44700) DAB+ Radio
- Power Cable (1.5 m)
- User Manual (this document)
- Warranty Card
- 2 x AAA Batteries (for clock backup, if applicable)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your MEDION P66700 radio.



Figure 4.1: Detailed view of the control panel, showing the 4-inch TFT color display, rotary knobs for tuning and volume, and various function buttons.

### 4.1. Front Panel

- **4-inch TFT Color Display:** Shows station information, time, date, menu options, and more. Dimmable with three brightness levels (Hi/Med/Lo).

- **Power Button:** Turns the radio on or off.
- **Rotary Knobs:** Left knob for navigation/selection, right knob for volume control.
- **Function Buttons:** Include Mode, Info/Menu, Back, Pair, Presets (1, 2, 3, 4+), Play/Pause, Skip Forward/Backward.
- **Speaker Grille:** Covers the stereo speakers.

## 4.2. Rear/Side Panel



Figure 4.2: Side view illustrating the compact dimensions (24 cm width, 17 cm height, 11.5 cm depth) and the location of the AUX-In, Headphone, and USB charging ports.

- **Telescopic Antenna:** Extend for optimal DAB+ and FM reception.
- **AUX-In (3.5 mm) Port:** For connecting external audio devices.
- **Headphone Jack:** For private listening.
- **USB Charging Port (5V/1A):** For charging compatible external devices.
- **DC In Port:** For connecting the power adapter.

## 5. SETUP

### 5.1. Initial Placement

Place the radio on a stable, flat surface. For optimal radio reception, extend the telescopic antenna fully. Avoid placing the radio near large metal objects or other electronic devices that may cause interference.



Figure 5.1: The MEDION P66700 radio positioned on a shelf in a living space, demonstrating its aesthetic integration and the importance of proper antenna extension for digital radio reception.

### 5.2. Connecting Power

1. Insert the power cable into the DC In port on the back of the radio.
2. Plug the other end of the power cable into a wall outlet.

### 5.3. First Power On and Automatic Scan

1. Press the Power button to turn on the radio.
2. The radio will typically start in DAB+ mode and perform an automatic scan (AMS - Automatic Memory System) to find

available stations. This may take a few minutes.

3. Once the scan is complete, the radio will tune to the first available station.

## 5.4. Setting Time and Date

In DAB+ mode, the time and date are usually synchronized automatically via the broadcast signal. If manual adjustment is needed or for FM mode, refer to the 'Operating' section for menu navigation.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Power On/Off and Volume Control

- **Power:** Press the Power button to turn the unit on or off.
- **Volume:** Rotate the right knob to adjust the volume level.

### 6.2. Mode Selection

Press the **Mode** button repeatedly to cycle through available modes: DAB+, FM, Bluetooth, and AUX.

### 6.3. DAB+ Radio Operation



Figure 6.1: The DAB+ digital radio logo, indicating superior sound quality and more station choices.

- **Station Selection:** In DAB+ mode, rotate the left knob to browse available stations. Press the knob to select a station.
- **Full Scan:** If you move the radio or want to update the station list, go to the DAB+ menu (press Info/Menu), select 'Full Scan' to perform a new automatic search.
- **Information Display:** Press the **Info/Menu** button to cycle through different information displays, such as program type, signal strength, bit rate, and time/date.
- **Saving Presets:** The radio supports 30 DAB+ presets. To save a station, tune to the desired station, then press and hold one of the preset buttons (1, 2, 3, or 4+). Use the left knob to select a preset number (1-30) and press to confirm.
- **Recalling Presets:** Briefly press the corresponding preset button (1, 2, 3, or 4+) to recall a saved station.

### 6.4. FM Radio Operation

- **Auto Scan:** In FM mode, press and hold the left knob to automatically scan for the next available station.
- **Manual Tuning:** Briefly rotate the left knob to fine-tune the frequency step by step.
- **Saving Presets:** The radio supports 20 FM presets. The process is similar to DAB+ presets. Tune to the desired station, then press and hold one of the preset buttons (1, 2, 3, or 4+). Use the left knob to select a preset number (1-20) and press to confirm.
- **Recalling Presets:** Briefly press the corresponding preset button (1, 2, 3, or 4+) to recall a saved station.

# Alles im Blick dank 4" TFT-Farbdisplay

Dimmbar durch 3 wählbare Helligkeitsstufen



Figure 6.2: The radio highlighting its capacity for 30 station presets for both DAB+ and FM, allowing quick access to favorite channels.

## 6.5. Bluetooth Operation

# 2 x 4,5 W RMS im kompakten Format

Individueller Sound dank Equalizer



Figure 6.3: Illustration of wireless music streaming via Bluetooth 5.3 from a smartphone to the MEDION P66700 radio.

- **Pairing:** Switch the radio to Bluetooth mode. The display will show 'Pairing' or 'Waiting for connection'. On your smartphone or other Bluetooth device, enable Bluetooth and search for 'MEDION P66700'. Select it to pair.
- **Playing Audio:** Once paired, you can play audio from your connected device. Use the Play/Pause and Skip buttons on the radio or your device to control playback.

## 6.6. AUX Input

Connect an external audio device (e.g., MP3 player, CD player) to the AUX-In (3.5 mm) port on the back of the radio using an audio cable (not included). Switch the radio to AUX mode to listen to audio from the connected device.

## 6.7. Alarm Clock Function



Figure 6.4: The radio serving as an alarm clock, positioned on a bedside table next to a sleeping person.

The radio features two independent alarm times. You can set the alarm to wake you with a radio station (DAB+ or FM) or a buzzer tone.

- **Setting Alarms:** Access the alarm settings via the Info/Menu button. Follow the on-screen prompts to set alarm time, source, volume, and frequency (daily, weekdays, weekends, once).
- **Snooze:** When the alarm sounds, press any button (except Power) to activate snooze. The alarm will sound again after a set interval.
- **Stop Alarm:** Press the Power button to turn off the alarm completely until the next set time.

## 6.8. Display Brightness

The 4-inch TFT color display has adjustable brightness. Navigate to the display settings in the menu to choose between Hi, Med, or Lo brightness levels.

## 6.9. USB Charging Port

The USB port (5V/1A) on the back of the radio can be used to charge small electronic devices like smartphones or MP3 players.

## 7. MAINTENANCE AND CARE

Proper care will ensure the longevity of your MEDION P66700 radio.

- **Cleaning:** Always unplug the radio from the power outlet before cleaning. Use a soft, dry, lint-free cloth to wipe the surfaces. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish, especially the wooden casing.
- **Wooden Casing:** The wooden casing should be kept dry. Avoid direct sunlight and extreme temperature changes to prevent warping or cracking.
- **Antenna:** Handle the telescopic antenna gently to avoid bending or breaking it.
- **Storage:** If storing the radio for an extended period, unplug it and store it in a cool, dry place.
- **Battery Replacement (for backup):** If the clock backup batteries (2x AAA) are used, replace them when the clock settings are lost after a power outage. Ensure correct polarity when inserting new batteries.

## 8. TROUBLESHOOTING

If you encounter issues with your radio, refer to the following common problems and solutions before contacting support.

| Problem                            | Possible Cause                                                                                     | Solution                                                                                                                                                                         |
|------------------------------------|----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No power / Radio does not turn on. | Power cable not connected properly.<br>Power outlet is not working.                                | Ensure the power cable is securely plugged into the radio and the wall outlet. Test the outlet with another device.                                                              |
| No sound or low volume.            | Volume is too low. Mute is active.<br>Incorrect mode selected.                                     | Increase the volume. Check if the radio is muted. Ensure the correct mode (DAB+, FM, Bluetooth, AUX) is selected.                                                                |
| Poor radio reception (DAB+/FM).    | Antenna not extended. Weak signal area. Interference from other electronics.                       | Fully extend the telescopic antenna. Try repositioning the radio. Move the radio away from other electronic devices. Perform a full scan for DAB+ stations.                      |
| Bluetooth pairing fails.           | Radio not in pairing mode. Bluetooth device too far away. Device already paired with another unit. | Ensure the radio is in Bluetooth mode and 'Pairing' is displayed. Move your Bluetooth device closer to the radio. Disconnect the Bluetooth device from any other paired devices. |
| Alarm does not sound.              | Alarm not set or deactivated. Alarm volume too low.                                                | Check alarm settings in the menu to ensure it is enabled and set correctly. Increase the alarm volume.                                                                           |

## 9. SPECIFICATIONS

Technical specifications for the MEDION P66700 DAB+ FM Radio Alarm Clock.

| Feature              | Description                                                       |
|----------------------|-------------------------------------------------------------------|
| Brand                | MEDION                                                            |
| Model Number         | P66700 (MD44700)                                                  |
| Color                | Cream                                                             |
| Display              | 4-inch TFT Color Display (240 x 320 pixels), Dimmable (Hi/Med/Lo) |
| Radio Bands          | DAB+, FM (PLL-UKW)                                                |
| Preset Stations      | 30 DAB+ presets, 20 FM presets                                    |
| Audio Output Power   | 2 x 4.5 W RMS                                                     |
| Connectivity         | Bluetooth, AUX-In (3.5 mm)                                        |
| USB Port             | 5V/1A USB Charging Port                                           |
| Clock                | 12/24 hour display                                                |
| Alarm Functions      | 2 alarm times, Wake by Radio (FM/DAB) or Tone                     |
| Housing Material     | Wooden Casing                                                     |
| Power Source         | Mains Power, 2 x AAA batteries (for clock backup, included)       |
| Dimensions (approx.) | 24 cm (W) x 17 cm (H) x 11.5 cm (D)                               |

## 10. WARRANTY AND SUPPORT

Your MEDION P66700 radio comes with a warranty. Please refer to the included warranty card for detailed terms and conditions, including the warranty period and coverage.

For technical support, service, or further inquiries, please contact MEDION customer service. Contact information can typically be found on the warranty card, the MEDION website, or the product packaging.

Please have your product model number (P66700 or MD44700) and proof of purchase ready when contacting support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question