

- Manuals.plus /
- > Accutime /
- > Mattel Barbie Kids Digital LCD Watch Instruction Manual

Accutime BDT4124AZ

Mattel Barbie Kids Digital LCD Watch Instruction Manual

Model: BDT4124AZ

1. PRODUCT OVERVIEW

The Mattel Barbie Kids Digital LCD Watch is a fun and functional timepiece designed for young enthusiasts. It features a clear digital LCD display for easy time-telling, vibrant graphics of Barbie and a unicorn, and a comfortable, durable strap. A unique feature includes multi-colored flashing lights that activate with a button press, adding an interactive element to the watch.



Image 1.1: Front view of the Barbie Digital LCD Watch, showcasing the Barbie and unicorn graphics on the dial and the digital time display.

Key Features:

- Digital LCD time display for easy readability.
- Flashing multi-color lights activate with a press.
- Vibrant pink strap with printed Barbie, unicorn, and fairytale artwork.
- Lightweight plastic case with a curved bezel and child-friendly buttons.
- Adjustable strap designed to fit wrist circumferences from 5.5" to 8".

2. SETUP

2.1 Unboxing

Carefully remove the watch from its packaging. Ensure all protective films are removed from the watch face and strap

before use.

2.2 Initial Power On

The watch comes with a pre-installed battery. The digital display should be active upon removal from packaging. If the display is blank, please refer to the Troubleshooting section.

3. OPERATING INSTRUCTIONS

3.1 Setting the Time

The watch features two small buttons on the side of the case. These buttons are used to adjust the time and access other functions.

1. Press the **bottom-right button** once to display the current time.
2. Press the **bottom-right button** repeatedly to cycle through time (hour/minute), date (month/day), and seconds.
3. To set the time, press and hold the **bottom-right button** until the hour digits begin to flash.
4. While the hour digits are flashing, press the **top-right button** to advance the hour.
5. Press the **bottom-right button** again to move to the minute digits.
6. Press the **top-right button** to advance the minutes.
7. Repeat this process for setting the month and day if desired.
8. Once all settings are complete, press the **bottom-right button** one last time to exit setting mode.



Image 3.1: Side view of the watch, highlighting the two control buttons used for setting time and activating features.

3.2 Activating Flashing Lights

To activate the multi-colored flashing lights on the watch dial:

- Press the **top-right button** once. The lights will flash for a few seconds.





Image 3.2: The watch face with its multi-colored LED lights illuminated, creating a vibrant display.

4. MAINTENANCE

4.1 Cleaning

To clean your watch, gently wipe the case and strap with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the watch casing.

4.2 Water Resistance

IMPORTANT: This watch is **NOT waterproof**. Avoid exposing the watch to water, including showering, bathing, swimming, or heavy rain. Water exposure can cause irreversible damage to the internal components.

4.3 Battery Replacement

The watch is powered by 2 x LR41 (1.5V) batteries. When the display dims or stops functioning, it's time to replace the batteries. Battery replacement should ideally be performed by an adult or a qualified technician to prevent damage to the watch. The battery compartment is located on the back of the watch.



Image 4.1: Rear view of the watch, displaying the model number, manufacturer, and battery specifications.

5. TROUBLESHOOTING

5.1 Display is Blank or Dim

- Check if the battery needs replacement.

- Ensure the watch has not been exposed to water.

5.2 Lights Not Flashing

- Ensure the top-right button is pressed firmly.
- Check battery level; low battery can affect light functionality.

5.3 Time is Incorrect

- Follow the instructions in Section 3.1 to reset the time.
- If the time consistently loses accuracy, the battery may be low.

6. SPECIFICATIONS

Feature	Detail
Model Number	BDT4124AZ
Display Type	Digital LCD
Power Source	2 x LR41 (1.5V) Batteries
Wrist Circumference	5.5" to 8"
Recommended Age	Ages 4+
Manufacturer	Accutime Watch Corp.
Package Dimensions	3.07 x 3.07 x 2.99 inches
Item Weight	3.84 ounces

7. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Mattel Barbie Kids Digital LCD Watch, please contact Accutime Watch Corp. directly. Please refer to the product packaging or the official Accutime website for the most current contact information and warranty details.

You can visit the Accutime Store online for more information:[Accutime Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CM4DQ8JK>

More documents and user manuals: <https://manuals.plus/>