

Manuals.plus /

› **Bauknecht** /

› Bauknecht WATK Sense 117B 59 N Washer Dryer User Manual

Bauknecht WATK Sense 117B 59 N

Bauknecht WATK Sense 117B 59 N Washer Dryer User Manual

Model: WATK Sense 117B 59 N

INTRODUCTION

Thank you for choosing the Bauknecht WATK Sense 117B 59 N Washer Dryer. This appliance combines the functionality of a washing machine and a tumble dryer, offering convenience and efficiency for your laundry needs. With a washing capacity of 11 kg and a drying capacity of 7 kg, it is designed to handle a wide range of fabrics and load sizes. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance.

Key features include:

- **Active Care:** Pre-mixes water and detergent for enhanced stain removal.
- **Steam Hygiene with Antivirus:** Uses 80°C steam to remove viruses and bacteria.
- **Steam Refresh:** Freshens clothes and reduces wrinkles in 20 minutes without washing.
- **Anti-Allergy Program:** Reduces common allergens like pollen, mites, and pet hair.
- **Quick 30':** A fast 30-minute wash cycle.



Front view of the Bauknecht WATK Sense 117B 59 N washer dryer, showcasing its sleek white design and central control panel.

SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance to prevent personal injury or damage. Keep this manual for future reference.

- Ensure the appliance is properly grounded and connected to a suitable power supply.
- Do not allow children to play with or operate the appliance.
- Never force the door open during operation.
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Always unplug the appliance before cleaning or performing maintenance.
- Keep the area around the appliance clear of obstructions.

SETUP

Unpacking and Positioning

Carefully remove all packaging materials. Ensure all transit bolts at the rear of the appliance are removed before use. These bolts secure the drum during transport and must be removed to prevent damage during operation.



The Bauknecht washer dryer seamlessly integrated into a modern laundry room setting, ready for use.

Water and Electrical Connection

Connect the water inlet hose to a cold water tap and the drain hose to a suitable drain. Ensure all connections are secure to prevent leaks. Plug the power cord into a grounded electrical outlet. The appliance operates on 220 Volts.

Leveling the Appliance

Use a spirit level to ensure the appliance is perfectly level. Adjust the feet at the bottom of the appliance as needed. Proper leveling reduces vibration and noise during operation.

OPERATING

Control Panel Overview

The control panel features a central program dial and touch-sensitive buttons for various options and settings.



A detailed view of the intuitive control panel, highlighting the program selection dial and touch controls for various functions.

Loading Laundry

Open the door and load laundry into the drum. Do not overload the appliance; ensure there is enough space for clothes to tumble freely. For optimal drying results, ensure the load size is appropriate for the 7 kg drying capacity.



The spacious stainless steel drum of the Bauknecht washer dryer, visible through the wide-opening door, ready for laundry.

Adding Detergent

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent and fabric softener to the designated compartments. Refer to your detergent packaging for recommended dosages.

Program Selection

Turn the program dial to select the desired wash or wash & dry program. Available programs include:

- **Wash & Dry Programs:** Quick, Mix, XL
- **Wash Programs:** Intensive 60-90°C, Eco 40-60, Wash 20°C, Cotton, Synthetics, Wool, Delicates, Anti-Allergy, Stains 40°, Refresh

Select additional options such as Steam Hygiene, Steam Refresh, or Active Care using the touch buttons.



The Steam Refresh function revitalizes garments with steam, reducing odors and wrinkles without a full wash cycle.



Active Care ensures thorough cleaning by pre-mixing detergent, while Steam Hygiene provides deep sanitization for your laundry.



The Anti-Allergy program is designed to protect sensitive skin by effectively removing common allergens from fabrics.



The Quick 30' program offers a rapid wash cycle for lightly soiled items, saving time and energy.

Starting a Cycle

Press the Start/Pause button to begin the selected program. The display will show the remaining time.

End of Cycle

Once the program is complete, the appliance will signal with an audible alert and the door will unlock. Remove laundry promptly to prevent wrinkles.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washer dryer.

Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to remove any residue. Clean the housing with a brush if necessary.

Cleaning the Drum

Periodically run a drum cleaning cycle (if available) or a hot wash cycle with no laundry and a small amount of detergent to prevent odors and residue buildup.



The durable stainless steel drum, embossed with 'TITANIUM', designed for effective and gentle laundry care.

Cleaning the Filter

Locate the pump filter, usually at the bottom front of the appliance. Open the cover, drain any residual water, and unscrew the filter. Clean any lint or debris from the filter and its housing. Reassemble securely.

Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Appliance does not start	No power; Door not closed properly; Program not selected.	Check power supply; Ensure door is latched; Select a program and press Start.
Poor washing results	Overloading; Insufficient detergent; Incorrect program.	Reduce load size; Use correct detergent amount; Select appropriate program.
Clothes not drying properly	Overloading; Lint filter clogged; Incorrect drying program.	Reduce load size for drying; Clean the lint filter; Select a suitable drying program.
Excessive noise/vibration	Appliance not level; Transit bolts not removed; Uneven load.	Adjust leveling feet; Remove all transit bolts; Redistribute laundry evenly.
Water leakage	Hoses loose; Detergent dispenser clogged; Drain filter loose.	Check and tighten hose connections; Clean detergent dispenser; Secure drain filter.

SPECIFICATIONS

Detailed technical specifications for the Bauknecht WATK Sense 117B 59 N Washer Dryer:

- **Model:** WATK Sense 117B 59 N
- **Dimensions (D x W x H):** 60.5 x 59.5 x 85 cm
- **Weight:** 73.4 kg
- **Wash Capacity:** 11 kg
- **Dry Capacity:** 7 kg
- **Voltage:** 220 Volts
- **Control Type:** Touch
- **Drum Material:** Stainless Steel
- **Included Components:** Power cable
- **Energy Efficiency Class (Washing & Drying Cycle):** D
- **Energy Efficiency Class (Washing Cycle):** C
- **Noise Level (Spinning):** 79 dB



Dimensional diagram of the Bauknecht washer dryer, providing precise measurements for installation planning.




ENERG ⚡



BAUKNECHT

WATK Sense 117B 59 N



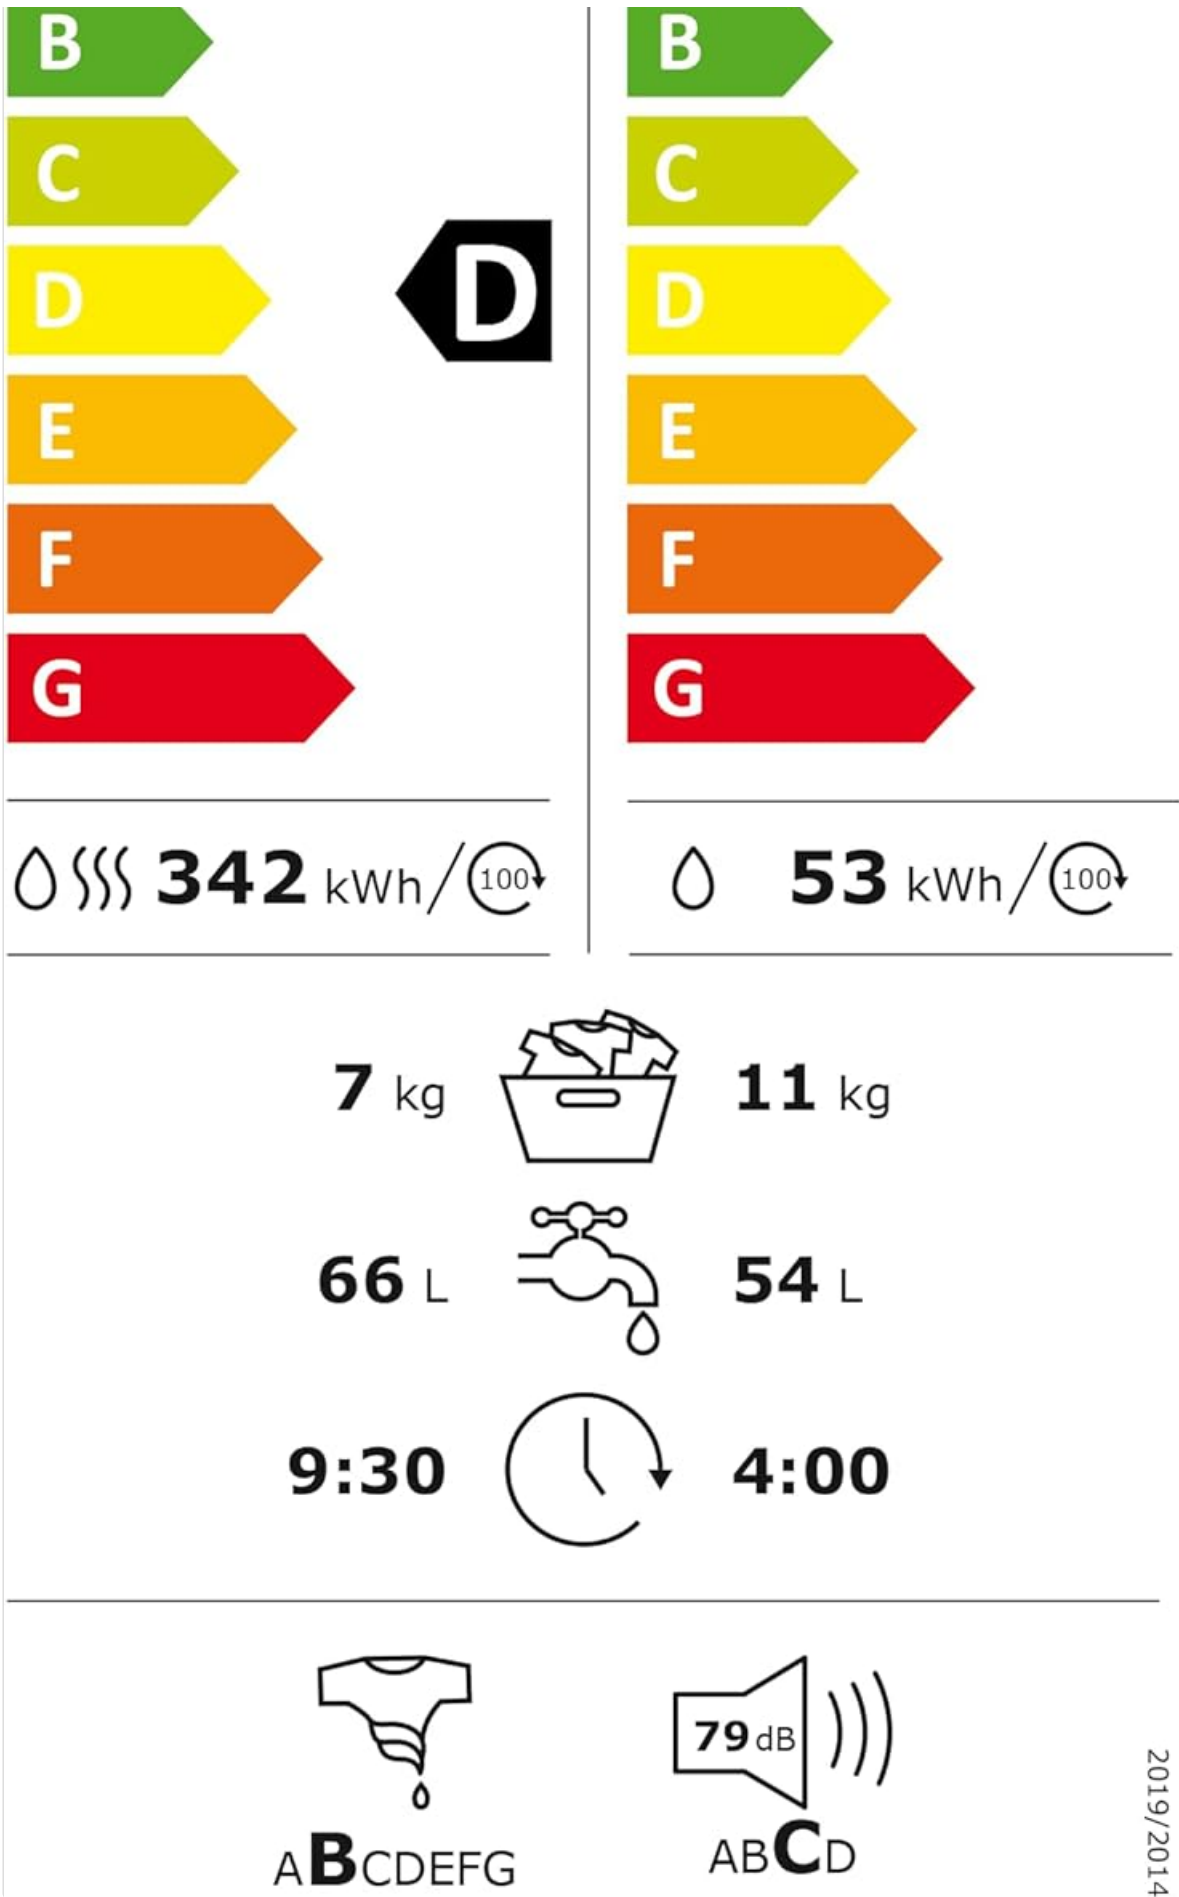

The energy label provides key information on the appliance's energy consumption, capacities, and noise levels. For more details, visit the EPREL database.

2019/2014

WARRANTY AND SUPPORT

Your Bauknecht appliance comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Bauknecht website.

For technical support, spare parts, or service requests, please contact Bauknecht customer service. You can find contact information on the official Bauknecht website or in the documentation provided with your appliance.