

[Manuals.plus](#) /

> [Wahl](#) /

> Wahl Super Taper Cordless Pro Hair Clipper User Manual

Wahl Super Taper Cordless Pro

Wahl Super Taper Cordless Pro Hair Clipper

User Manual

INTRODUCTION

Thank you for choosing the Wahl Super Taper Cordless Pro Hair Clipper. This professional-grade cordless clipper is designed for precision and durability, featuring a powerful brushless motor and high-precision chrome-plated blades. This manual provides essential information for safe operation, maintenance, and optimal performance of your new clipper.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. To reduce the risk of electric shock, injury, or damage, always follow these basic safety precautions:

- Do not use the equipment in damp or wet locations.
- Do not allow the equipment to come into contact with water.
- Do not use the equipment in public areas.
- Do not use the equipment in areas with a risk of explosion.
- Do not use the equipment on children under 3 years of age.
- Do not use the equipment on body parts where the skin is thin or sensitive.
- Do not force the equipment against the skin.
- Avoid excessive use of the equipment.
- Always unplug the appliance from the electrical outlet immediately after use and before cleaning.

PACKAGE CONTENTS

Your Wahl Super Taper Cordless Pro package includes the following items:

- Wahl Super Taper Cordless Pro Hair Clipper
- 6 Guide Combs: #½ (1.5mm), #1 (3mm), #1½ (4.5mm), #2 (6mm), #3 (10mm), #4 (13mm)

- Lubricating Oil
- Cleaning Brush
- Flat-top Styling Comb
- Power Charger



Image: The Wahl Super Taper Cordless Pro clipper shown alongside its complete set of accessories, including guide combs, oil, brush, comb, and charger.

SETUP

Initial Charging

Before first use, fully charge your clipper. Connect the power charger to the clipper and plug it into a suitable electrical outlet. The LED indicator will show the charging status:

- **Full Charge:** All 3 LED lights illuminated.
- **2 Hours Remaining:** 2 LED lights illuminated.
- **0.5 Hour Remaining:** 1 LED light illuminated.

A full charge takes approximately 120 minutes and provides up to 240 minutes (4 hours) of cordless operation.

Attaching Guide Combs

To attach a guide comb, align the comb with the clipper blade and push it firmly until it clicks into place. Ensure it is securely fastened before use. To remove, gently pull the comb away from the blade.

OPERATING INSTRUCTIONS

Powering On/Off

To turn the clipper ON, slide the power switch upwards. To turn it OFF, slide the switch downwards. The clipper can be used cordlessly or while plugged in.

Blade Adjustment Lever

The metal blade adjustment lever allows you to change the cutting length without changing guide combs. This lever adjusts the blade from 1.0 mm (lever closed) to 2.0 mm (lever open). This feature is ideal for blending and tapering.



Image: Front view of the Wahl Super Taper Cordless Pro, highlighting the blade and adjustment lever.

Hair Cutting Tips

- Always start with a longer guide comb than you think you need.
- Cut against the direction of hair growth for an even cut.

- Use smooth, overlapping strokes.
- The chrome-plated Standard (taper) blades can be used on both dry and wet hair.
- Regularly clear hair from the blades during use to maintain performance.

MAINTENANCE

Cleaning the Blades

After each use, turn off and unplug the clipper. Use the provided cleaning brush to remove loose hairs from the blades. For a more thorough cleaning, you may carefully remove the blade set (refer to Wahl's official support for detailed instructions if needed) and brush away debris.

Oiling the Blades

To ensure optimal cutting performance and extend the life of your blades, apply a few drops of the included lubricating oil to the teeth of the blades after every few uses or as needed. Turn the clipper on for a few seconds to allow the oil to distribute evenly. Wipe off any excess oil.

Storage

Store the clipper in a dry, cool place, away from direct sunlight and moisture. Keep it out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper not turning on.	Battery is depleted; Power switch is off.	Charge the clipper fully; Ensure the power switch is in the 'ON' position.
Clipper pulling hair or cutting poorly.	Blades are dull, dirty, or not oiled; Hair buildup in blades.	Clean and oil the blades; Remove any hair buildup. If blades are dull, consider professional sharpening or replacement.
Clipper making unusual noise.	Blades not aligned; Lack of lubrication.	Check blade alignment; Apply lubricating oil to blades.
Battery not holding charge.	Battery lifespan reached; Improper charging.	Ensure proper charging procedures are followed. If the battery is old, it may need replacement (contact Wahl support).

If you encounter issues not listed here or if the problem persists, please contact Wahl customer support for assistance.

SPECIFICATIONS

- **Model:** Super Taper Cordless Pro
- **Motor:** Brushless Rotary Motor, 5,800 rpm
- **Blade Type:** Chrome-plated Standard (Taper) Blades
- **Cutting Length Adjustment:** 1.0 mm (closed) to 2.0 mm (open)
- **Battery Type:** Lithium-Ion
- **Cordless Run Time:** Up to 240 minutes (4 hours)
- **Charge Time:** 120 minutes

- **Power Source:** Cordless/Corded operation
- **Dimensions:** Approximately 7.8 x 15.6 x 24.1 cm (3.07 x 6.14 x 9.49 inches)
- **Weight:** Approximately 670 g (1.48 lbs)
- **Material:** Metal blade, durable casing

WARRANTY AND SUPPORT

Your Wahl Super Taper Cordless Pro Hair Clipper comes with a **2-year warranty** from the date of purchase, covering manufacturing defects and malfunctions. Please retain your proof of purchase for warranty claims.

For warranty service, technical support, or replacement parts, please contact Wahl customer service. Contact information can typically be found on the Wahl official website or on your product packaging.

Official Distributor: This product is supplied by an official Wahl distributor, ensuring authenticity and warranty validity.

© 2023 Wahl. All rights reserved.
For more information, visit www.wahl.com