

## Sanitaire SC580A

# Sanitaire Transport Commercial Cordless Backpack Vacuum SC580A

Model: SC580A | Brand: Sanitaire

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read and understand all safety instructions before operating the Sanitaire Transport Commercial Cordless Backpack Vacuum. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- Always ensure the vacuum is turned off and batteries are removed before performing any maintenance or cleaning.
- Do not operate the vacuum in wet conditions or immerse it in water.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- The cordless design minimizes tripping hazards, enhancing safety in busy environments.

## PACKAGE CONTENTS

---

Verify that all items are present in your package:

- Sanitaire Transport Commercial Cordless Backpack Vacuum Unit
- Adjustable Wand (Curved Aluminum Wands)
- Dual 24V Removable Batteries (2 included)
- Dual Battery Charger
- Upholstery Tool
- Dusting Brush
- Floor Tool
- Crevice Tool



Image: Included accessories for the Sanitaire Transport Commercial Cordless Backpack Vacuum.

## SETUP AND ASSEMBLY

---

### 1. Battery Charging and Installation

The vacuum operates on a dual 24V battery system, allowing for extended runtime and efficient shift management. Ensure batteries are fully charged before first use.

1. Place the dual battery charger on a stable, flat surface.
2. Connect the charger to a standard power outlet.
3. Insert both 24V Lithium-Ion batteries into the charging slots. Indicator lights on the charger will show charging status.
4. Once fully charged, remove the batteries from the charger.
5. Locate the battery compartments on the base of the backpack vacuum.
6. Slide the charged batteries into the compartments until they click securely into place. The vacuum is designed to draw power from one battery at a time, switching automatically when one is depleted.



Image: Dual 24V Lithium-Ion batteries and charger.

### 2. Assembling the Vacuum

1. Attach the flexible hose to the vacuum unit's inlet port. Ensure a secure connection.
2. Connect the curved aluminum wands to the end of the hose. These wands can be adjusted for length and angle to suit various cleaning tasks.
3. Select the desired cleaning tool (e.g., floor tool, dusting brush, crevice tool, upholstery tool) and attach it firmly to the end of the wand.

### 3. Adjusting the Backpack Harness

The ergonomically designed harness ensures comfort and maneuverability during extended cleaning sessions.

1. Put on the backpack vacuum as you would a regular backpack.
2. Adjust the padded shoulder straps to ensure the unit sits comfortably and securely on your back.
3. Fasten the waist belt and adjust it for a snug fit, distributing the weight evenly and reducing strain.



## ADJUSTABLE COMFORT HARNESS

### Fits Multiple Users

Image: Adjustable comfort harness for a secure and comfortable fit.

## OPERATING INSTRUCTIONS

---

### 1. Powering On/Off and Speed Control

The vacuum features handheld controls for convenient operation.

- To power on the vacuum, press the power button on the clippable remote controller.
- The remote controller also allows you to view the battery life of each battery without removing the backpack.
- The vacuum offers two speed settings: regular and boost. Use the appropriate button on the remote to switch between speeds.
- For continuous boost speed, the runtime is approximately 40 minutes. For regular speed, the runtime extends up to 70 minutes.

### 2. General Operation

The lightweight design (under 15 lbs) and cordless freedom allow for increased maneuverability and efficiency.

- Move freely around obstacles and furniture without the restriction of a power cord.
- The backpack design is ideal for cleaning large areas, stairs, and tight spaces, significantly increasing productivity compared to traditional upright vacuums.



Image: Cleaning a carpeted area with the backpack vacuum.




**EXTENDED RUN TIME**  
40 min (Max) | 70 min (Regular)

Image: Efficient cleaning of a hallway with the backpack vacuum.



## UNINTERRUPTED CLEANING Dual 24V Battery System

Image: Cleaning stairs with ease using the backpack vacuum.

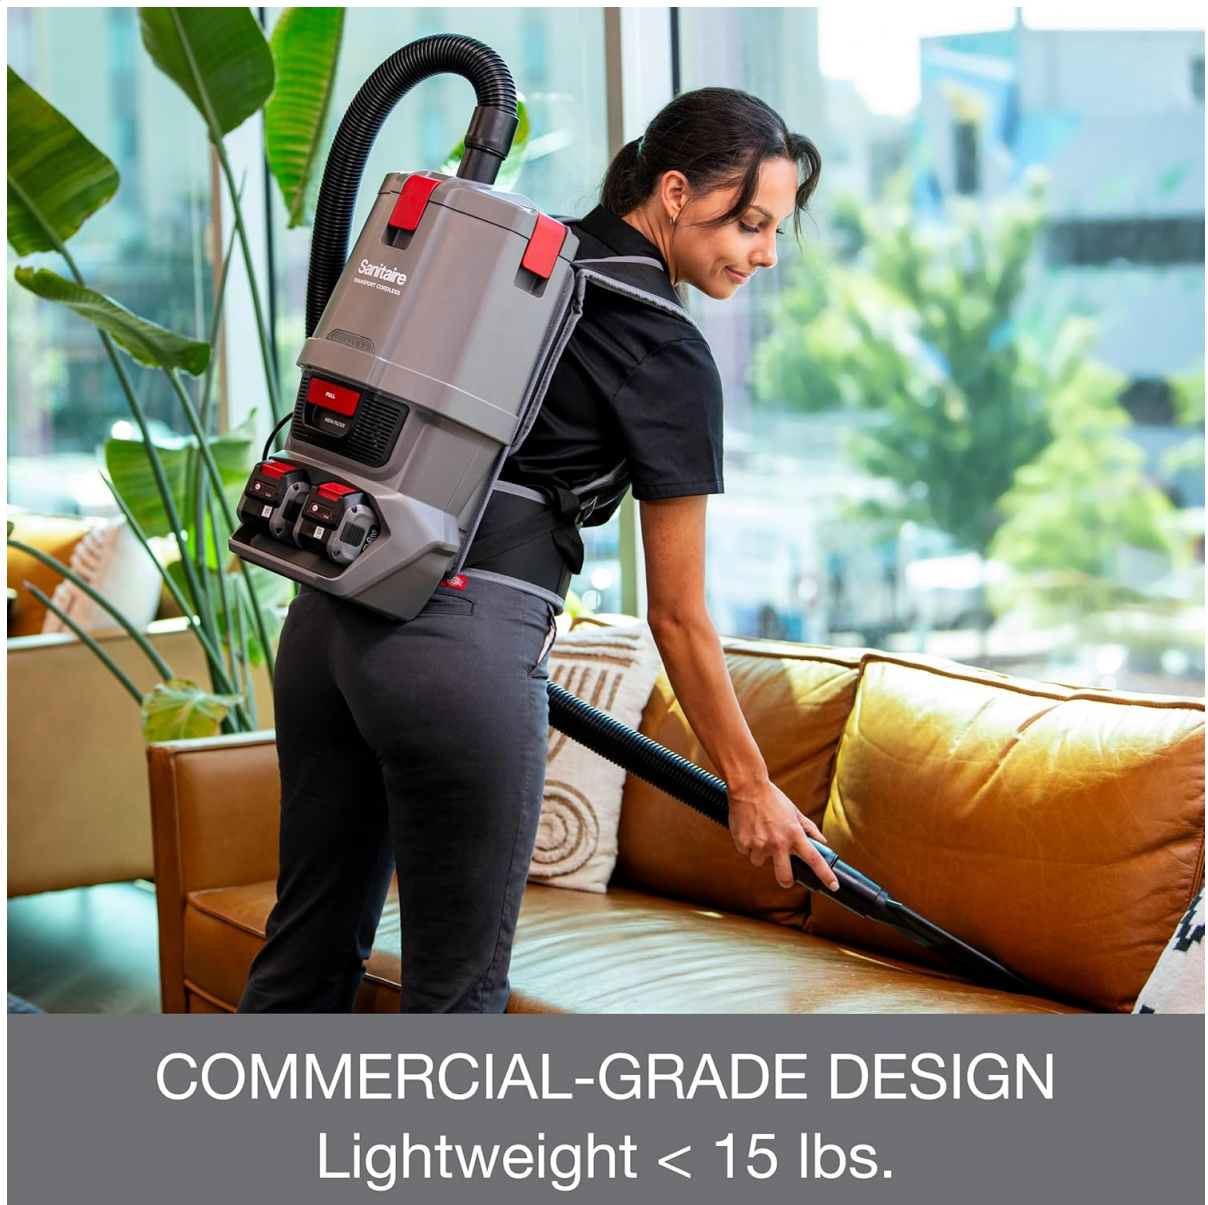

## COMMERCIAL-GRADE DESIGN Lightweight < 15 lbs.

Image: Using the upholstery tool for detailed cleaning.

### 3. Using Attachments

- **Floor Tool:** Ideal for general cleaning of carpets and hard floors.
- **Upholstery Tool:** Designed for cleaning fabric surfaces like chairs, sofas, and curtains.
- **Dusting Brush:** Use for delicate surfaces, vents, and intricate areas.
- **Crevice Tool:** Perfect for reaching into tight corners, edges, and narrow gaps.

---

Video: This video demonstrates the assembly, battery installation, and various operational aspects of the Sanitaire Transport Cordless Backpack Vacuum.

## MAINTENANCE

---

### 1. Emptying and Replacing Dust Bag

The vacuum utilizes a high-performance Sealed HEPA filtration system, capturing 99.97% of 0.3 micron particles.

1. Ensure the vacuum is powered off and batteries are removed.
2. Open the dust compartment by releasing the latches.

- Carefully remove the full dust bag and dispose of it properly.
- Insert a new dust bag, ensuring it is correctly seated and sealed within the compartment.
- Close the dust compartment securely.

## 2. Filter Maintenance

Regular maintenance of the HEPA filter is crucial for optimal air quality and vacuum performance.

- Check the HEPA filter regularly for signs of wear or excessive dirt buildup.
- Refer to the filter's specific instructions for cleaning or replacement intervals.
- Replace the HEPA filter as needed to maintain filtration efficiency and prevent motor strain.

## 3. General Cleaning

- Wipe down the exterior of the vacuum unit and accessories with a damp cloth.
- Ensure all parts are dry before reassembling or storing the vacuum.
- Inspect the hose and wands for any blockages or damage.

## TROUBLESHOOTING

If you encounter issues with your Sanitaire Transport Commercial Cordless Backpack Vacuum, refer to the following common solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Dead batteries; Batteries not properly inserted; Power button not pressed.	Charge batteries; Reinsert batteries securely; Press power button on remote.
Reduced suction	Full dust bag; Clogged hose/wand/attachment; Dirty HEPA filter.	Replace dust bag; Clear any blockages; Clean or replace HEPA filter.
Short runtime	Batteries not fully charged; Operating continuously on boost speed.	Ensure batteries are fully charged; Use regular speed for longer operation.

## SPECIFICATIONS

Feature	Detail
Brand	Sanitaire
Model Name	Sanitaire Transport Commercial Cordless Backpack Vacuum with Adjustable Wand, Dual 24V Batteries, Handheld Controls, SC580A
Model Number	SC580A
Special Feature	Cordless
Filter Type	HEPA Filter
Included Components	Upholstery Tool, Dusting Brush, Floor Tool, Crevice Tool, Curved Aluminum Wands, 2 Removable Batteries, Dual Battery Charger

Feature	Detail
Capacity	4 Quarts
Wattage	400 watts
Maximum Suction	70 Feet
Form Factor	Backpack
Color	Gray
Product Dimensions	17.25"L x 21.25"W x 8.5"H
Battery Description	Lithium-Ion
Noise Level	64 Decibels
Battery Life	70 minutes
Item Weight	14.6 pounds
Number of Speeds	2
Indoor/Outdoor Usage	Indoor

## WARRANTY AND SUPPORT

---

The Sanitaire Transport Commercial Cordless Backpack Vacuum SC580A comes with a **2-year commercial warranty**, ensuring reliability and peace of mind for professional use.

For technical support, warranty claims, or to purchase replacement parts and accessories, please visit the official Sanitaire website or contact their customer service department. Keep your purchase receipt and model number handy for faster service.