

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [AULCMEET](#) /

> [AULCMEET Replacement Remote Control for AKAI TV Models AKTV 4337M, AKTV 510M, AKTV 5542M SMART, AKTV 2821M SMART, AKTV 3219M, AKTV 4330NM SMART, AKTV 4335M, AKTV 3294HD SMART, AKTV 4329](#)

AULCMEET CXW-AKTV4337M-RM

AULCMEET Replacement Remote Control User Manual

Brand: AULCMEET | Model: CXW-AKTV4337M-RM

INTRODUCTION

This manual provides essential instructions for the AULCMEET Replacement Remote Control, model CXW-AKTV4337M-RM. This remote is designed as a direct replacement for various AKAI TV models, offering immediate functionality without complex setup. Please read this manual carefully to ensure proper use and longevity of your remote control.

Compatible AKAI TV Models include: AKTV4337M, AKTV510M, AKTV5542M SMART, AKTV2821M SMART, AKTV3219M, AKTV4330NM SMART, AKTV4335M, AKTV3294HD SMART, AKTV4329, ATE58FM1375, AK43FSM1440, AK43SM1433, AK50M1466.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.





Image: Back view of the remote control, highlighting the battery compartment.

2. Initial Use (No Programming Required)

This AULCMEET replacement remote control is designed for immediate use with compatible AKAI TV models. No programming, pairing, or complex setup is required. Once batteries are installed, the remote is ready to operate your television.

OPERATING INSTRUCTIONS

To operate your AKAI TV, point the remote control directly at the television's infrared sensor. Ensure there are no obstructions between the remote and the TV.



Image: Front view of the remote control, displaying all buttons and their labels.

Key Button Functions:

- **Power ():** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select TV channels.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes TV channels sequentially.
- **Mute ():** Mutes or unmutes the TV sound.
- **SOURCE:** Selects input sources (e.g., HDMI, AV).
- **MENU:** Accesses the TV's main menu.
- **Navigation Buttons (▲ ▼ ◀ ▶):** Navigate through menus and options.
- **OK:** Confirms selections in menus.
- **EXIT:** Exits the current menu or function.
- **HOME:** Returns to the TV's home screen (for Smart TV models).
- **DISPLAY:** Shows current channel information or status.
- **P.MODE / S.MODE:** Picture Mode / Sound Mode selection.
- **FAV:** Accesses favorite channels list.
- **SUB-T:** Subtitle control.
- **TEXT/CC:** Teletext / Closed Caption control.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV model and context (e.g., Smart TV

apps, teletext).

- **Media Playback Controls** (◀◀, ▶▶, ▶, ■): Control media playback (e.g., USB content).
- **USB:** Direct access to USB media.
- **EPG:** Electronic Program Guide.

MAINTENANCE

Cleaning the Remote Control

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote's electronics.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.

Storage

When not in use for extended periods, it is advisable to remove the batteries to prevent leakage, which can damage the remote control.

TROUBLESHOOTING

- **Remote is not working:**
 - Ensure batteries are correctly installed with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Check if there are any obstructions between the remote control and the TV's infrared sensor.
 - Confirm that the remote is pointed directly at the TV.
- **Limited operating range:**
 - Replace batteries if they are low.
 - Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the TV's IR sensor.
 - Reduce the distance between the remote and the TV. The maximum effective range is approximately 10 meters.
- **Certain buttons do not function:**
 - Verify that the button's function is applicable to your specific AKAI TV model. Some buttons may be specific to certain TV features (e.g., Smart TV functions).
 - Clean the remote control, especially around the non-functioning buttons, to remove any dirt or debris.

SPECIFICATIONS

Brand	AULCMEET
Model Name	RM (CXW-AKTV4337M-RM)
Connectivity Technology	Infrared

Special Feature	Ergonomic Design
Compatible Devices	AKAI TV models: AKTV4337M, AKTV510M, AKTV5542M SMART, ATE58FM1375, AK43FSM1440, AK43SM1433, AK50M1466, AKTV2821M SMART, AKTV3219M, AKTV4330NM SMART, AKTV4335M, AKTV3294HD SMART, AKTV4329
Number of Buttons	45
Controller Type	Button Control
Maximum Range	10 Meters
Item Weight	58 Grams

WARRANTY AND SUPPORT

Specific warranty information and direct customer support details are not available in the provided product data. For any issues or inquiries, please refer to the retailer or the original point of purchase.