

AYRELY AYCL-ME

AYRELY Grandfather Mantel Clock (Model AYCL-ME) Instruction Manual

Model: AYCL-ME

INTRODUCTION

Thank you for choosing the AYRELY Grandfather Mantel Clock. This manual provides detailed instructions for the proper setup, operation, maintenance, and troubleshooting of your clock. Please read this manual thoroughly before use to ensure optimal performance and longevity of your timepiece.

PRODUCT OVERVIEW

The AYRELY Grandfather Mantel Clock features an elegant design with a solid ash wooden frame and a classic analog display. It is equipped with a precise quartz movement and a versatile electronic chime function.

Key Features:

- **Elegant Wooden Frame:** Crafted from sturdy ash wood with meticulously hand-polished decorative beads and a gracefully curved top.
- **Analog Display:** Vintage dial with bold black numerals and hands for clear readability.
- **Electronic Chime Function:** Offers hourly and quarter-hour chimes with adjustable volume and multiple musical modes, including Westminster. Includes a nighttime mute mode.
- **Battery Operated:** Requires batteries for operation (not included).



Brass ring



Exquisite product details



Handmade solid wood decorative beads

Image: Close-up view highlighting the brass ring around the clock face, the detailed wooden craftsmanship, and the decorative beads on the base.

Classic Mantel Clock

Made of solid wood. It will never go out of style



Image: The AYRELY Mantel Clock displayed on a classic fireplace mantel, demonstrating its aesthetic integration into home decor.

SETUP

1. Unpacking and Placement:

- Carefully remove the clock from its packaging.
- Place the clock on a stable, flat surface such as a mantel, shelf, or desk. Ensure the surface is level to prevent any operational issues.

2. Battery Installation:

The clock requires batteries for both timekeeping and chime functions. Batteries are not included.

1. Locate the battery compartments on the back and bottom of the clock.
2. Insert the required batteries, ensuring correct polarity (+/-).
3. Close the battery compartment covers securely.



Image: Rear view of the clock, indicating the location of the chime control box at the bottom of the base.

3. Setting the Time:

1. Turn the time setting knob, usually located on the back of the clock mechanism, to set the correct time.
2. Advance the hands clockwise until the desired time is displayed.

OPERATING INSTRUCTIONS

Timekeeping:

Once batteries are installed and the time is set, the clock will begin accurate timekeeping. The quartz movement ensures precision.

Chime Settings:

The electronic chime unit is located at the bottom of the clock. Refer to the controls on this unit for chime adjustments.

- **Chime Modes:** Select from various musical chime modes, including Westminster and other retro music options. Consult the chime unit for specific mode selection switches or buttons.
- **Volume Adjustment:** Use the volume control dial or switch on the chime unit to adjust the chime loudness to your preference.

- **Nighttime Mute Mode:** This feature automatically silences the chime between 9:00 PM (21:00) and 6:00 AM (06:00) to ensure quiet during sleeping hours. Activate this mode via the designated switch on the chime unit.
- **Chime Calibration:** After setting the time, it may be necessary to calibrate the chime so that it strikes the correct number of times for the hour. Follow the specific instructions provided on the chime unit or in a supplementary guide for precise calibration. This typically involves setting the clock to 12:00, allowing it to chime, and then adjusting the chime count if it does not match the hour.

MAINTENANCE

Cleaning:

- **Wooden Frame:** Wipe the wooden frame with a soft, dry cloth. For deeper cleaning, use a wood-friendly cleaner sparingly and follow product instructions. Avoid abrasive cleaners or excessive moisture.
- **Clock Face:** Gently wipe the clock face and glass cover with a soft, lint-free cloth. Do not use sprays directly on the clock face.

Battery Replacement:

Replace batteries annually or when the clock begins to lose time or the chime weakens. Always use fresh, high-quality batteries of the specified type.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running	Dead or incorrectly installed batteries	Replace batteries with new ones, ensuring correct polarity.
Time is inaccurate	Low battery power	Replace batteries.
Chime not working	Chime batteries dead, chime turned off, or night mode active	Check and replace chime batteries. Ensure chime is turned on and night mode is not active if chime is desired.
Chime strikes incorrect hour	Chime not calibrated	Refer to the "Chime Calibration" section under Operating Instructions to recalibrate the chime.

SPECIFICATIONS

- **Brand:** AYRELY
- **Model Number:** AYCL-ME
- **Display Type:** Analog
- **Power Source:** Battery Powered (Batteries not included)
- **Material:** Wood (Ash Wooden Frame)
- **Product Dimensions:** 15.94"W x 10.12"H
- **Item Weight:** 4.62 pounds (2.1 Kilograms)
- **Special Features:** Adjustable Volume, Hourly Chime, Musical Chime Modes (Westminster, etc.), Night Mode
- **Room Type:** Suitable for Home Office, Kitchen, Living Room



123

**BIG
NUMBER**



**SOLID WOODEN
FRAME**



**SEMI-HAND
MADE**



**ELECTRONIC
CHIME*4 MODE**

Image: Product dimensions of the AYRELY Mantel Clock, showing its width and height.

WARRANTY INFORMATION

This AYRELY Grandfather Mantel Clock (Model AYCL-ME) comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any questions, concerns, or technical assistance regarding your AYRELY Grandfather Mantel Clock, please contact AYRELY customer support. Refer to the product packaging or the official AYRELY website for the most current contact information.