

[Manuals.plus](#) /

› [Oraimo](#) /

› Oraimo Detachable Stick Vacuum Battery (Model OAS-BP-SV102) Instruction Manual

Oraimo OAS-BP-SV102

Oraimo Detachable Stick Vacuum Battery (Model OAS-BP-SV102) Instruction Manual

For use with Oraimo UltraCleaner S (Model OSV-102)

1. PRODUCT OVERVIEW

This manual provides essential instructions for the safe and efficient use of your Oraimo Detachable Stick Vacuum Battery, Model OAS-BP-SV102. This battery is specifically designed as a replacement or spare for the Oraimo UltraCleaner S (Model OSV-102) cordless vacuum cleaner.



Figure 1: The Oramo Detachable Stick Vacuum Battery (Model OAS-BP-SV102). This image displays the compact, black battery unit with a blue power button and LED indicators for charge status.

2. SAFETY INSTRUCTIONS

- Use only the original Oramo charger provided with your UltraCleaner S vacuum cleaner to charge this battery.
- Do not expose the battery to extreme temperatures (above 60°C or below 0°C) or direct sunlight.
- Avoid dropping, puncturing, or disassembling the battery pack.
- Keep the battery away from water and moisture.
- If the battery shows signs of damage, swelling, or leakage, discontinue use immediately and dispose of it properly according to local regulations.
- Keep out of reach of children.

3. SETUP AND INSTALLATION

The Oramo Detachable Stick Vacuum Battery is designed for easy installation and removal from your UltraCleaner

S vacuum cleaner.

1. **Ensure Power Off:** Before installing or removing the battery, ensure the Oraimo UltraCleaner S vacuum cleaner is turned off and disconnected from any charging source.
2. **Locate Battery Compartment:** Identify the battery compartment on your Oraimo UltraCleaner S vacuum cleaner. This is typically located on the main body of the vacuum.
3. **Insert Battery:** Align the battery pack with the compartment and slide it in firmly until it clicks into place. Ensure it is securely seated.
4. **Remove Battery:** To remove, locate the battery release button or latch (refer to your UltraCleaner S manual for exact location), press it, and slide the battery out.

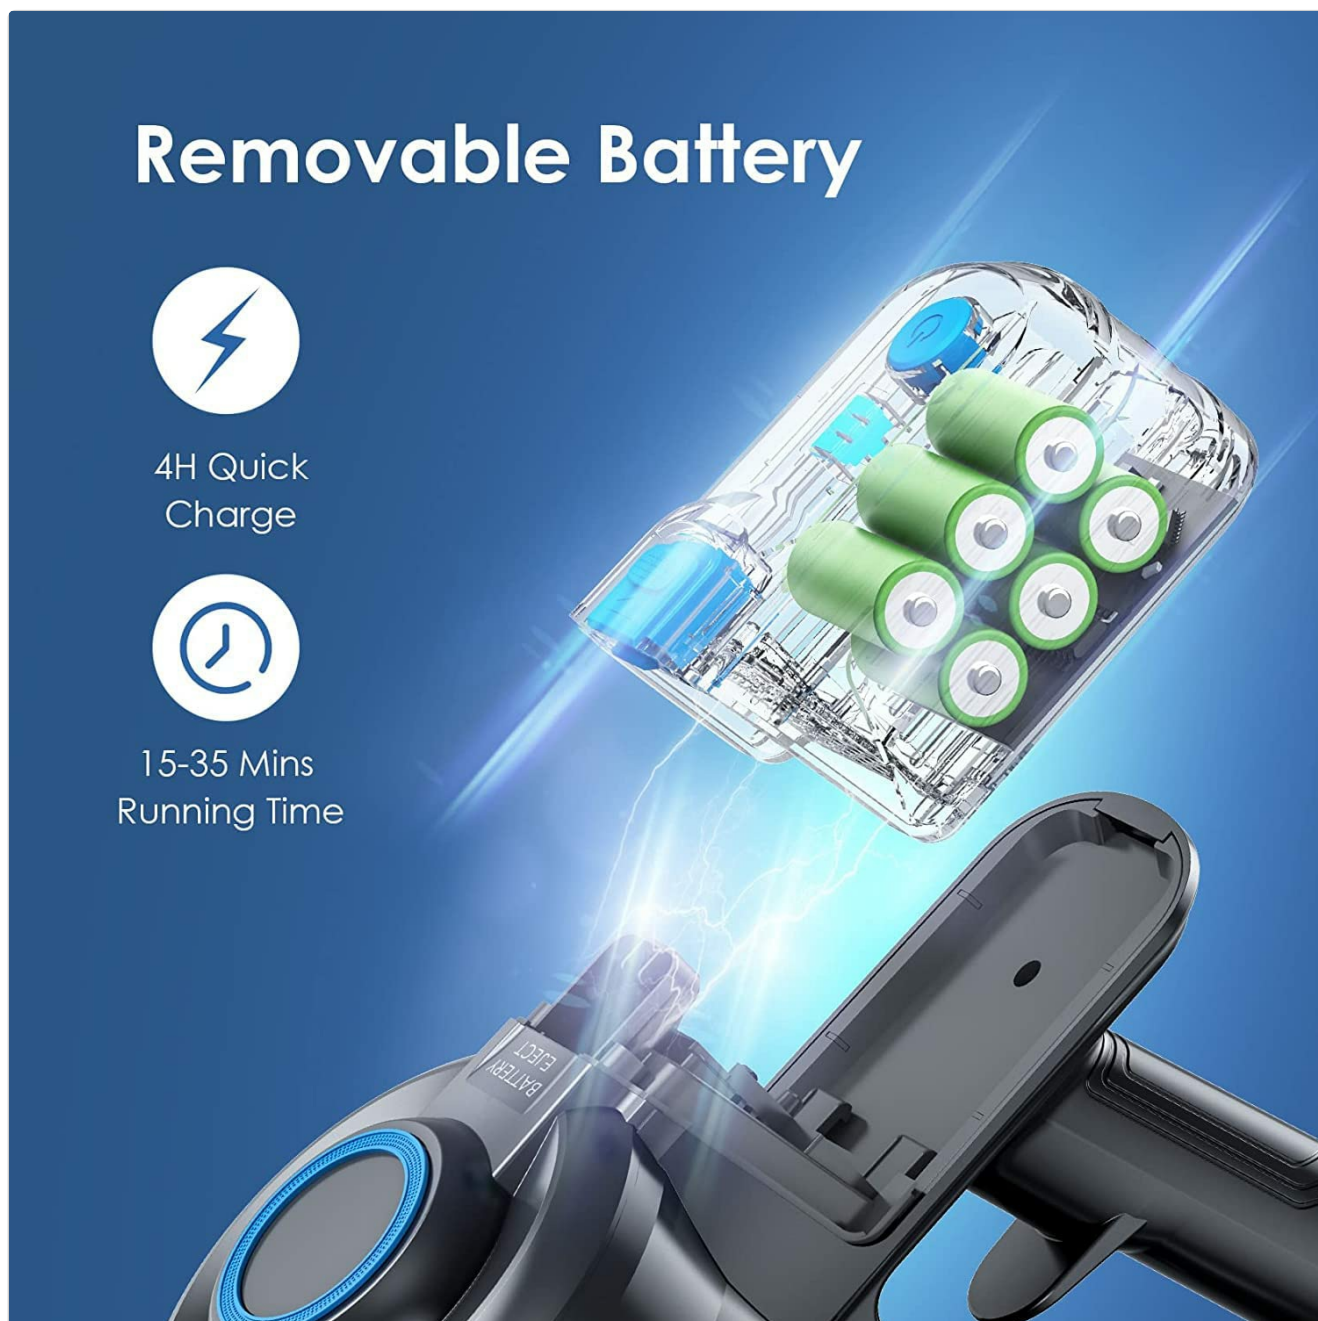


Figure 2: Illustration of the removable battery feature. This image shows the battery being inserted into or ejected from the main vacuum unit, highlighting its detachable nature and indicating quick charge and running time.

4. OPERATING INSTRUCTIONS

4.1. Charging the Battery

- Connect the Oraimo UltraCleaner S vacuum cleaner (with the battery installed) to its original charging adapter.
- Plug the adapter into a standard wall outlet.
- The LED indicators on the battery pack or vacuum cleaner will illuminate to show charging progress. A full charge typically takes approximately 4 hours.
- Once fully charged, disconnect the charger. Avoid overcharging for extended periods.

4.2. Battery Usage

- The battery provides power to the Oraimo UltraCleaner S vacuum cleaner. Running time varies between 15 to 35 minutes depending on the power mode selected (Standard or Strong).
- Monitor the LED indicators on the battery or vacuum to check the remaining charge during operation.
- When the battery level is low, the vacuum's performance will decrease, and the indicators will show a low charge status. Recharge the battery promptly.

5. MAINTENANCE AND STORAGE

- **Cleaning:** Wipe the battery pack with a dry, soft cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** If storing the battery for an extended period, charge it to approximately 50-60% capacity. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Long-Term Storage:** For optimal battery life, recharge the battery every 3-6 months if stored for long periods without use.
- **Disposal:** Do not dispose of the battery in household waste. Follow local regulations for proper disposal of lithium-ion batteries.

6. TROUBLESHOOTING

If you encounter issues with your Oraimo Detachable Stick Vacuum Battery, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Battery not charging	• Charger not properly connected. • Faulty charger or power outlet. • Battery not correctly inserted. • Battery fault.	• Ensure charger is securely plugged into both the vacuum and the wall outlet. • Test the charger with another device or try a different power outlet. • Remove and re-insert the battery, ensuring it clicks into place. • If the issue persists, the battery may need replacement.
Short operating time	• Battery not fully charged. • Operating in Strong mode continuously. • Battery degradation over time.	• Ensure the battery is fully charged before use. • Use Standard mode for longer cleaning sessions. • Battery capacity naturally decreases over its lifespan. Consider a replacement if performance is significantly reduced.

Problem	Possible Cause	Solution
Vacuum not turning on with battery	- Battery not charged. - Battery not properly installed. - Battery fault.	- Charge the battery fully. - Remove and re-install the battery, ensuring a secure connection. - If the vacuum works with another battery (if available) or directly connected to power (if applicable), the battery may be faulty.

7. SPECIFICATIONS

Brand	Oraimo
Model	OAS-BP-SV102
Compatible Vacuum Model	Oraimo UltraCleaner S (OSV-102)
Voltage	3.7 Volts
Product Dimensions (LxWxH)	11.6 x 9.1 x 8.4 Centimeters
Item Weight	400 g
Material	Other
Charging Time	Approximately 4 hours (Quick Charge)
Running Time	15-35 minutes (depending on mode)

8. WARRANTY AND SUPPORT

For warranty information and customer support regarding your Oraimo Detachable Stick Vacuum Battery, please refer to the documentation provided with your original Oraimo UltraCleaner S vacuum cleaner or visit the official Oraimo website. Please note that product support and availability of replacement parts may vary by region.

Note: Customer reviews indicate potential challenges in obtaining replacement batteries or direct customer service for this product. It is recommended to retain all purchase records and contact information for the seller or manufacturer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question