

[Manuals.plus](#) /

› [Muzen](#) /

› Muzen Wild Mini Portable Bluetooth Speaker Instruction Manual

Muzen MW-PVXI

Muzen Wild Mini Portable Bluetooth Speaker Instruction Manual

Model: MW-PVXI

1. INTRODUCTION

The Muzen Wild Mini is a compact, rugged, and waterproof portable Bluetooth speaker designed for outdoor use. It features Bluetooth 5.0 connectivity, a built-in flashlight with three modes, and delivers clear stereo sound. This manual provides instructions for its setup, operation, and maintenance to ensure optimal performance and longevity.



Image 1.1: Muzen Wild Mini Portable Bluetooth Speaker with accessories.

2. WHAT'S IN THE BOX

Please check the contents of your package. If any items are missing or damaged, contact customer support.

- 1 x Muzen Wild Mini Bluetooth Speaker (Model: MW-PVXI)
- 1 x USB Charging Cable
- 1 x Instruction Manual
- 1 x Gift Box (military locker-type protective case)

UNIQUE GIFT BOX WITH GIFT BAG



Image 2.1: Package contents of the Muzen Wild Mini.

3. PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your Muzen Wild Mini speaker.

FUNCTION DIAGRAM

Adapted to outdoor scenes



Image 3.1: Function Diagram of the Muzen Wild Mini.

- **Volume Control Knob:** Rotate to adjust audio volume.
- **Power/Bluetooth/Light Switch:** Controls power, Bluetooth pairing, and flashlight activation.
- **Play/Pause/Next Button:** Controls audio playback and track skipping.
- **Flashlight:** Integrated light source with multiple modes.
- **Full Sealed Charge Port:** USB-C port for charging, protected by a waterproof seal.
- **Sealed Speaker Port:** Ensures waterproof integrity.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. The built-in 800mAh lithium battery provides up to 8 hours of playback. A full charge typically takes 3 hours.

1. Locate the Full Sealed Charge Port on the speaker.

2. Open the protective seal.
3. Connect the provided USB charging cable to the speaker's charge port and a compatible USB power source (e.g., computer, wall adapter).
4. The power indicator light will show charging status. It will turn off or change color when fully charged.

Note: The speaker requires a standard USB-A to USB-C charging cable with a longer tip. USB-C to USB-C cables may not be compatible for charging.

4.2 Powering On/Off

- To power on, slide the Power/Bluetooth/Light switch to the "ON" position.
- To power off, slide the Power/Bluetooth/Light switch to the "OFF" position.

4.3 Bluetooth Pairing

The speaker utilizes Bluetooth 5.0 for quick and stable connections.

1. Ensure the speaker is powered on and within 10 meters (33 feet) of your device.
2. The speaker will automatically enter pairing mode, indicated by a flashing Bluetooth indicator light.
3. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
4. Select "Muzen Wild Mini" from the list of available devices.
5. Once connected, the Bluetooth indicator light will become solid, and you will hear a confirmation sound.

WIRELESS CONNECTIONS

Connects to your smartphone or tablet in seconds with a distance of up to 33 ft



1000mAh

33ft

33ft distance

99%

99% compatible

Image 4.1: Wireless connection via Bluetooth 5.0.

5. OPERATING INSTRUCTIONS

5.1 Audio Playback

- **Play/Pause:** Press the Play/Pause/Next button once to play or pause audio.
- **Next Track:** Press and hold the Play/Pause/Next button to skip to the next track.
- **Volume Adjustment:** Rotate the Volume Control Knob clockwise to increase volume and counter-clockwise to decrease volume.

5.2 Flashlight Operation

The integrated flashlight offers three modes for various outdoor situations.

1. With the speaker powered on, press the Power/Bluetooth/Light switch to cycle through flashlight modes.
2. The modes are: **High Brightness**, **Low Brightness**, and **SOS Signal**.

3. Pressing the switch again after SOS mode will turn the flashlight off.

OUTDOOR LIGHTING

Multifunctional speaker, the best outdoor equipment 3 Light Modes



Image 5.1: Outdoor lighting modes of the Muzen Wild Mini.

6. MAINTENANCE

6.1 Waterproof Features

The Muzen Wild Mini is IPX5 waterproof, meaning it is protected against water jets from any direction. This makes it suitable for use in various outdoor environments, including near water.

- Ensure the charging port's protective seal is securely closed when not charging to maintain waterproof integrity.
- Avoid submerging the speaker completely for extended periods.

IPX5 DEEP WATERPROOF

Perfect speaker for the beach,Sailing Camping,and Hiking



Image 6.1: Muzen Wild Mini demonstrating IPX5 deep waterproof capability.

6.2 Cleaning

To clean the speaker, use a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the speaker's finish or internal components.

7. TROUBLESHOOTING

If you encounter issues with your Muzen Wild Mini speaker, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Speaker does not power on	Low battery; Power switch in OFF position	Charge the speaker fully; Slide power switch to ON.

Problem	Possible Cause	Solution
Cannot connect via Bluetooth	Speaker not in pairing mode; Device Bluetooth off; Out of range	Ensure speaker is on and flashing; Enable Bluetooth on device; Move device closer to speaker (within 10m).
No sound or low volume	Volume too low on speaker or device; Paused playback	Increase volume on speaker and connected device; Press Play/Pause button.
Flashlight not working	Speaker off; Low battery	Ensure speaker is powered on; Charge the speaker.
Charging issues	Incorrect charging cable; Loose connection	Use the provided USB-A to USB-C cable; Ensure connections are secure. Note: USB-C to USB-C cables may not work.

8. SPECIFICATIONS

Detailed technical specifications for the Muzen Wild Mini Portable Bluetooth Speaker.

Feature	Specification
Model Name	Wild Mini
Model Number	MW-PVXI
Brand	Muzen
Speaker Type	Woofer
Wireless Technology	Bluetooth 5.0
Bluetooth Range	Up to 10 meters (33 feet)
Water Resistance Level	IPX5 (Waterproof)
Speaker Maximum Output Power	5 Watts
Audio Output Mode	Stereo
Signal-to-Noise Ratio	80 dB
Battery Capacity	800 Milliamp Hours
Charging Time	Approximately 3 Hours
Power Source	Battery Powered (1 A battery included)
Product Dimensions	1.26"D x 2.38"W x 2.9"H (3.2cm D x 6.0cm W x 7.4cm H)
Item Weight	248 Grams (8.7 ounces)
Material	Metal
Control Method	Push Button, Rotary Knob
Special Feature	Waterproof, Flashlight (3 modes)

Feature	Specification
Compatible Devices	Gaming Console, Laptop, Projector, Smartphone

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The Muzen Wild Mini Portable Bluetooth Speaker comes with a **One Year Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

9.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your Muzen Wild Mini speaker, please contact Muzen customer support through their official website or the retailer where the product was purchased. Please have your model number (MW-PVXI) and proof of purchase ready when contacting support.

© 2023 Muzen. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CM6M9W1H>

More documents and user manuals: <https://manuals.plus/>