

Garage Outlet GO10312025

Garage Outlet Keyless Keypad Door Opener User Manual

Model: GO10312025

INTRODUCTION

This manual provides comprehensive instructions for the installation, programming, operation, and maintenance of your Garage Outlet Keyless Keypad Door Opener. This aftermarket replacement keypad is designed for convenient keyless entry to your garage and is compatible with various Liftmaster, Chamberlain, and Craftsman garage door opener models, specifically those utilizing a purple learn button.

Compatible models include Liftmaster 1345, 1355, 1356, 3220, 3240, 3265, 3270, 3280, and Craftsman 139.53754.

PRODUCT FEATURES

- Backlit Keypad for enhanced visibility in low light conditions.
- Designed for compatibility with garage door openers featuring a Purple Learn Button.
- Compact dimensions: Approximately 6.25 inches (L) x 2.5 inches (W) x 1 inch (H).
- Aftermarket replacement unit.
- Includes step-by-step programming instructions.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Garage Outlet Keyless Keypad Door Opener
- 1 x 9V Lithium Metal Battery (pre-installed or separate)
- Mounting Screws and Anchors
- Instruction Manual





Image: The keypad unit shown with included mounting screws and wall anchors.

SETUP AND INSTALLATION

Before mounting, ensure the 9V battery is correctly installed in the keypad. The battery compartment is typically located on the back of the unit.





Image: Rear view of the keypad, highlighting the mounting points and battery access.

1. Choose a suitable location near your garage door, preferably out of direct sunlight and rain, but easily accessible.
2. Use the keypad as a template to mark the drilling locations for the mounting screws.
3. Drill pilot holes if necessary and insert the wall anchors.
4. Secure the keypad to the wall using the provided mounting screws.

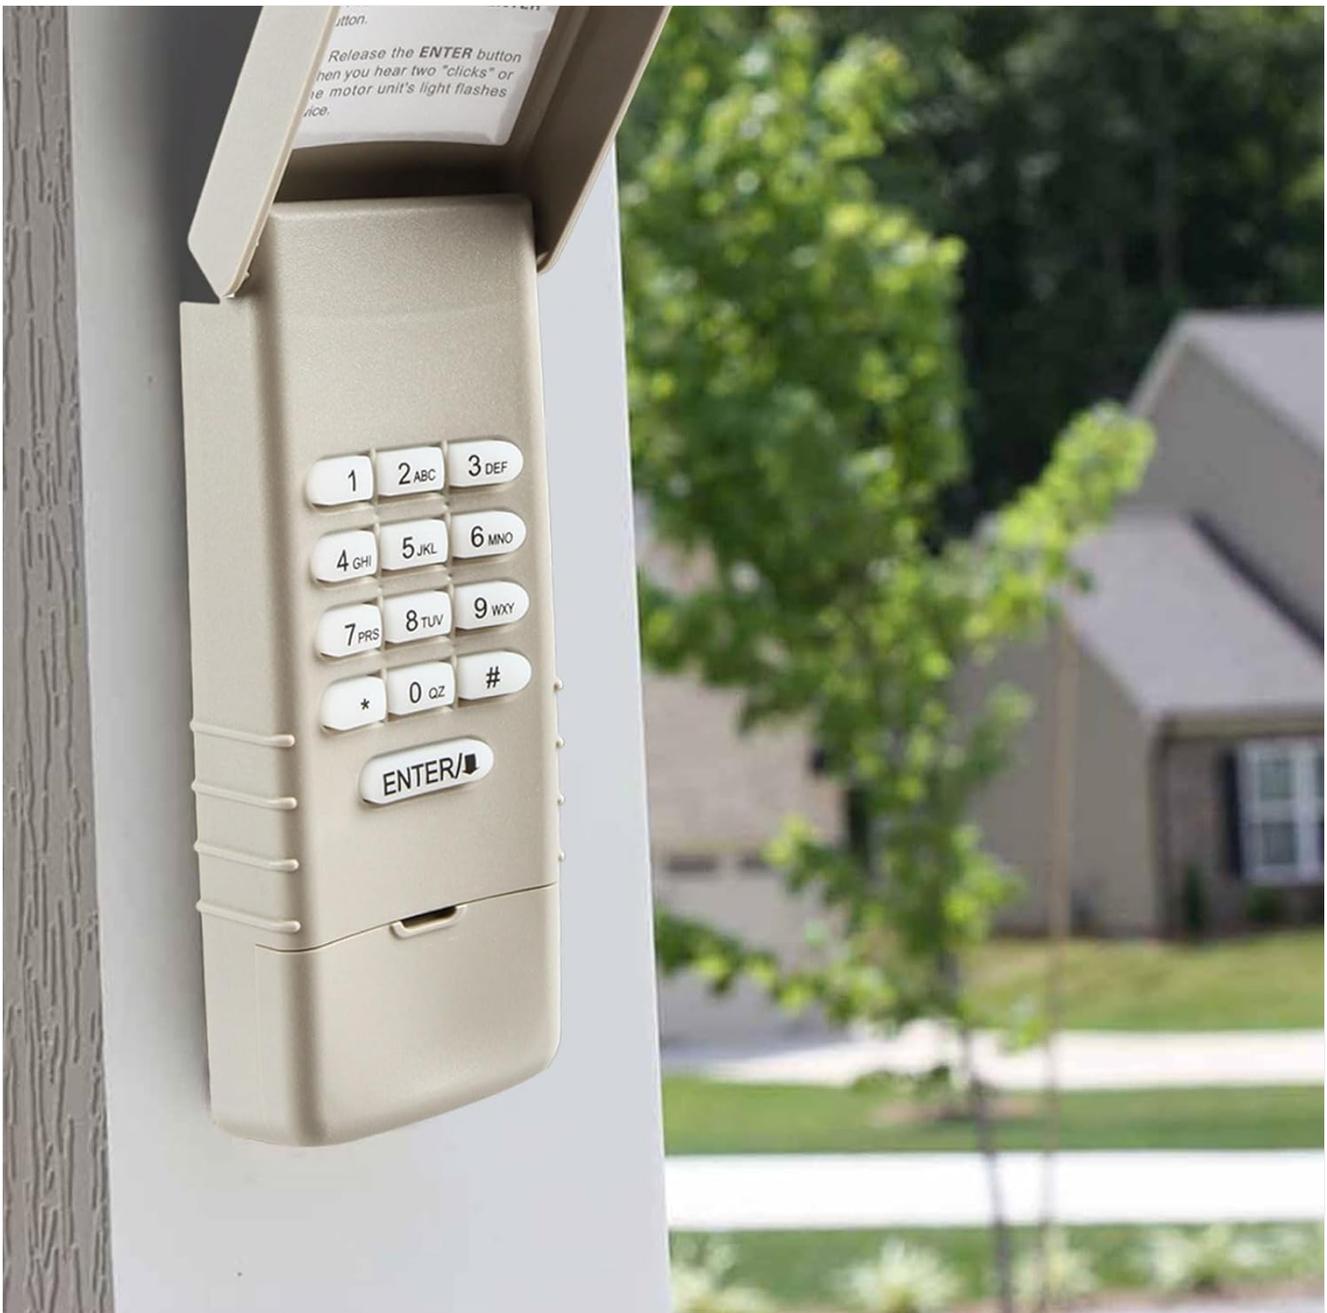



Image: The keypad installed on an exterior wall, demonstrating typical placement.

PROGRAMMING INSTRUCTIONS

This keypad is compatible with garage door openers that have a purple learn button. Please verify your opener's learn button color before proceeding.


2013 to present

Yellow Learn
Button

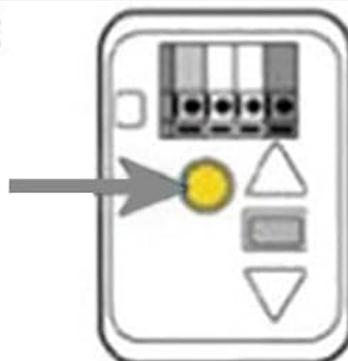


2006 to 2013

Purple Learn Button

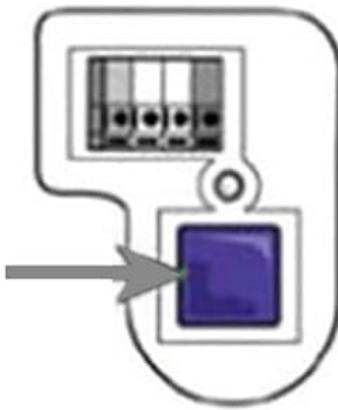


1997 to 2005

Red/Orange Button

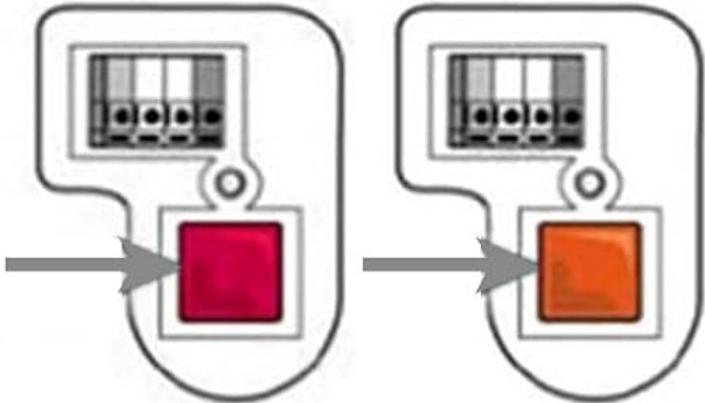

1992 to early 1997

Green Learn Button

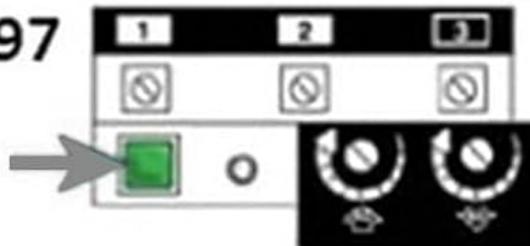

1984 to 1993

Dip Switch




Image: Compatibility chart for garage door opener learn buttons, emphasizing the purple button.

Programming Steps:


1. Step 1: Locate the Learn Button on your Garage Door Opener.

The learn button is typically found on the back or side panel of the garage door opener motor unit, usually near the antenna wire.


Programming instructions

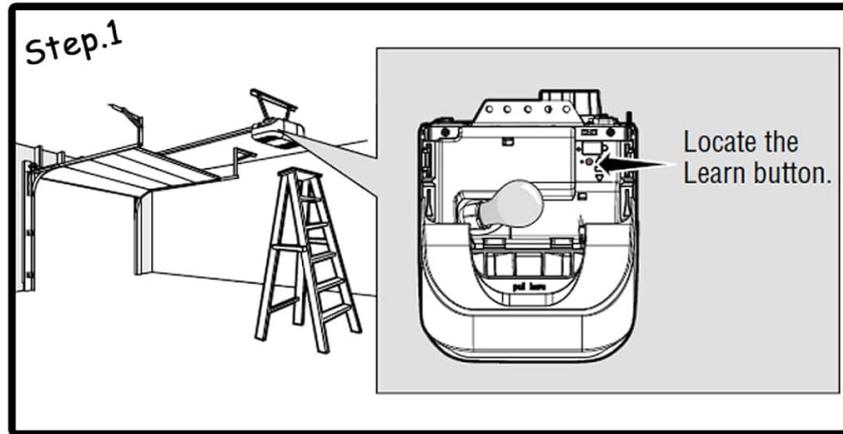

Locate the **Learn** button on the back of the monitor unit.

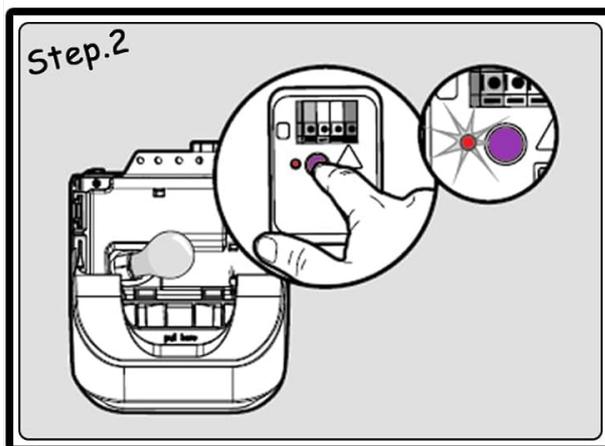

Press and release the **Learn** button. The light will illuminate for 30 seconds, indicating the unit is in programming mode.

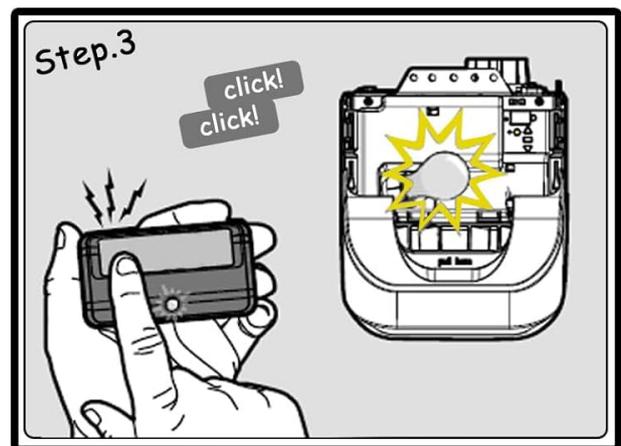

Press and hold the button you wish to program on the remote control. The motor unit will "click" or the light bulb will flash/turn off when the remote is successfully programmed.

Image: Visual guide for locating the learn button on the garage door opener.

2. Step 2: Activate Programming Mode on the Opener.

Press and immediately release the Learn button on your garage door opener. The light on the opener will illuminate for 30 seconds, indicating it is in programming mode.

3. Step 3: Program the Keypad.

Within 30 seconds of pressing the learn button on the opener, enter your desired 4-digit Personal Identification Number (PIN) on the keypad, then press and hold the **ENTER** button.

Release the **ENTER** button when you hear two "clicks" or when the garage door opener's light flashes. This confirms successful programming.

**HIGH QUALITY
REMOTE
TRANSMITTER**

Built in with long range antenna to transmit signals right to your garage door!

**WE OFFER
BIG SAVINGS**

We offer the lowest competitive prices on the market to match your budget!

**BONUS ADDITIONAL
SAVINGS WITH
EASY DIY**

We provide our customers with an Easy self installation package!

SHOP NOW

Image: Step-by-step visual instructions for programming the keypad.

If programming is unsuccessful, repeat the steps, ensuring you complete the process within the 30-second window.

OPERATING INSTRUCTIONS

To operate your garage door using the keypad:

1. Enter your programmed 4-digit PIN.
2. Press the **ENTER** button.

The garage door will activate. The keypad is backlit for easy use in the dark.

MAINTENANCE

Battery Replacement:

The keypad is powered by a 9V Lithium Metal battery. If the keypad's backlight dims or the unit becomes unresponsive, it may be time to replace the battery. Access the battery compartment on the back of the unit, replace the old battery with a new 9V Lithium Metal battery, and re-secure the cover.

Cleaning:

Wipe the keypad surface with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish or internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Keypad does not respond or backlight is dim.	Low or dead battery.	Replace the 9V Lithium Metal battery.
Keypad does not program to opener.	Incorrect learn button color; programming window expired; incorrect steps followed.	Ensure your opener has a purple learn button. Repeat programming steps carefully, ensuring all steps are completed within 30 seconds.
Poor operating range.	Interference; weak battery; keypad too far from opener.	Check for sources of interference. Replace battery. Ensure keypad is mounted within reasonable range of the garage door opener.
Garage door does not open/close after programming.	Programming not successful.	Repeat the programming steps. Ensure the opener's light flashes or clicks are heard, indicating successful pairing.

SPECIFICATIONS

Manufacturer	Garage Outlet
Part Number	GO10312025
Item Weight	3 ounces
Package Dimensions	6.22 x 2.95 x 1.38 inches
Item Model Number	GO10312025
Batteries	1 Lithium Metal battery required (included)
Color	Keypad (Beige/Tan)
Item Package Quantity	1

WARRANTY AND SUPPORT

This product is an aftermarket replacement item provided by Garage Outlet. Each item includes step-by-step instructions for installation and programming.

For technical assistance or inquiries, Garage Outlet offers support. Please refer to the contact information provided with your purchase or visit the official Garage Outlet store on Amazon for further details.

The standard return policy allows for refund or replacement within 30 days of purchase.



Program Videos



Live Chat Available

Technical Support

Image: Keypad packaging highlighting available support resources.