

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime Hello Kitty Pastel Pink Glitter LED Wrist Watch User Manual

Accutime HK4168AZ

Accutime Hello Kitty Pastel Pink Glitter LED Wrist Watch User Manual

Model: HK4168AZ

1. INTRODUCTION

This manual provides essential information for the proper use and care of your Accutime Hello Kitty Pastel Pink Glitter LED Wrist Watch. Please read this manual thoroughly before using the watch to ensure optimal performance and longevity.



Image 1: Accutime Hello Kitty branding. This image displays the Accutime Watch Corporation logo alongside a colorful Hello Kitty banner, indicating the official licensing of the product.

2. SAFETY INFORMATION

- **Small Parts:** This watch contains small parts and is not suitable for children under 3 years old due to choking hazards.
- **Water Resistance:** This watch is designed for everyday wear but is *not* waterproof. Avoid submerging it in water, showering, or swimming while wearing the watch.
- **Battery Safety:** Do not attempt to open the battery compartment or replace the battery yourself unless specifically instructed. Improper handling can damage the watch or cause injury.
- **Cleaning:** Use a soft, dry cloth for cleaning. Avoid harsh chemicals or abrasive materials.

3. PRODUCT OVERVIEW

The Accutime Hello Kitty LED Wrist Watch features a clear digital display and a durable, glittery strap. Familiarize yourself with the main components:

- **Display:** LCD screen showing time.
- **Case:** The main body of the watch, housing the display and internal components.
- **Strap:** Adjustable band for securing the watch to the wrist.
- **Buttons:** Typically two buttons on the side for setting time and changing display modes. (Specific button functions detailed in "Operating" section).
- **Buckle:** For fastening the strap.



Image 2: Front view of the Hello Kitty watch. This image shows the watch face with a Hello Kitty illustration, the digital time display, and the glittery pink case and strap.



Image 3: Side view of the Hello Kitty watch. This image highlights the profile of the watch, showing the thickness of the case and the texture of the glittery strap.

4. SETUP

4.1 Initial Activation

Your watch may come with a small plastic tab in the crown or between the buttons to preserve battery life. Remove this tab before first use. The display should light up.

4.2 Setting the Time

Setting the time on your LED watch requires careful attention to the buttons. There are typically two buttons on the side of the watch. For this model, let's refer to them as Button A (top) and Button B (bottom).

1. **Enter Setting Mode:** Press Button B repeatedly until the *hours* digit starts flashing.
2. **Adjust Hours:** While the hours digit is flashing, press Button A to advance the hour. Cycle through 12-hour or 24-hour format as needed.
3. **Set Minutes:** Once the hour is set, press Button B again. The *minutes* digit will start flashing.
4. **Adjust Minutes:** While the minutes digit is flashing, press Button A to advance the minute.
5. **Exit Setting Mode:** Press Button B one more time to confirm the settings and exit the setting mode. The display will stop flashing.

***Note:** If the display turns off during setting, press Button B to reactivate it and re-enter setting mode if necessary. Some models may require holding a button to enter setting mode. If the above steps do not work, try holding Button B for 3-5 seconds to enter setting mode.*

5. OPERATING

5.1 Displaying the Time

To view the time, simply press Button A once. The LED display will illuminate for a few seconds, showing the current time, then turn off to conserve battery.

5.2 Changing Display Modes (if applicable)

Some models may offer additional display modes such as date or seconds. To cycle through these modes:

1. Press Button A to activate the display.
2. While the display is active, press Button A repeatedly to cycle through Time, Date, and Seconds (if available).

6. MAINTENANCE

6.1 Cleaning Your Watch

To keep your watch looking its best:

- Wipe the watch case and strap with a soft, slightly damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or the internal components.
- Ensure the watch is completely dry before wearing it again.

6.2 Battery Replacement

The watch uses a standard watch battery. When the display becomes dim or stops working, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to avoid damaging the watch's internal components or compromising its water resistance (if any). Refer to the specifications for battery type.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch display is blank.	Battery is dead or low. Plastic tab not removed.	Press Button A to activate. Remove plastic tab if present. Replace battery (professional service recommended).
Cannot set the time.	Not in setting mode. Incorrect button sequence.	Refer to Section 4.2 "Setting the Time" for detailed instructions. Ensure you are pressing the correct buttons in sequence. Try holding Button B for 3-5 seconds to enter setting mode.
Display is dim.	Low battery.	Replace battery.
Watch is not keeping accurate time.	Low battery. Internal malfunction.	Replace battery. If problem persists, contact customer support.

8. SPECIFICATIONS

- **Model Number:** HK4168AZ
- **Display Type:** LED Digital
- **Case Material:** Plastic
- **Strap Material:** Silicone/Plastic with Glitter
- **Power Source:** Button Cell Battery (Type typically SR626SW or similar, consult watch back for exact type)
- **Dimensions:** Approximately 3.98 x 3.23 x 3.19 inches (Package Dimensions)
- **Weight:** Approximately 3.92 ounces
- **Water Resistance:** Not specified as waterproof; generally splash-resistant for LED watches. Avoid submersion.
- **Manufacturer:** Accutime Watch Corp.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Accutime Watch Corp. directly. Details are typically provided with your purchase documentation or on the manufacturer's official website.

Accutime Customer Service:

Website: www.accutime.com (Please check the official Accutime website for the most current contact information.)

Email/Phone: Refer to the website for specific contact methods.

Please have your model number (HK4168AZ) and purchase date ready when contacting support.

© 2025 Accutime Watch Corp. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CM729ZST>

More documents and user manuals: <https://manuals.plus/>