

[Manuals.plus](#) /

> [Accutime](#) /

> Accutime Barbie Glitter Analog Watch User Manual

Accutime BAR5017AZ

Accutime Barbie Glitter Analog Watch User Manual

Model: BAR5017AZ

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Accutime Barbie Glitter Analog Watch. Designed for young fashion enthusiasts, this timepiece combines a sparkling aesthetic with reliable timekeeping. Please read this manual thoroughly to ensure proper use and longevity of your watch.





Image: Front view of the Accutime Barbie Glitter Analog Watch, showcasing the pink glitter dial, silver Barbie logo and silhouette, Roman numeral markers, and pink crystal-studded bezel. The watch has a bright pink strap.

SETUP

1. Setting the Time

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown outwards until you feel a click. This is the time-setting position.
3. Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
4. Once the time is set, push the crown back into its original position to start the watch movement.



Image: Side view of the watch, highlighting the crown used for setting the time. The pink strap and silver case are also visible.

2. Adjusting the Strap

The watch features an adjustable pink strap designed to fit wrist sizes from 5.5" to 8".

- Place the watch on your wrist.
- Thread the end of the strap through the buckle.
- Select the hole that provides a comfortable and secure fit without being too tight or too loose.
- Secure the strap by inserting the buckle pin into the chosen hole.

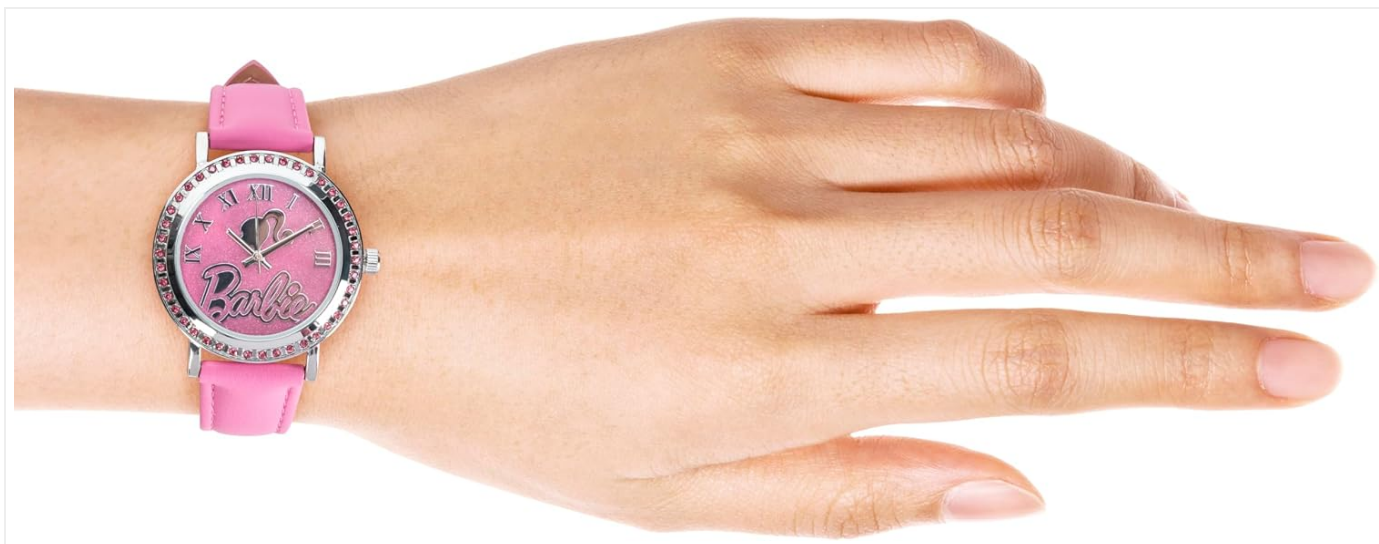


Image: The Accutime Barbie Glitter Analog Watch worn on a wrist, demonstrating how the strap fits and the overall appearance when worn.

OPERATING THE WATCH

Your Accutime Barbie Glitter Analog Watch is designed for simple and reliable timekeeping.

Reading the Time

The watch displays time using three hands:

- The **hour hand** (shorter) indicates the hour.
- The **minute hand** (longer) indicates the minutes.
- The **second hand** (thinnest) indicates the seconds.

The Roman numeral markers on the dial correspond to the hours, making it easy to read the time.

MAINTENANCE

To ensure the longevity and optimal performance of your Accutime Barbie Glitter Analog Watch, follow these maintenance guidelines:

- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** This watch is not designed for water immersion. Avoid exposing it to water, including showering, swimming, or heavy rain, to prevent damage to the internal components.
- **Temperature:** Protect the watch from extreme temperatures (hot or cold) and sudden temperature changes, as these can affect the battery life and accuracy of the movement.
- **Storage:** When not in use, store the watch in its original gift box or a soft pouch to protect it from scratches and impacts.
- **Battery Replacement:** The watch is powered by a standard watch battery. When the watch stops or runs slowly, it indicates that the battery needs replacement. It is recommended to have the battery replaced by a qualified watch technician to avoid damaging the watch.



Image: The Accutime Barbie Glitter Analog Watch presented in its official pink Barbie gift box, suitable for storage or gifting.

TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Watch not running or running slowly	Depleted battery	Replace the battery (recommended by a professional).
Time is incorrect	Crown is not fully pushed in after setting time	Ensure the crown is fully pushed into the watch case. Reset the time if necessary.
Strap feels uncomfortable or too loose/tight	Incorrect strap adjustment	Adjust the strap to a different hole for a more comfortable fit.

If the issue persists after attempting these solutions, please contact customer support for further assistance.

SPECIFICATIONS

- Brand:** Accutime
- Model Number:** BAR5017AZ
- Product Type:** Analog Watch
- Dial Color:** Pink Glitter
- Strap Material:** Pink (Leather-like)
- Bezel:** Silver-tone with Pink Crystal Stones
- Markers:** Roman Numerals
- Wrist Fit:** 5.5" - 8"
- Package Dimensions:** 4.25 x 2.95 x 2.64 inches
- Item Weight:** 5.11 ounces
- Manufacturer:** Accutime Watch Corp.

WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the documentation included with your purchase or visit the official Accutime website. Keep your proof of purchase for any warranty claims.

Manufacturer: Accutime Watch Corp.

For further assistance, please contact Accutime customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CM7L7D5M>

More documents and user manuals: **<https://manuals.plus/>**